

Service
Service
Service



Service Manual



TABLE OF CONTENTS

Handling chip components 1-1
 Leadfree and safety information 1-2

Technical specification 2-1
 Service tools 2-1
 Service measurement setup 2-2

Connections and controls 3-1... 3-5

Software version check and upgrading 4-1

Block diagram 5-1
 Wiring diagram 6-1

VFD Board
 circuit diagram 7-1
 layout diagram 7-2

Tuner Board
 circuit diagram 8-1
 layout diagram 8-2

AMP Board
 circuit diagram 9-1... 9-2
 layout diagram 9-3

CPU Board
 circuit diagram 10-1
 layout diagram 10-2... 10-3

Power Board
 circuit diagram 11-1
 layout diagram 11-2

DVD MPEG Board
 circuit diagram 12-1... 12-3
 layout diagram 12-4

Exploded view diagram 13-1

Partslist 14-1... 14-6


Disassembly diagram 15-1

Version list 16-1

© Copyright 2006 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
 All rights reserved. No part of this publication may be reproduced, stored in a retrieval
 system or transmitted, in any form or by any means, electronic, mechanical, photocopying,
 or otherwise without the prior permission of Philips.



HANDLING CHIP COMPONENTS

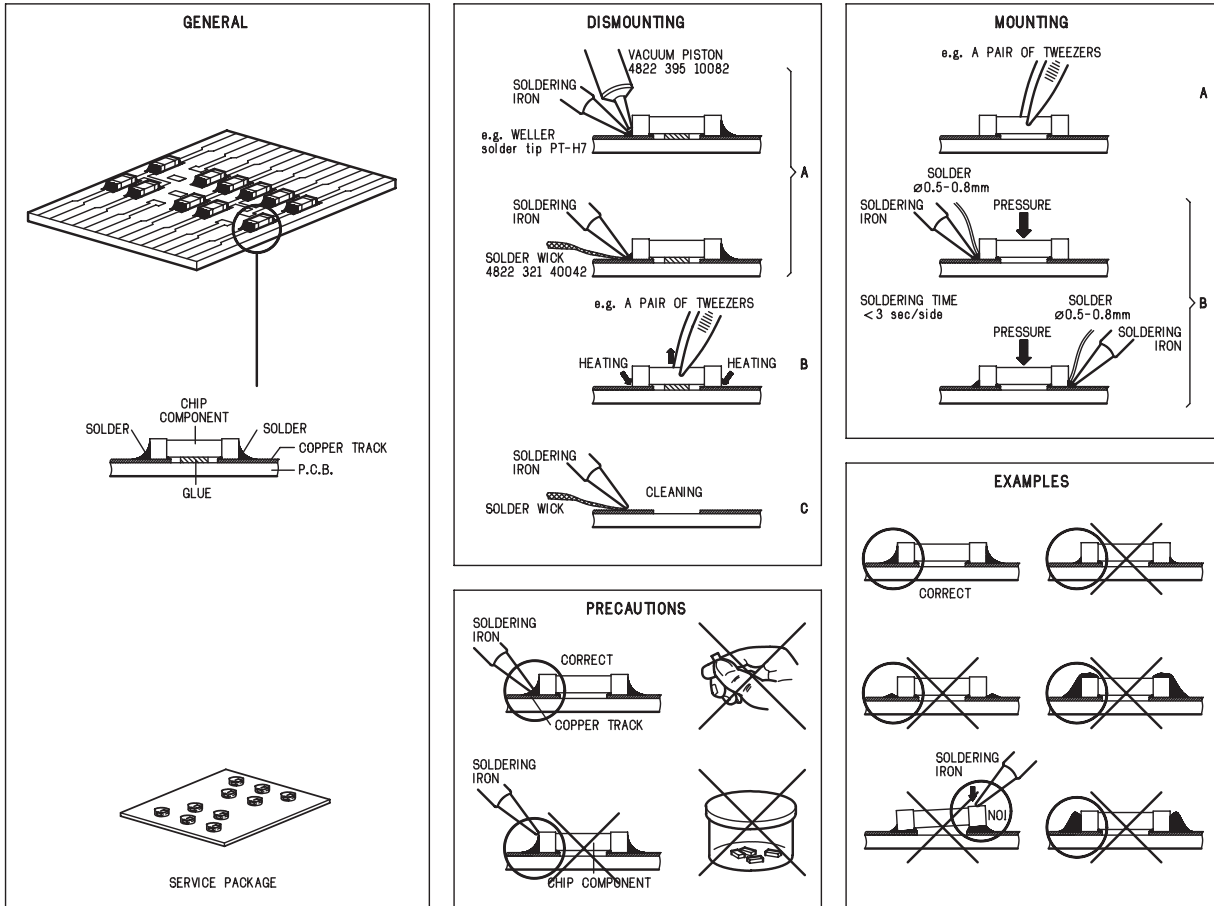

(GB) WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

ESD



(NL) WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet seré d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unvorsichtige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Sorgen Sie dafür, daß Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind. Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used. Safety components are marked by the symbol

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées. Les composants de sécurité sont marqués

SAFETY



(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden. Sicherheitsbauteile sind durch das Symbol markiert.

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool

(I)

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati. Componenti di sicurezza sono marcati con

(GB)

DANGER: Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

(S)

Varning! Osynlig laserstråling när apparaten är öppnad och spårren är urkopplad. Betrakta ej strålen.

(DK)

Advarsel! Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.



(FIN)

Varoitus! Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkömättömälle laserisäteilylle. Älä katso säteeseen!

(GB)

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists. The leakage current must not exceed 0.5mA.

(F)

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

INFORMATION ABOUT LEAD-FREE SOLDERING

Philips CE is producing lead-free sets from 1.1.2005 onwards.

IDENTIFICATION:

Regardless of special logo (not always indicated) one must treat all sets from 1 Jan 2005 onwards, according next rules:



Example S/N:



Bottom line of typeplate gives a 14-digit S/N. Digit 5&6 is the year, digit 7&8 is the week number, so in this case 2005 wk12

So from 0501 onwards = from 1 Jan 2005 onwards

Important note: In fact also products of year 2004 must be treated in this way as long as you avoid mixing solder-alloys (leaded/ lead-free). So best to always use SAC305 and the higher temperatures belong to this.

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free solder alloy Philips SAC305 with order code 0622 149 00106. If lead-free solder-paste is required, please contact the manufacturer of your solder-equipment. In general use of solder-paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free solder alloy. The solder tool must be able
 - To reach at least a solder-temperature of 400°C,
 - To stabilize the adjusted temperature at the solder-tip
 - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature around 360°C – 380°C is reached and stabilized at the solder joint. Heating-time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C otherwise wear-out of tips will rise drastically and flux-fluid will be destroyed. To avoid wear-out of tips switch off un-used equipment, or reduce heat.
- Mix of lead-free solder alloy / parts with leaded solder alloy / parts is possible but PHILIPS recommends strongly to avoid mixed solder alloy types (leaded and lead-free).
If one cannot avoid or does not know whether product is lead-free, clean carefully the solder-joint from old solder alloy and re-solder with new solder alloy (SAC305).
- Use only original spare-parts listed in the Service-Manuals. Not listed standard-material (commodities) has to be purchased at external companies.
- **Special information for BGA-ICs:**
 - always use the 12nc-recognizable soldering temperature profile of the specific BGA (for de-soldering always use the lead-free temperature profile, in case of doubt)
 - lead free BGA-ICs will be delivered in so-called 'dry-packaging' (sealed pack including a silica gel pack) to protect the IC against moisture. After opening, dependent of MSL-level seen on indicator-label in the bag, the BGA-IC possibly still has to be baked dry. (MSL=Moisture Sensitivity Level). This will be communicated via AYS-website. Do not re-use BGAs at all.
- For sets produced before 1.1.2005 (except products of 2004), containing leaded solder-alloy and components, all needed spare-parts will be available till the end of the service-period. For repair of such sets nothing changes.
- On our website www.atyourservice.ce.Philips.com you find more information to:
 - BGA-de-/soldering (+ baking instructions)
 - Heating-profiles of BGAs and other ICs used in Philips-sets

You will find this and more technical information within the "magazine", chapter "workshop news".

For additional questions please contact your local repair-helpdesk.

SERVICE INSTRUCTION

Safety regulations require that after a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the AC Power lead for external damage.
- Check the strain relief of the AC Power cord for proper function.
- Check the electrical DC resistance between the AC Power Plug and the secondary side (only for sets which have a AC Power isolated power supply):
 1. Unplug the AC Power cord and connect a wire between the two pins of the AC Power plug.
 2. Set the AC Power switch to the "on" position (keep the AC Power cord unplugged!).
 3. Measure the resistance value between the pins of the AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be larger than 4.5 Mohm (For U.S. it should be between 4.2 Mohm and 12 Mohm).
 4. Switch "off" the set, and remove the wire between the two pins of the AC Power plug.
- Check the cabinet for defects, to avoid touching of any inner parts by the customer.

TECHNICAL SPECIFICATIONS

SYSTEM

Power supply -/93	220V / 50 Hz
Power supply -/98	110 – 127 / 220 – 240V; 50/60 Hz Switchable
Rated working power consumption (1/8 rated output power)	≤ 70W
AUX input sensitivity	≤ 350mV
Channel Separation	≥ 40dB
Distortion	0.7%

DVD

Frequency response 100Hz-20kHz (+0.5/-2 dB)	
Video output	1 V _{P-P}
Horizontal definition	500 (TV)
Dimensions	240 (W) x 75 (H) x 230 (D) mm
Weight	1.87 kg

AMPLIFIER

Rated output power (THD = 10%)	2x25W (8 Ω)
Frequency response 100Hz-20kHz (+0.5/-2 dB)	
S/N Ratio	≥ 60dB
Loaded impedance	8 Ω
Dimensions	240 (W) x 75 (H) x 230 (D) mm
Weight	3.47 kg

TUNER

FM Frequency range	87.5-108 MHz
FM Noise limit sensitivity	≤ 20μ V/M
FM S/N	≥ 46dB
MW wave range	531 – 1602 kHz
MW Noise limit sensitivity	≤ 3.0μ V/m
MW S/N	≥ 40dB

SPEAKER

Front Speakers

Impedance	8 Ω
Input power	35W
Sensitivity	80 ± 4dB
Frequency response	80Hz-16kHz
Dimensions .	145 (W) x 230 (H) x 218 (D) mm
Weight	2.4 kg each

Subwoofer

Subwoofer (not magnetically shielded design)	6.5"
Impedance	8 Ω
Input power	50W
Dimensions (w x h x d)	180 mm x 280 mm x 330 mm
Weight	4.4 kg

REMOTE

Distance	6m
Angle	± 30°

Specifications subject to change without prior notice

SERVICE TOOLS


TORX T10 screwdriver with shaftlength 150mm.....	4822 395 50423
TORX screwdriver set SBC 163.....	4822 295 50145
Audio signal disc SBC 429.....	4822 397 30184
Playability test disc SBC 444.....	4822 397 30245
Test disc 5 (disc without errors) +	
Test disc 5A (disc with dropout errors, black spots and fingerprints)	
SBC 426/426A.....	4822 397 30096
Burn in test disc (65 min. 1kHz signal at -30 dB level without "pause").....	4822 397 30155
Universal test cassette Fe SBC 420.....	4822 397 30071

AVAILABLE ESD PROTECTION EQUIPMENT

anti-static table mat large 1200x650x1.25mm	4822 466 10953
small 600x650x1.25mm	4822 466 10958
anti-static wristband	4822 395 10223
connection box (3 press stud connections, 1MΩ)	4822 320 11307
extendible cable (2m, 2MΩ, to connect wristband to connection box)	4822 320 11305
connecting cable (3m, 2MΩ, to connect table mat to connection box)	4822 320 11306
earth cable (1MΩ, to connect any product to mat or to connection box)	4822 320 11308
KIT ESD3 (combining all 6 prior products - small table mat)	4822 310 10671
wristband tester	4822 344 13999


SERVICE MEASUREMENT

Tuner FW

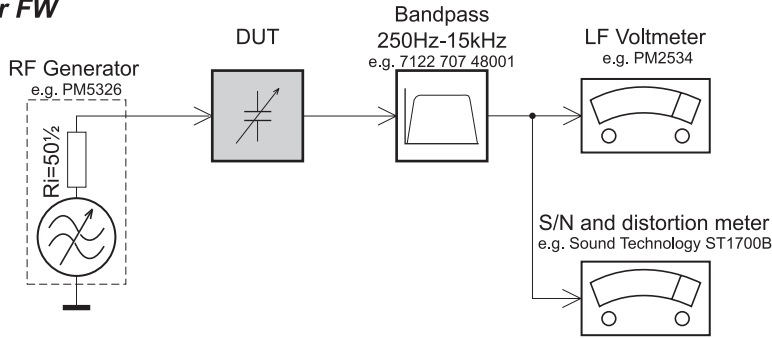

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW,LW)

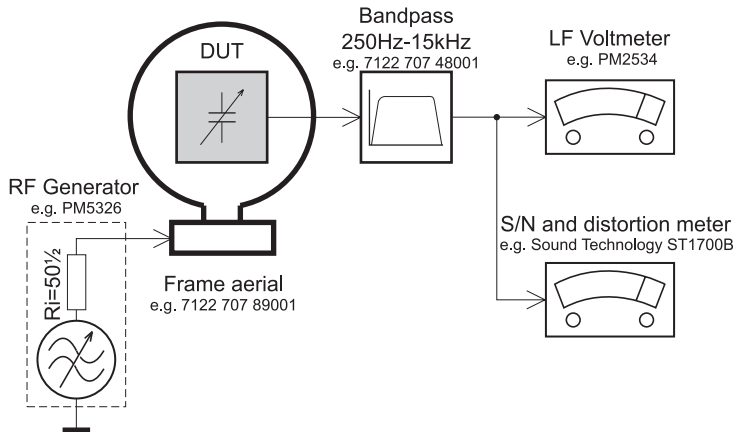

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday«s cage. Use a bandpass filter (or at least a high pass filter with 250kHz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184
(replaces test disc 3)

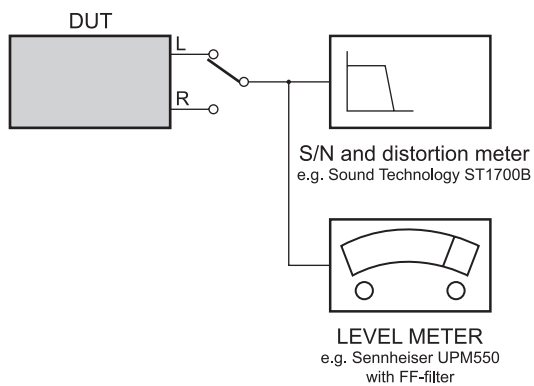


RECORDER

Use Universal Test Cassette Fe SBC420 4822 397 30071

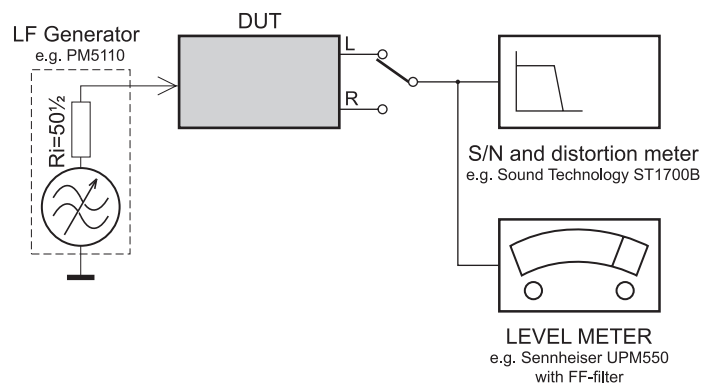

Functional Overview

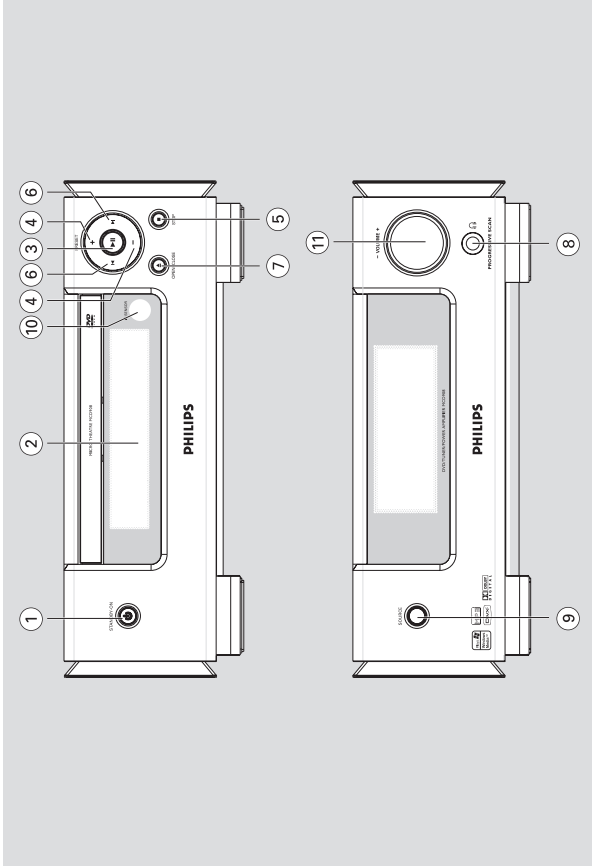


DVD player and power amplifier

- 1 **STANDBY-ON** - switches the system on or to standby mode.
- 2 **Display** - shows the current status of the DVD player.
- 3 **▶ ||** - starts or interrupts disc playback.
- 4 **PRESET +/-** - in tuner mode, selects a preset radio station.
- 5 **STOP** ■ - stops disc playback or erases a program.
- in Demo mode (on the system only), activates/deactivates the demonstration.
- 6 **◀▶** - skips to the previous/next chapter/title/track.
- Disc:** - skips to a higher/lower radio frequency.
press and hold, then release the key to start automatic search for a radio frequency downward/upward.
- Tuner:** -

Functional Overview

- 4 **PROG** - DVD/VCD/CD: enters the program menu.
MP3/WMA-CD: adds/deletes a programmed track to/from the program list.
Picture CD: during playback, to select a slide show mode.
- Tuner: programs preset radio stations.
- 5 **GOTO** - Disc: fast searches in a disc by entering a time, title, chapter or track.
- 6 **SYSTEM (disc mode only)** - enters or exits the system menu.
- 7 **DISC MENU (disc mode only)** - DVD/VCD: enters or exits the disc contents menu.
- VCD2.0: switches the playback control mode on or off.
- MP3/WMA: switches between Album and Filelist.
- 8 **◂ / ▸ / ▶ / ◃** - selects an item in a menu.
- moves an enlarged picture up/down/left/right.
- 9 **OK** - confirms a selection.
- 10 **ZOOM** - DVD/VCD/Picture CD: enlarges or reduces a picture or active image on the TV screen.
- 11 **MUTE** - disables or enables sound output.
- 12 **◀◀ / ▶▶** - Tuner
press to tune to a lower/higher radio frequency gradually.
press and hold, then release the key to start automatic search for a radio frequency downward/upward.
- Disc** - searches backward/forward in a disc at different speeds.


- Remote control**
- 1 - switches the system on or to standby mode.
- 2 - opens or closes the disc compartment
- 3 **Numeric Keypad (0-9)** - inputs a track/title/chapter number of the disc.

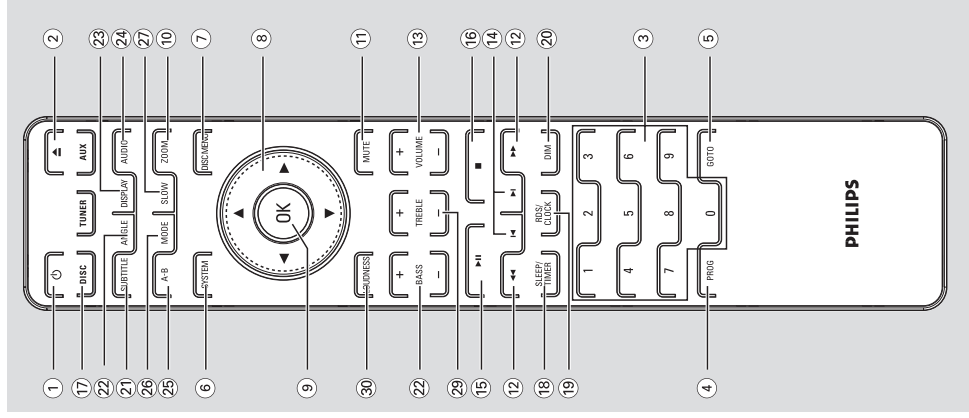

Functional Overview

- 18 **VOLUME +/-**
 - adjusts the volume upward/downward.
 - adjusts the hours and minutes in clock/timer setting mode.
 - switches the set timer: ON or OFF.
- 14 ◀ / ▶
 - Disc: skips to the previous/next chapter/title/track
 - Tuner: selects a preset radio station.
- 15 ▶ II
 - starts or interrupts disc playback
- 16 ■
 - stops disc playback or erases a program.
- 17 **DISC/TUNER/AUX**
 - selects the respective sound source for DVD/AUX/TUNER (FM/MW).
 - For tuner (TUNER): press to switch between MW and FM
 - exits P-SCAN (progressive scan). (Only for DISC)
- 18 **SLEEP/TIMER**
 - Standby mode
 - sets time for switching on the system automatically.
 - Power-on mode
 - sets the sleep timer function (auto off).
- 19 **RDS/CLOCK (RDS function unavailable for this version)**
 - Standby mode
 - sets the system clock.
 - Playback mode
 - displays the system clock.
- 20 **DIM**
 - selects different levels of brightness for the display screen.
- 21 **SUBTITLE**
 - selects a subtitle language.
- 22 **ANGLE**
 - selects a DVD camera angle.
- 23 **DISPLAY**
 - displays information on TV screen during playback


Connections

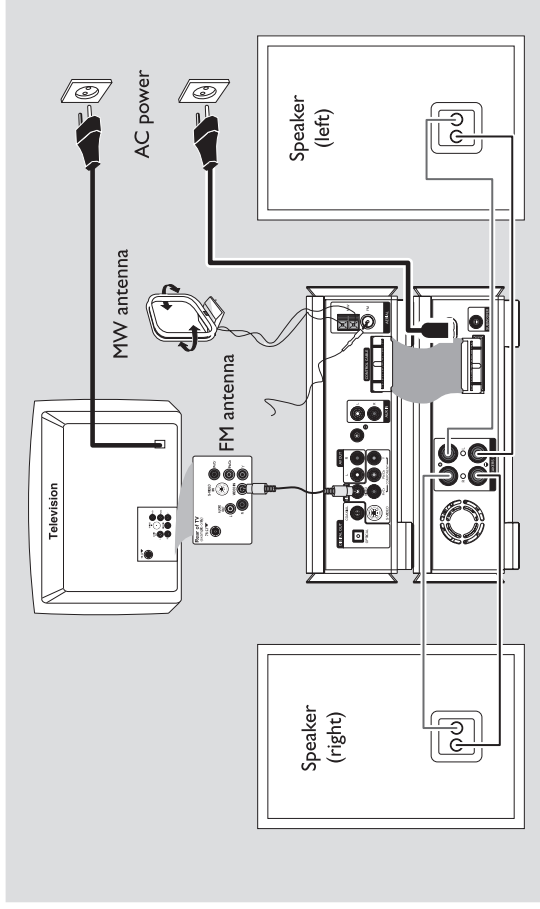

IMPORTANT!

- The type plate is located at the bottom of the system.
- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.
- Never make or change any connections with the power switched on.

Step 1: Placing the speakers

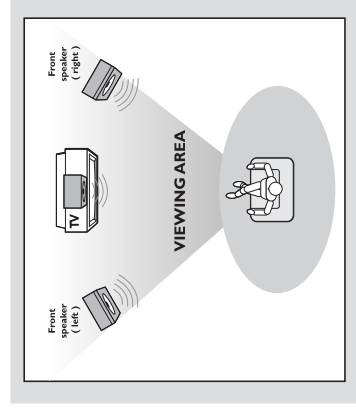

- Place the front left and right speakers at equal distances from the TV set and at an angle of approximately 45 degrees from the listening position.

Notes:


- To avoid magnetic interference, do not position the front speakers too close to your TV set.
- Allow adequate ventilation around the DVD System.

Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (▶ II, ◀, ▶) for example).

Step 2: Connecting speakers

- Connect the left and right speakers to the SPEAKERS (4?) terminals on the back of the power amplifier with the supplied speaker cables. Right speaker to "R" and left speaker to "L"; red wire to "+" and silver wire to "-". Fully insert the stripped portion of the speaker wire into the terminal as shown.

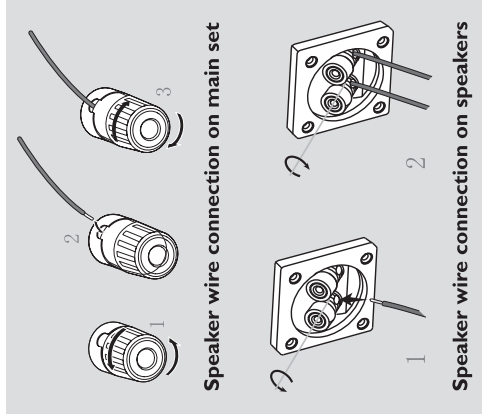

Notes:

- Ensure that the speaker cables are correctly connected. Improper connections may damage the system due to short-circuit.
- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker jacks.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Step 3: Connecting the control cable


- Connect the serial port marked "CONTROL CABLE" at the rear of the DVD player to the same port at the rear of the power amplifier with the supplied flat control cable.

Step 4: Connecting TV

IMPORTANT!

- You only need to make one video connection from the following options, depending on the capabilities of your TV.
- Connect the DVD system directly to the TV.

Using Composite Video Jack

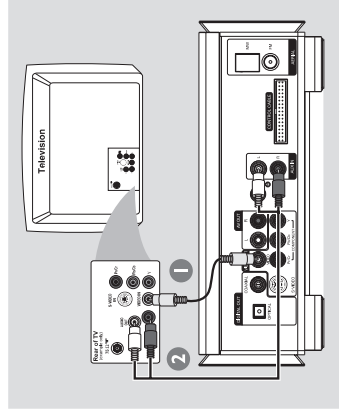


- 1 Use the composite video cable (yellow) to connect the system's **VIDEO OUT** jack to the video input jack (or labelled as AV In, Video In, Composite or Baseband) on the TV set.
- 2 To hear the TV channels through this DVD system, use the audio cables (white/red-not supplied) to connect **AUX IN L/R** jacks to the corresponding AUDIO OUT jacks on the TV.

Using S-Video Jack

IMPORTANT!

- If S-Video is used for DVD playback connection, the system's **VIDEO OUT** setting will need to be changed accordingly.

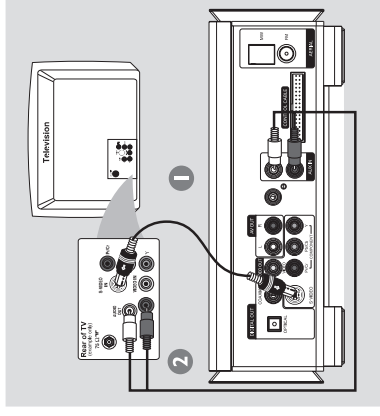


- 1 Use an S-Video cable (not supplied) to connect the DVD system's **S-VIDEO** jack to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV.
- 2 To hear the TV channels through this DVD system, use the audio cables (white/red-not supplied) to connect **AUX IN L/R** jacks to the corresponding AUDIO OUT jacks on the TV.

Using Component Video Jacks (Y Pb Pr)

IMPORTANT!

- The progressive scan video quality is only possible when using Y Pb Pr, and a progressive scan TV is required.

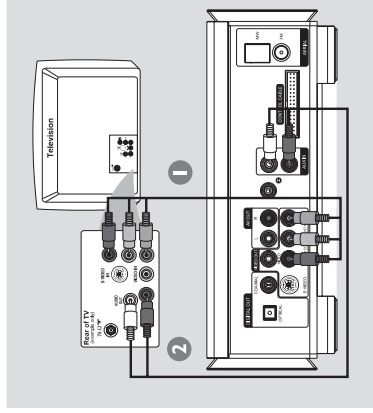

- 1 Use component video cables (red/blue/green - not supplied) to connect the DVD system's **COMPONENT (Pr/Cr Pb/Cb Y)** jacks to the corresponding Component video input jacks (or labeled as Y Pb/Cb Pr/Cr or YUV) on the TV.
- 2 To hear the TV channels through this DVD system, use the audio cables (white/red-not supplied) to connect **AUX IN L/R** jacks to the corresponding AUDIO OUT jacks on the TV.
- 3 If you are using a Progressive Scan TV (TV must indicate Progressive Scan or ProScan capability), to activate TV Progressive Scan, please refer to your TV user manual. For DVD system Progressive Scan function, see "Getting Started-Setting up Progressive Scan feature".

Note:

- If your TV does not support Progressive Scan, you will not be able to view the picture.
- Press **SYSTEM** on the remote to exit the system menu and then **DISC** and "1" to exit progressive scan.


CONNECTION AND CONTROLS

Connections

Using an accessory RF modulator


IMPORTANT!

- If your TV only has a single Antenna In jack (labeled as 75 ohm or RF In), you will need an RF modulator in order to view DVD playback on the TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

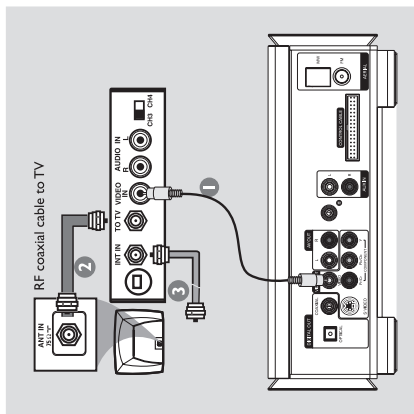


- 1 Use the composite video cable (yellow) to connect the DVD system's VIDEO jack to the video input jack on the RF modulator.
- 2 Use an RF coaxial cable (not supplied) to connect ANTENNA OUT or TV jack on the RF modulator to the Antenna IN jack on the TV. Connect the Antenna or Cable TV service signal to the ANTENNA IN or RF IN jack on the RF modulator. (It may have been connected to your TV previously. Disconnect it from the TV.)
- 3

Step 5: Connecting FM/MW antennas

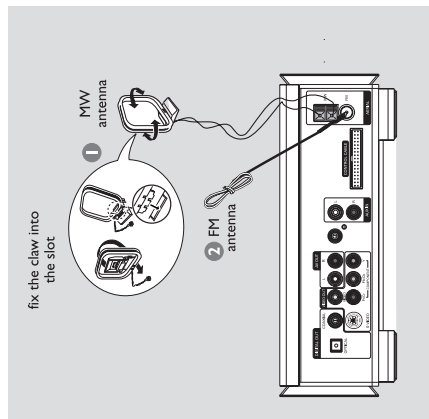

- 1 Connect the supplied MW loop antenna to the MW jack. Place the MW loop antenna on a shelf or attach to a stand or wall.
 - 2 Connect the supplied FM antenna to the FM (75 ?) jack. Extend the FM antenna and fix its end to the wall.
- For better FM stereo reception, connect an external FM antenna (not supplied).

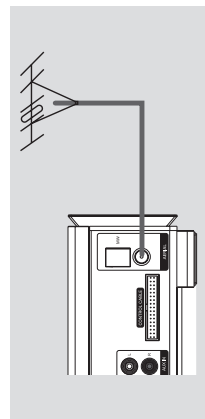

- Note:
- Adjust the position of the antennas for optimal reception.
 - Position the antennas as far as possible from your TV, VCR or other radiation source to prevent unwanted interference.

Connections

Viewing and listening to the playback of other equipment (A)

- Connect the system's AUX IN L/R jacks to the AUDIO OUT jacks on the other audio/visual device (such as a TV, VCR, Laser Disc player or cassette deck).
Before starting operation, press SOURCE on the front panel to select AUX or press AUX on the remote in order to activate the input source.

- **Using the VCR for recording DVDs (B)**
Connect one of the system's VIDEO jack to the corresponding VIDEO IN jack and AUDIO OUT L/R jacks to the AUDIO IN jacks on the VCR. This will allow you to make analogue stereo (two channel, right and left) recordings.

- **Recording (digital) (C)**
Connect the system's COAXIAL or OPTICAL jack to the DIGITAL IN jack on a digital recording device.
Before starting operation, set the DIGITAL OUT according to the audio connection. (See "DIGITAL OUT".)

- **Connecting an active subwoofer (D)**
Connect the DVD micro system's SUBWOOFER OUT jack to the AUDIO INPUT jack on an active subwoofer (not supplied).

Step 6: Connecting the power cord


After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connection with the power switched on.

Additional: Connecting additional equipment

IMPORTANT!

- Some discs are copy-protected. You cannot record the disc through a VCR or digital recording device.
- When making connections, make sure the colour of cables matches the colour of jacks.
- Always refer to the owner's manual of the other equipment for complete connection and usage details.

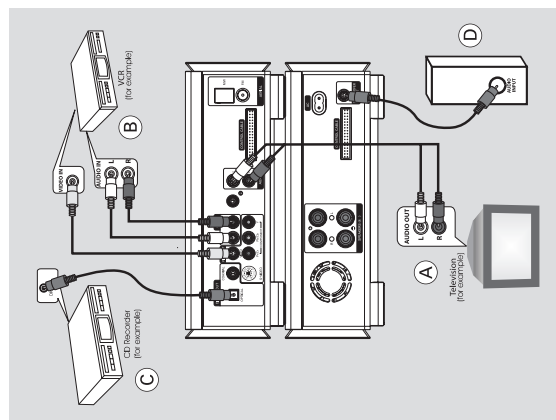
 


Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power.	<ul style="list-style-type: none"> ✓ Check if the AC power cord is properly connected. ✓ Press STANDBY-ON  on the top of the DVD micro system or  on the remote to turn on the power. ✓ Check if the TV is switched on. ✓ Check the video connection. ✓ Press SOURCE on the top of the DVD player repeatedly to select "DVD" or press DISC on the remote. ✓ Set your TV to the correct Video In channel. This channel is usually near channel 00. Or, you may have a button on the TV remote control that selects Auxiliary or AV IN channel. See your TV owner's manual for details. Or, change channels at the TV until you see DVD screen on the TV. ✓ If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly see "Getting started-Setting up Progressive Scan feature" for proper progressive scan setup or deactivate the progressive scan feature as below: <ol style="list-style-type: none"> 1) Turn off your TV progressive scan mode or turn on to interlaced mode. 2) Press SYSTEM on the remote to exit the system menu and then DISC and "1" to exit progressive scan.
No picture.	<ul style="list-style-type: none"> ✓ Sometimes a small amount of picture distortion may appear. This is not a malfunction. ✓ Clean the disc. ✓ TV has a colour system standard. If the disc's or DVD system's colour system is different than your TV's colour system, the picture may be distorted or colourless.
Distorted or poor picture.	
Completely distorted picture or black/white picture.	

Troubleshooting

The aspect ratio of the screen cannot be changed even though you have set the TV shape.

No sound or distorted sound.

The micro DVD player does not start playback.

The DVD micro system does not respond when the buttons are pressed.

Cannot activate some features, such as Angles, Subtitles, or multi-language Audio.


Considerable noise in radio broadcasts.

- ✓ The aspect ratio is fixed on the DVD disc. Depending on the TV, it may not be possible to change the aspect ratio.
- ✓ Adjust the volume.
- ✓ Check that the speakers are connected correctly.
- ✓ Replace the speaker cables.
- ✓ Disconnect the headphones.
- ✓ The system is in pause, slow motion or fast forward/reverse mode, press **PRESET/▶ II** (or **▶ II** on the remote) to resume normal play mode.
- ✓ Insert a readable disc with the playback side facing down.
- ✓ Check the disc type, colour system and regional code. Check for any scratches or smudges on the disc.
- ✓ Press SYSTEM MENU to turn off the setup menu screen.
- ✓ Cancel the parental control rating function or change the rating level.
- ✓ Moisture has condensed inside the system.
- ✓ Remove the disc and leave the system turned on for about an hour.
- ✓ Disconnect the power plug from the outlet and insert again.
- ✓ Multi-language sound or subtitle is not recorded on the DVD.
- ✓ Changing the language for the sound or subtitle is prohibited on the DVD.
- ✓ The features may not be available on the disc.
- ✓ Tune in to the correct frequency.
- ✓ Connect the antennas.
- ✓ Fully extend the FM wire antenna. Position for best reception and secure to a wall.
- ✓ Connect an outdoor FM or MW antenna.
- ✓ Adjust the direction and position for best reception.
- ✓ Place the antenna farther away from any equipment that may be causing the noise.
- ✓ Increase the distance between the system and your TV or other equipment.

SOFTWARE VERSION CHECK AND UPGRADING**A.MPEG SOFTWARE VERSION CHECK**


1.Press SYSTEM key (on the remote control) to open setup page,

TV Screen shows:

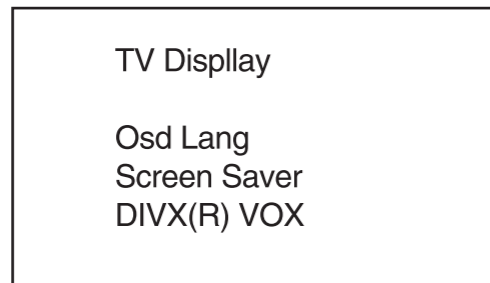


2.Press REMOVAL key (on the remote control) to the original setup page,

TV Screen shows:

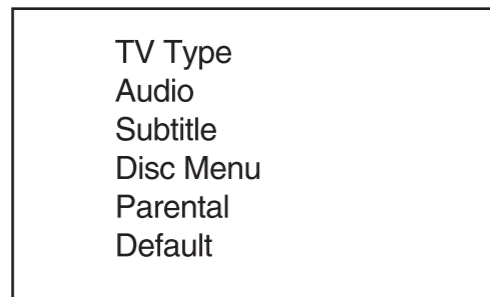

3.Enter the password "811502" (on the remote control)

TV Screen shows:

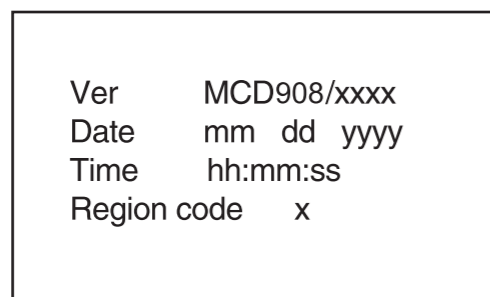


4.Press ▲ or ▼ button (on the remote control) to change region.
Press OK to confirm.


B.CPU VERSION CHECK

Keep PLAY/PAUSE and STOP buttons (on the set) depressed while pressing POWER on.


TV screen shows

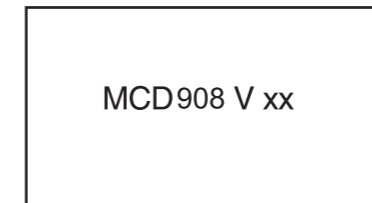**C. MPEG SOFTWARE UPGRADING**


1. download the firmware from Philips support website
<http://www.philips.com/support>
2. Prepare a uploading CD
3. Put the CD in the CD tray
4. TV Screen shows

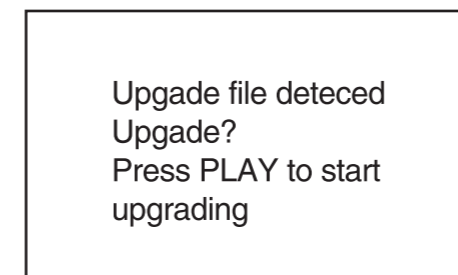


SET BLOCK DIAGRAM

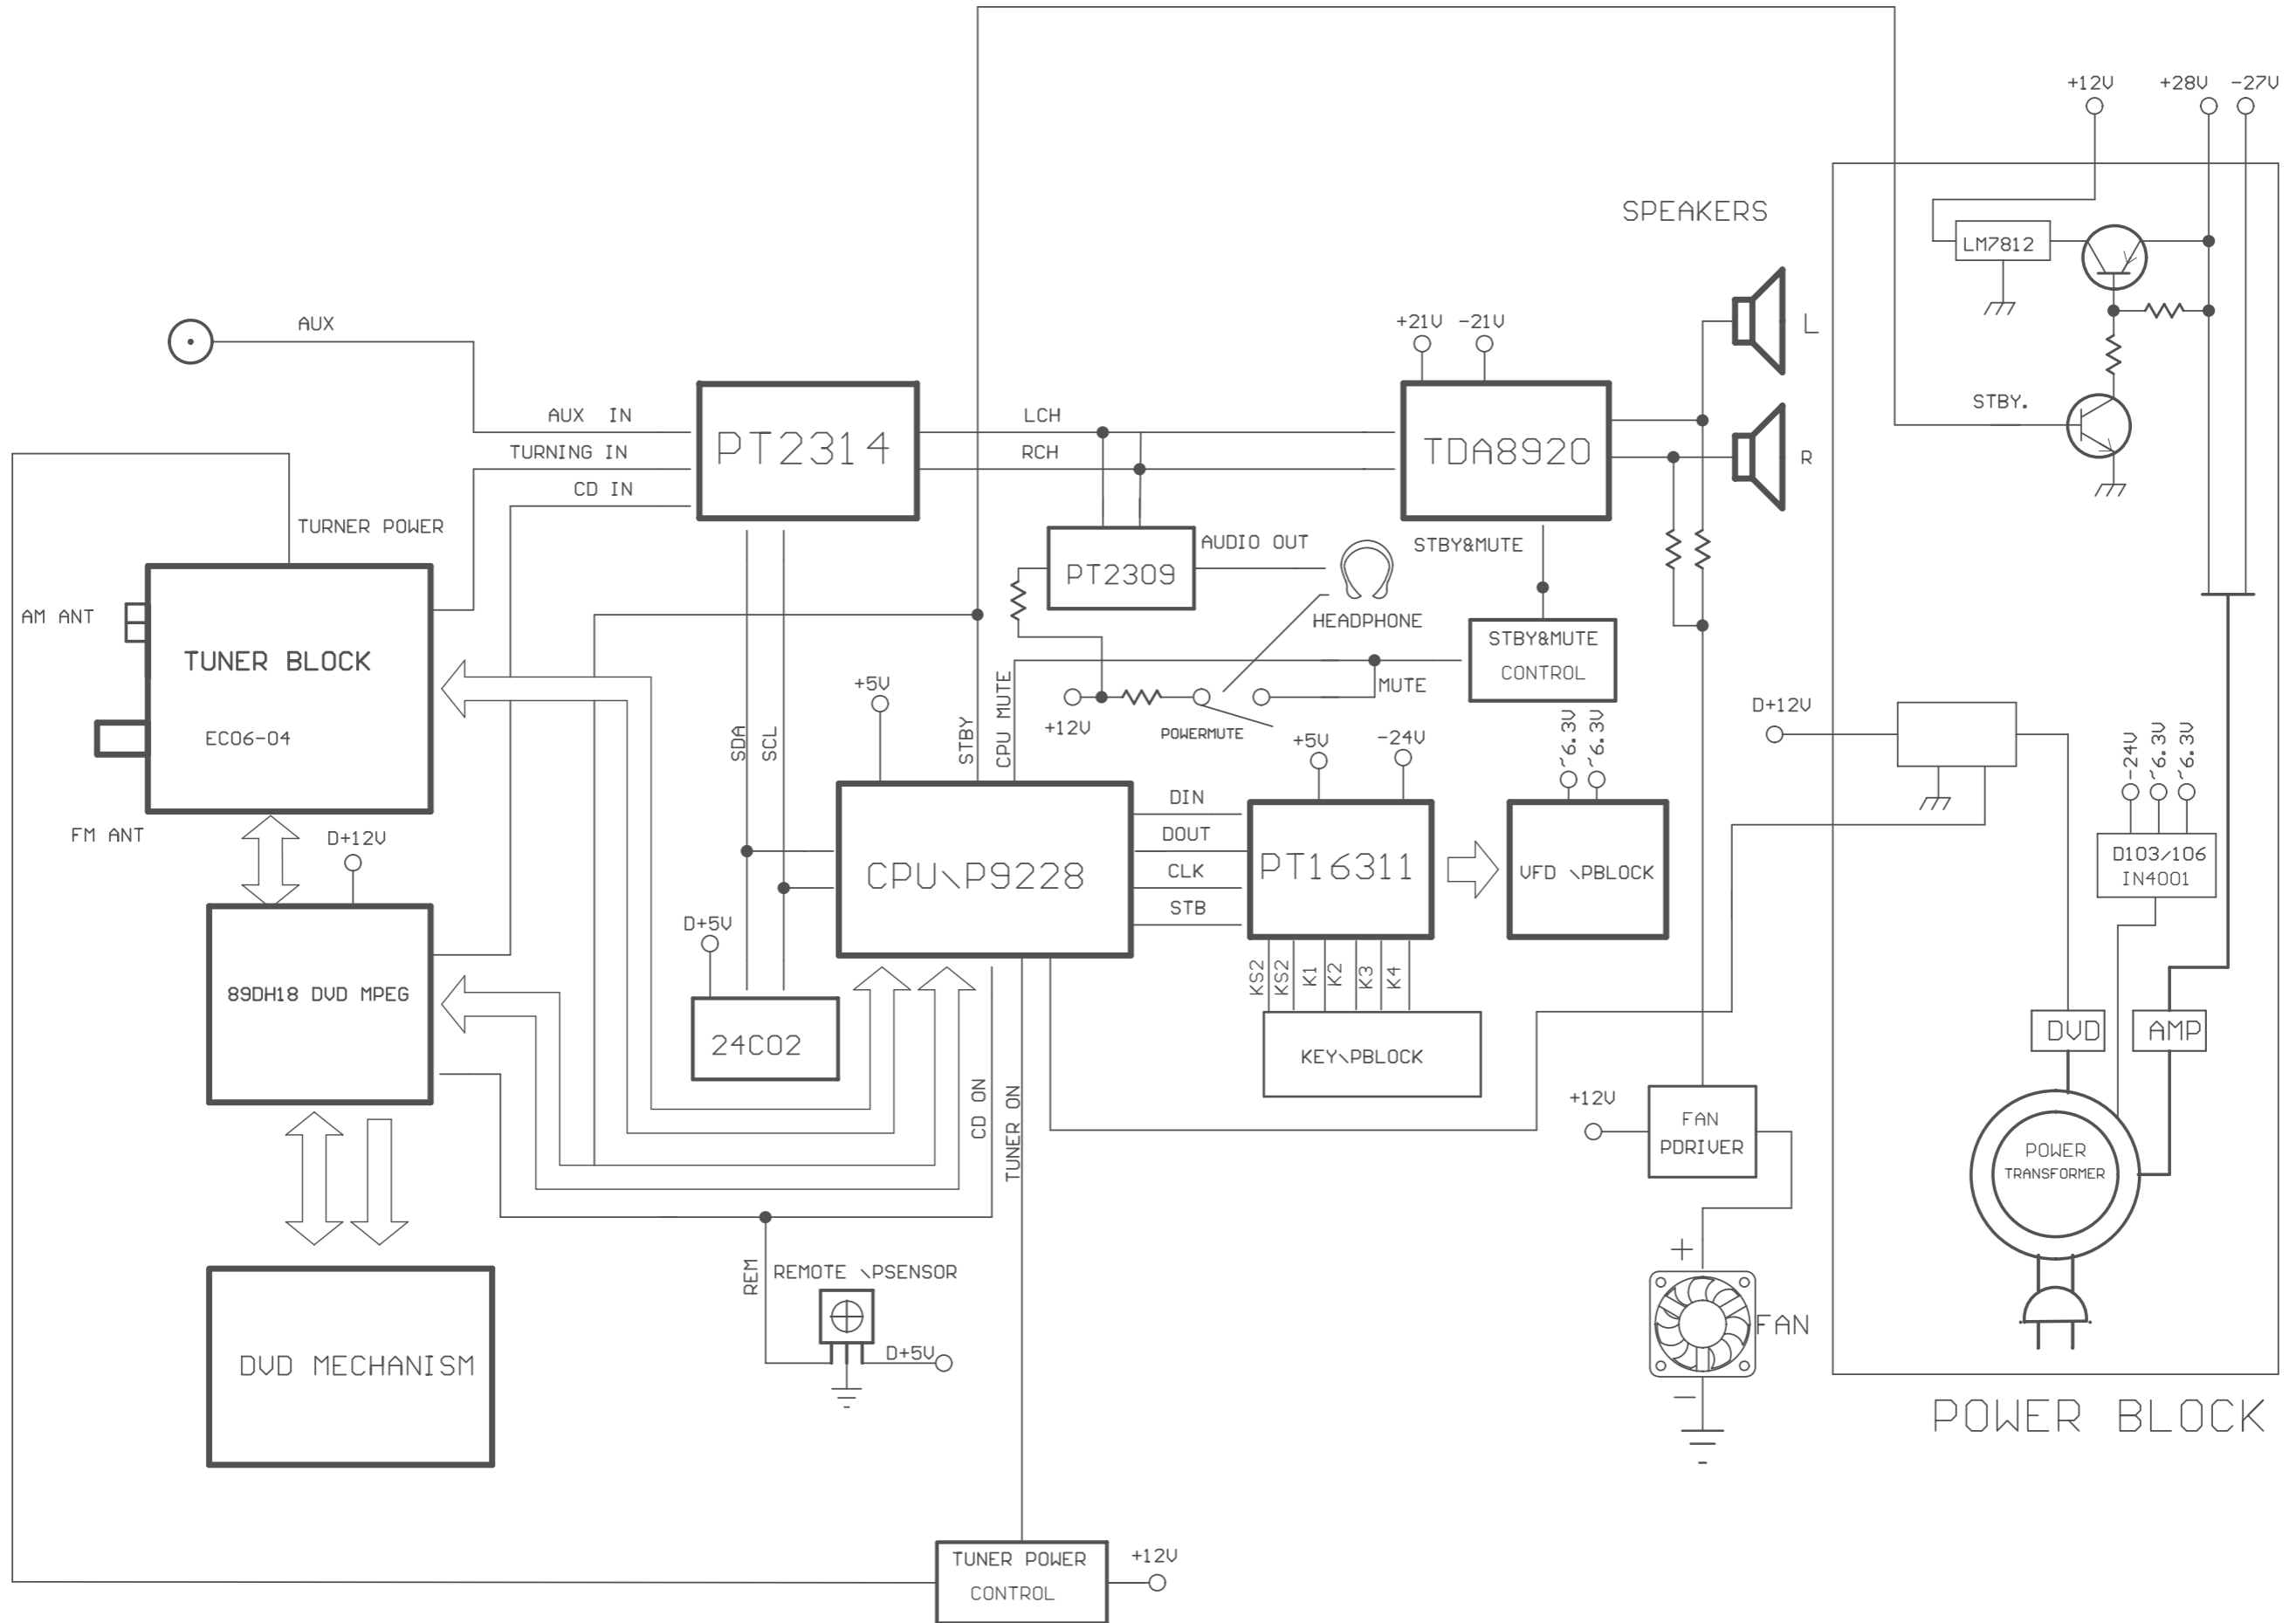

SET WIRING DIAGRAM

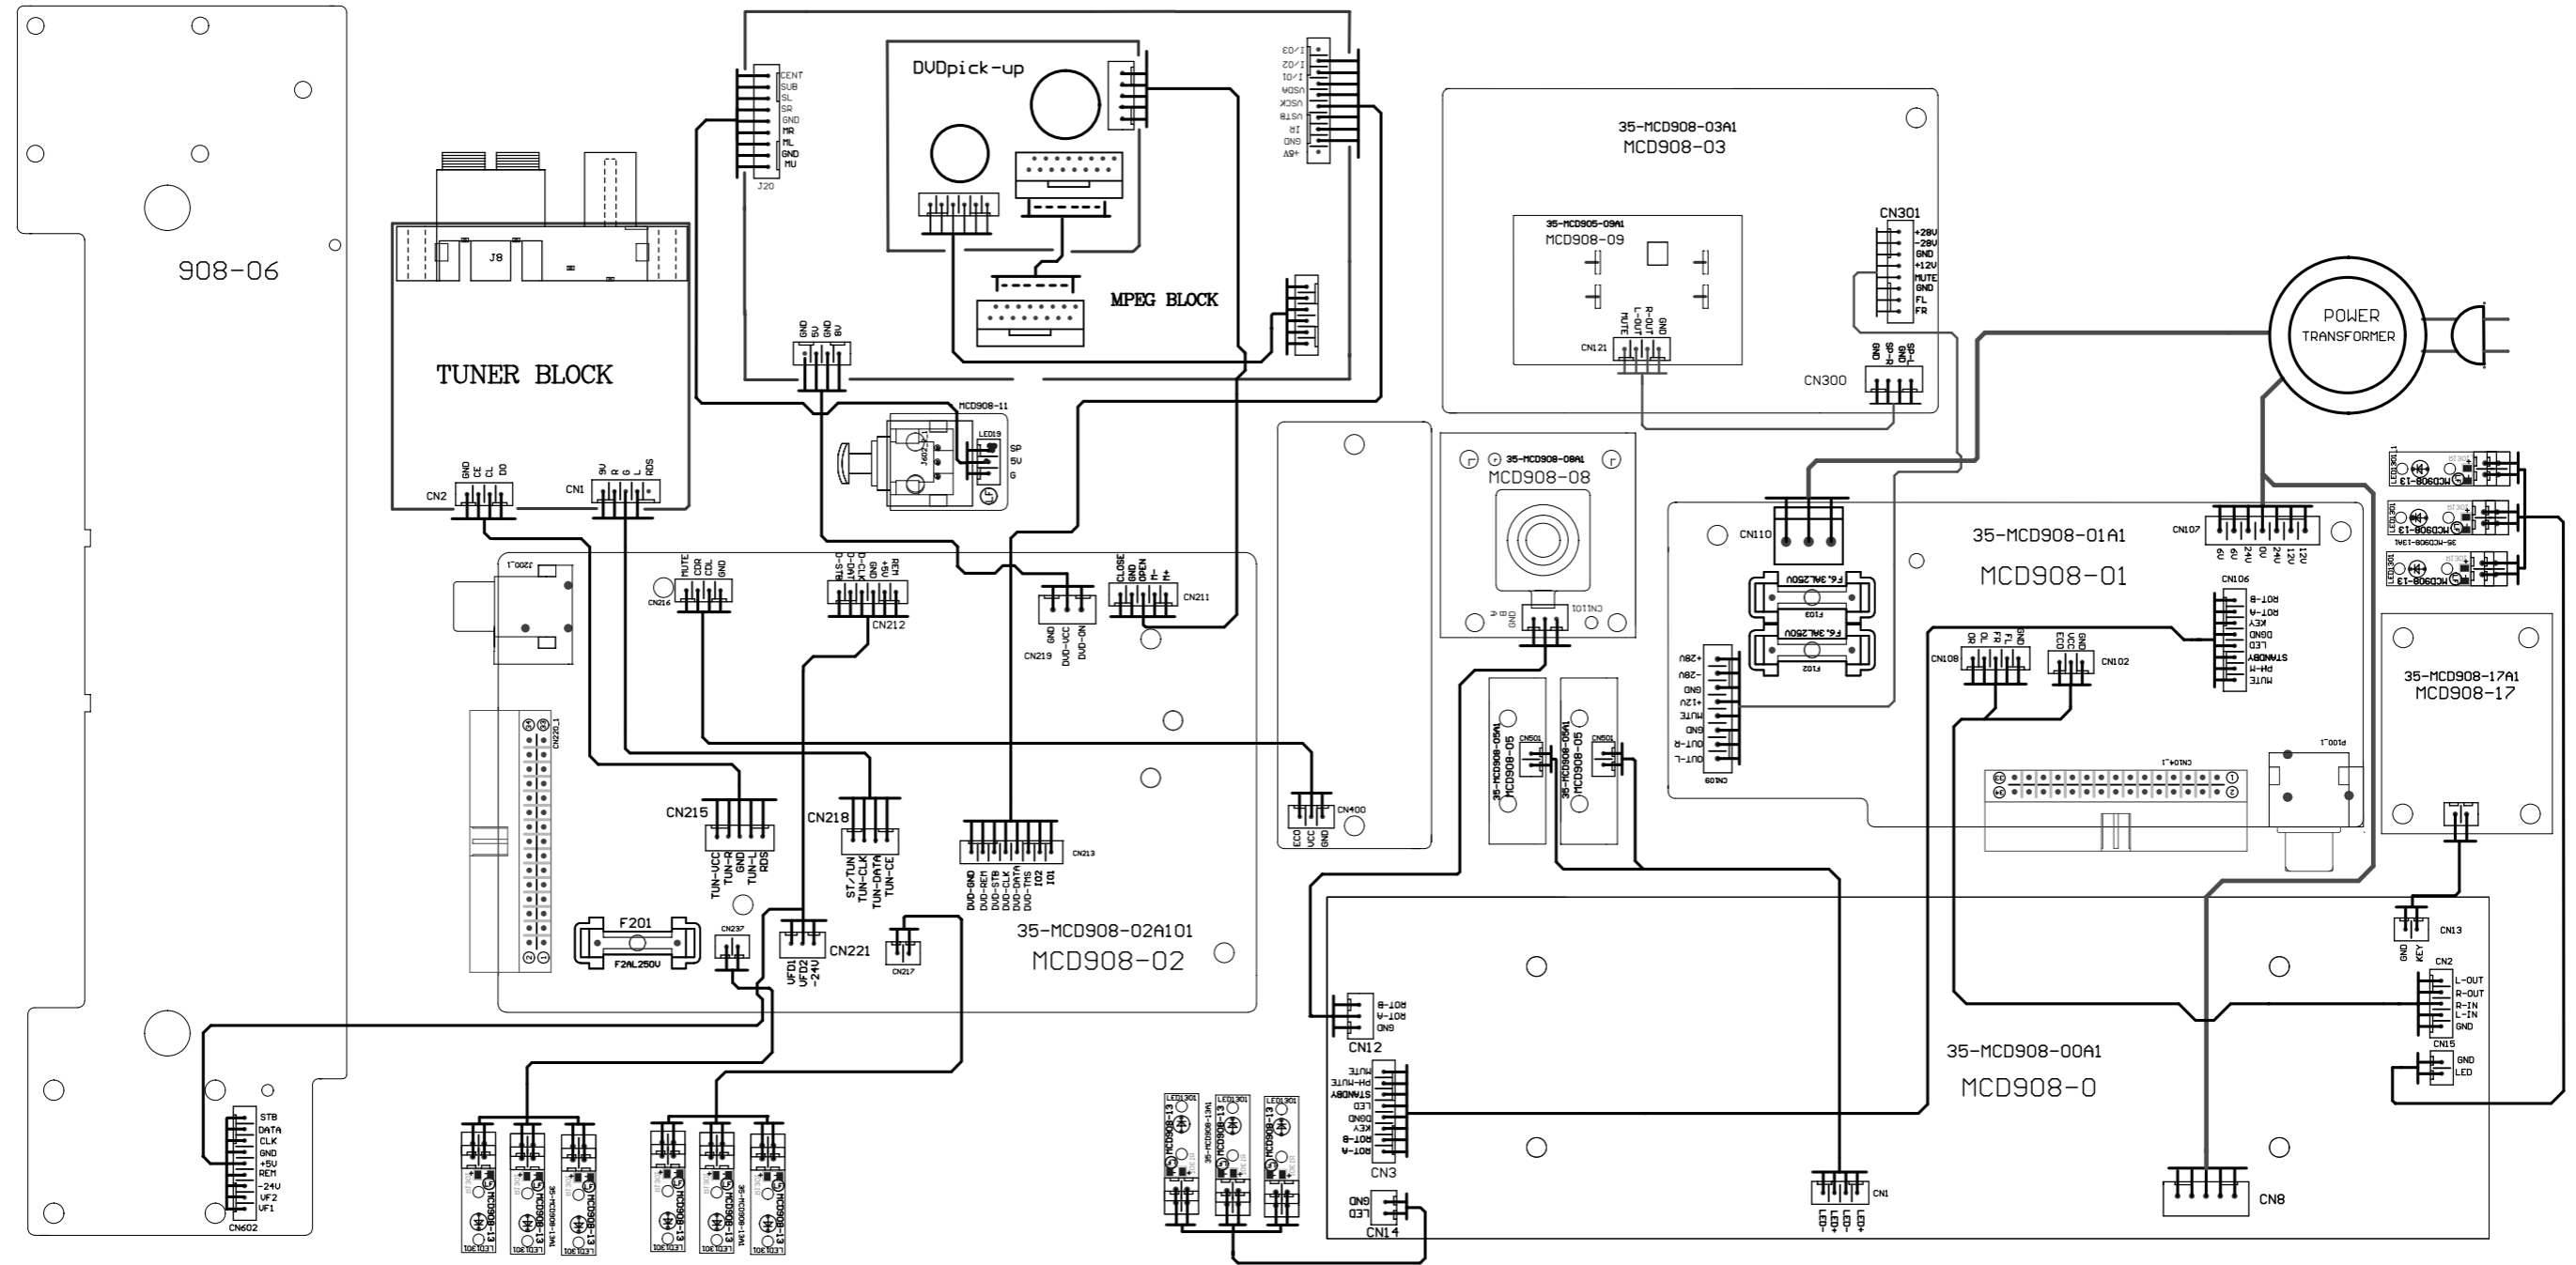



CIRCUIT DIAGRAM - VFD BOARD

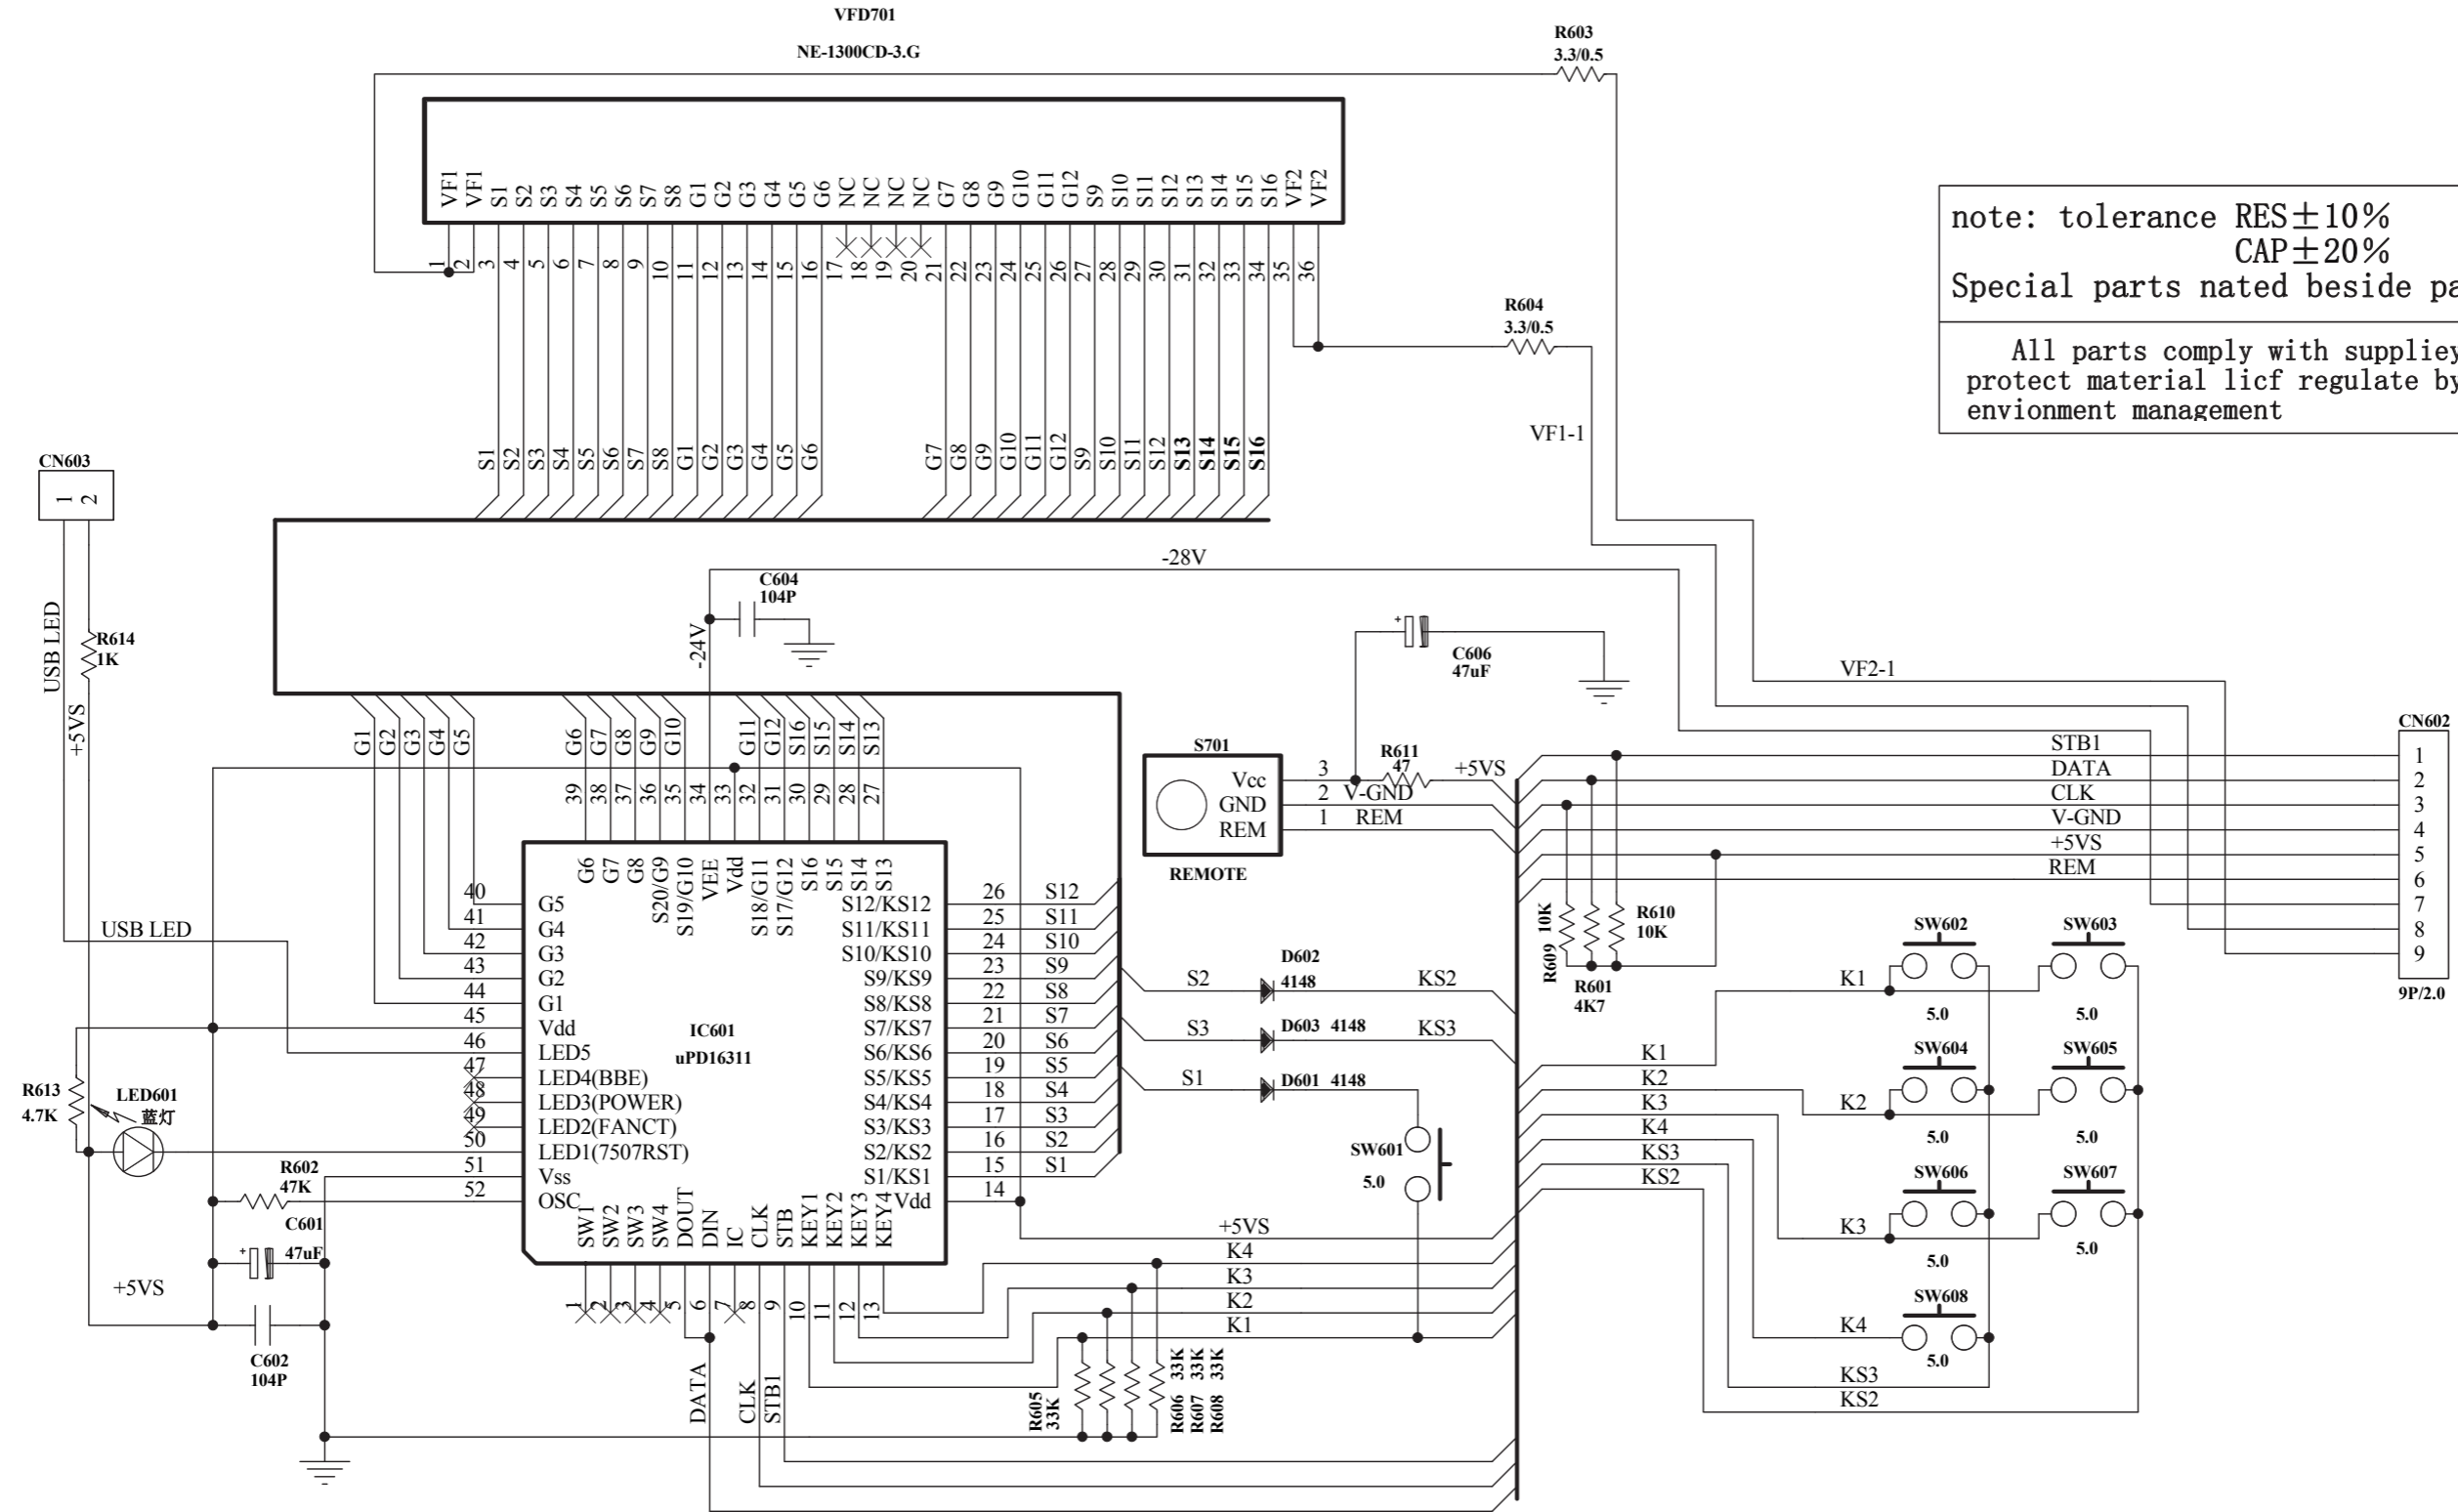


note: tolerance RES±10%
 CAP±20%
 Special parts nated beside parts

All parts comply with suppliey envirnment
 protect material licf regulate by green
 envionment management


LAYOUT DIAGRAM - VFD BOARD

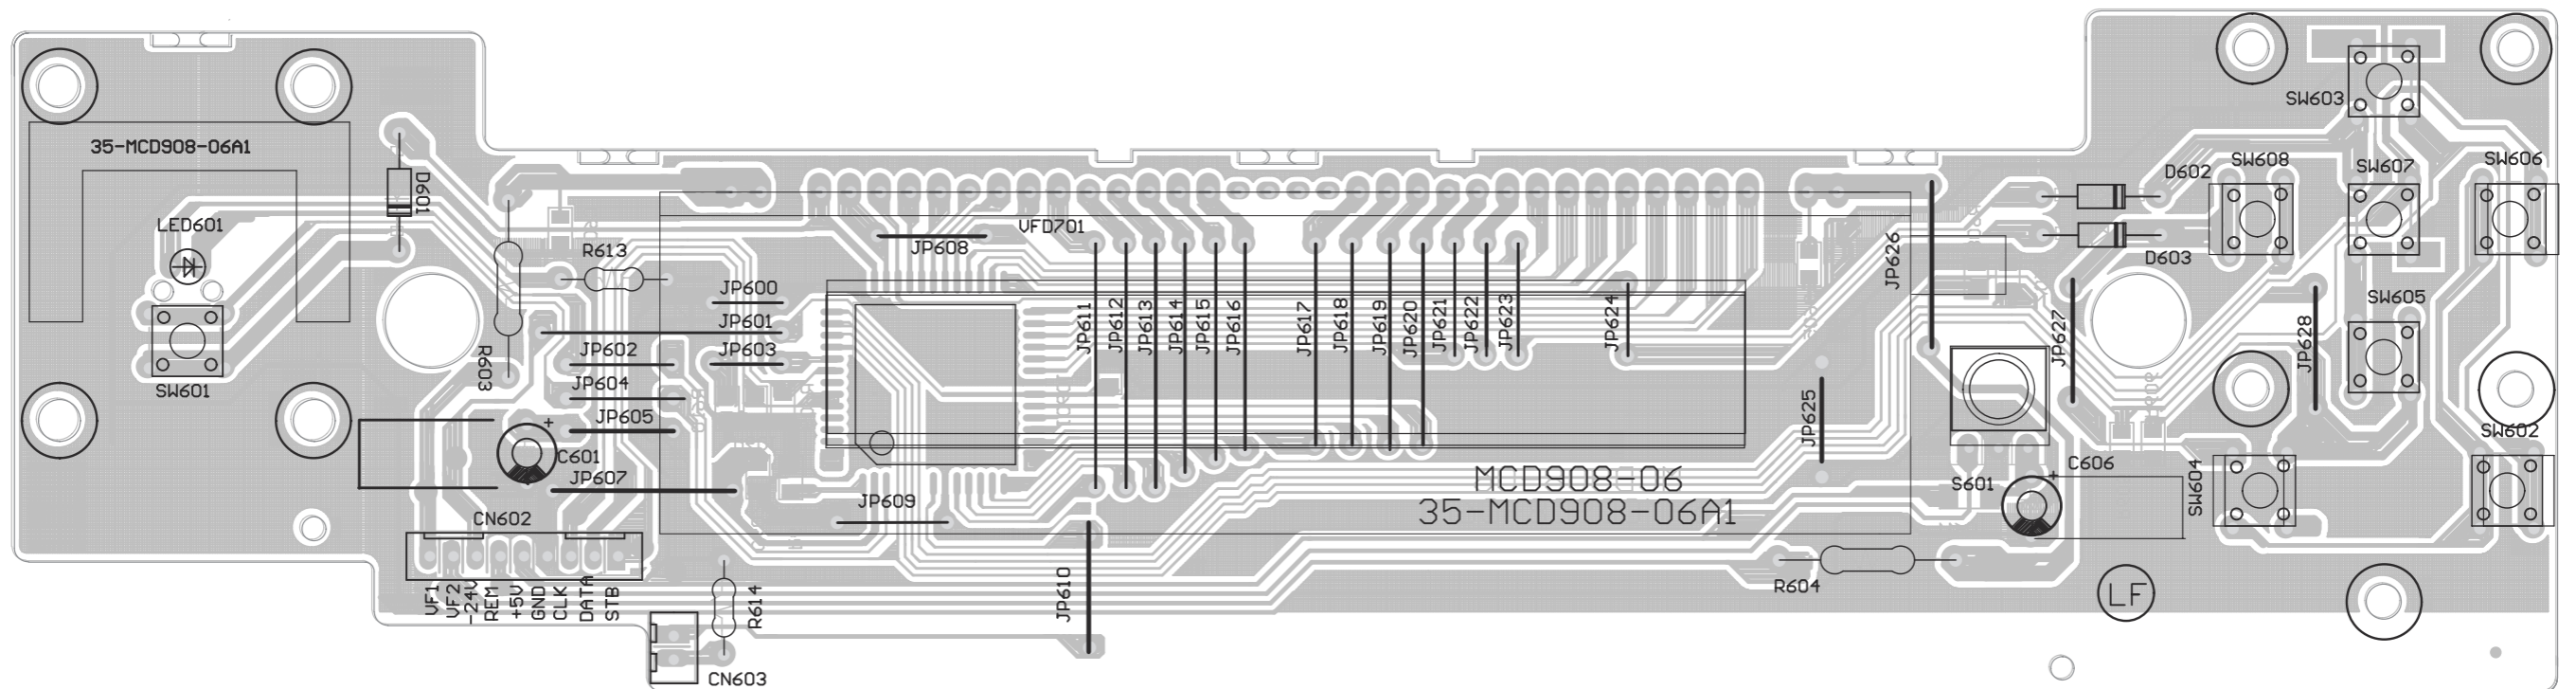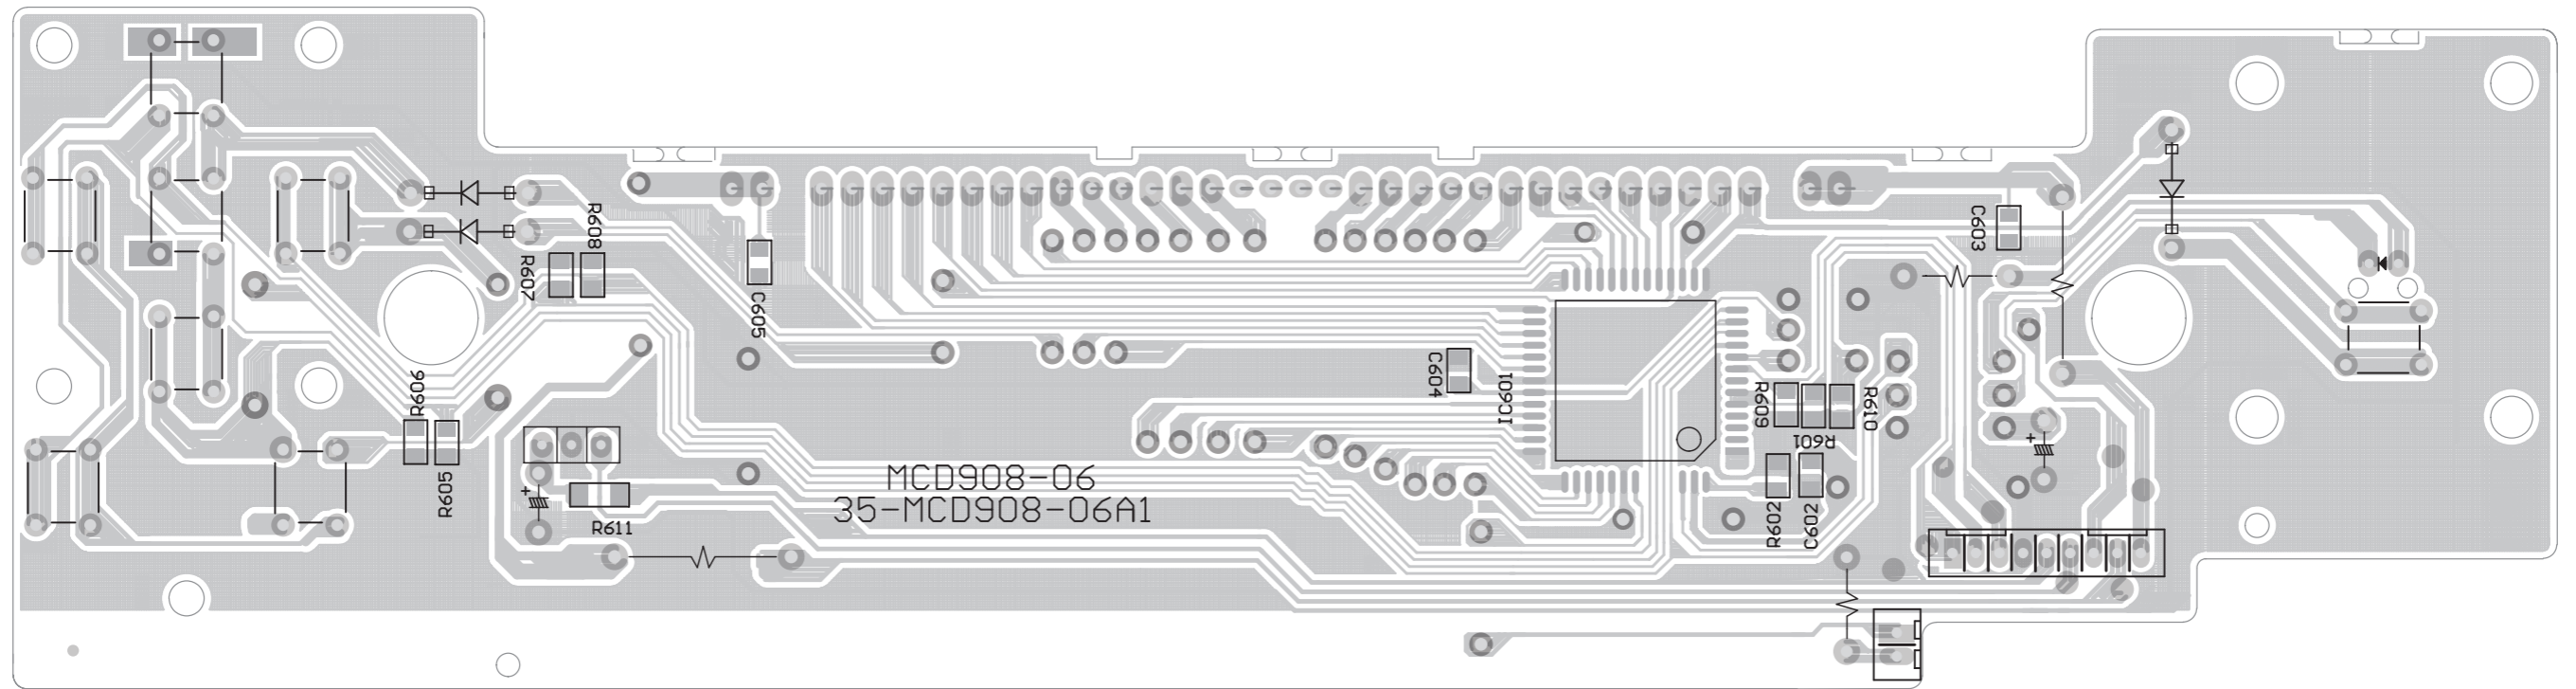


CIRCUIT DIAGARM - TUENR BOARD

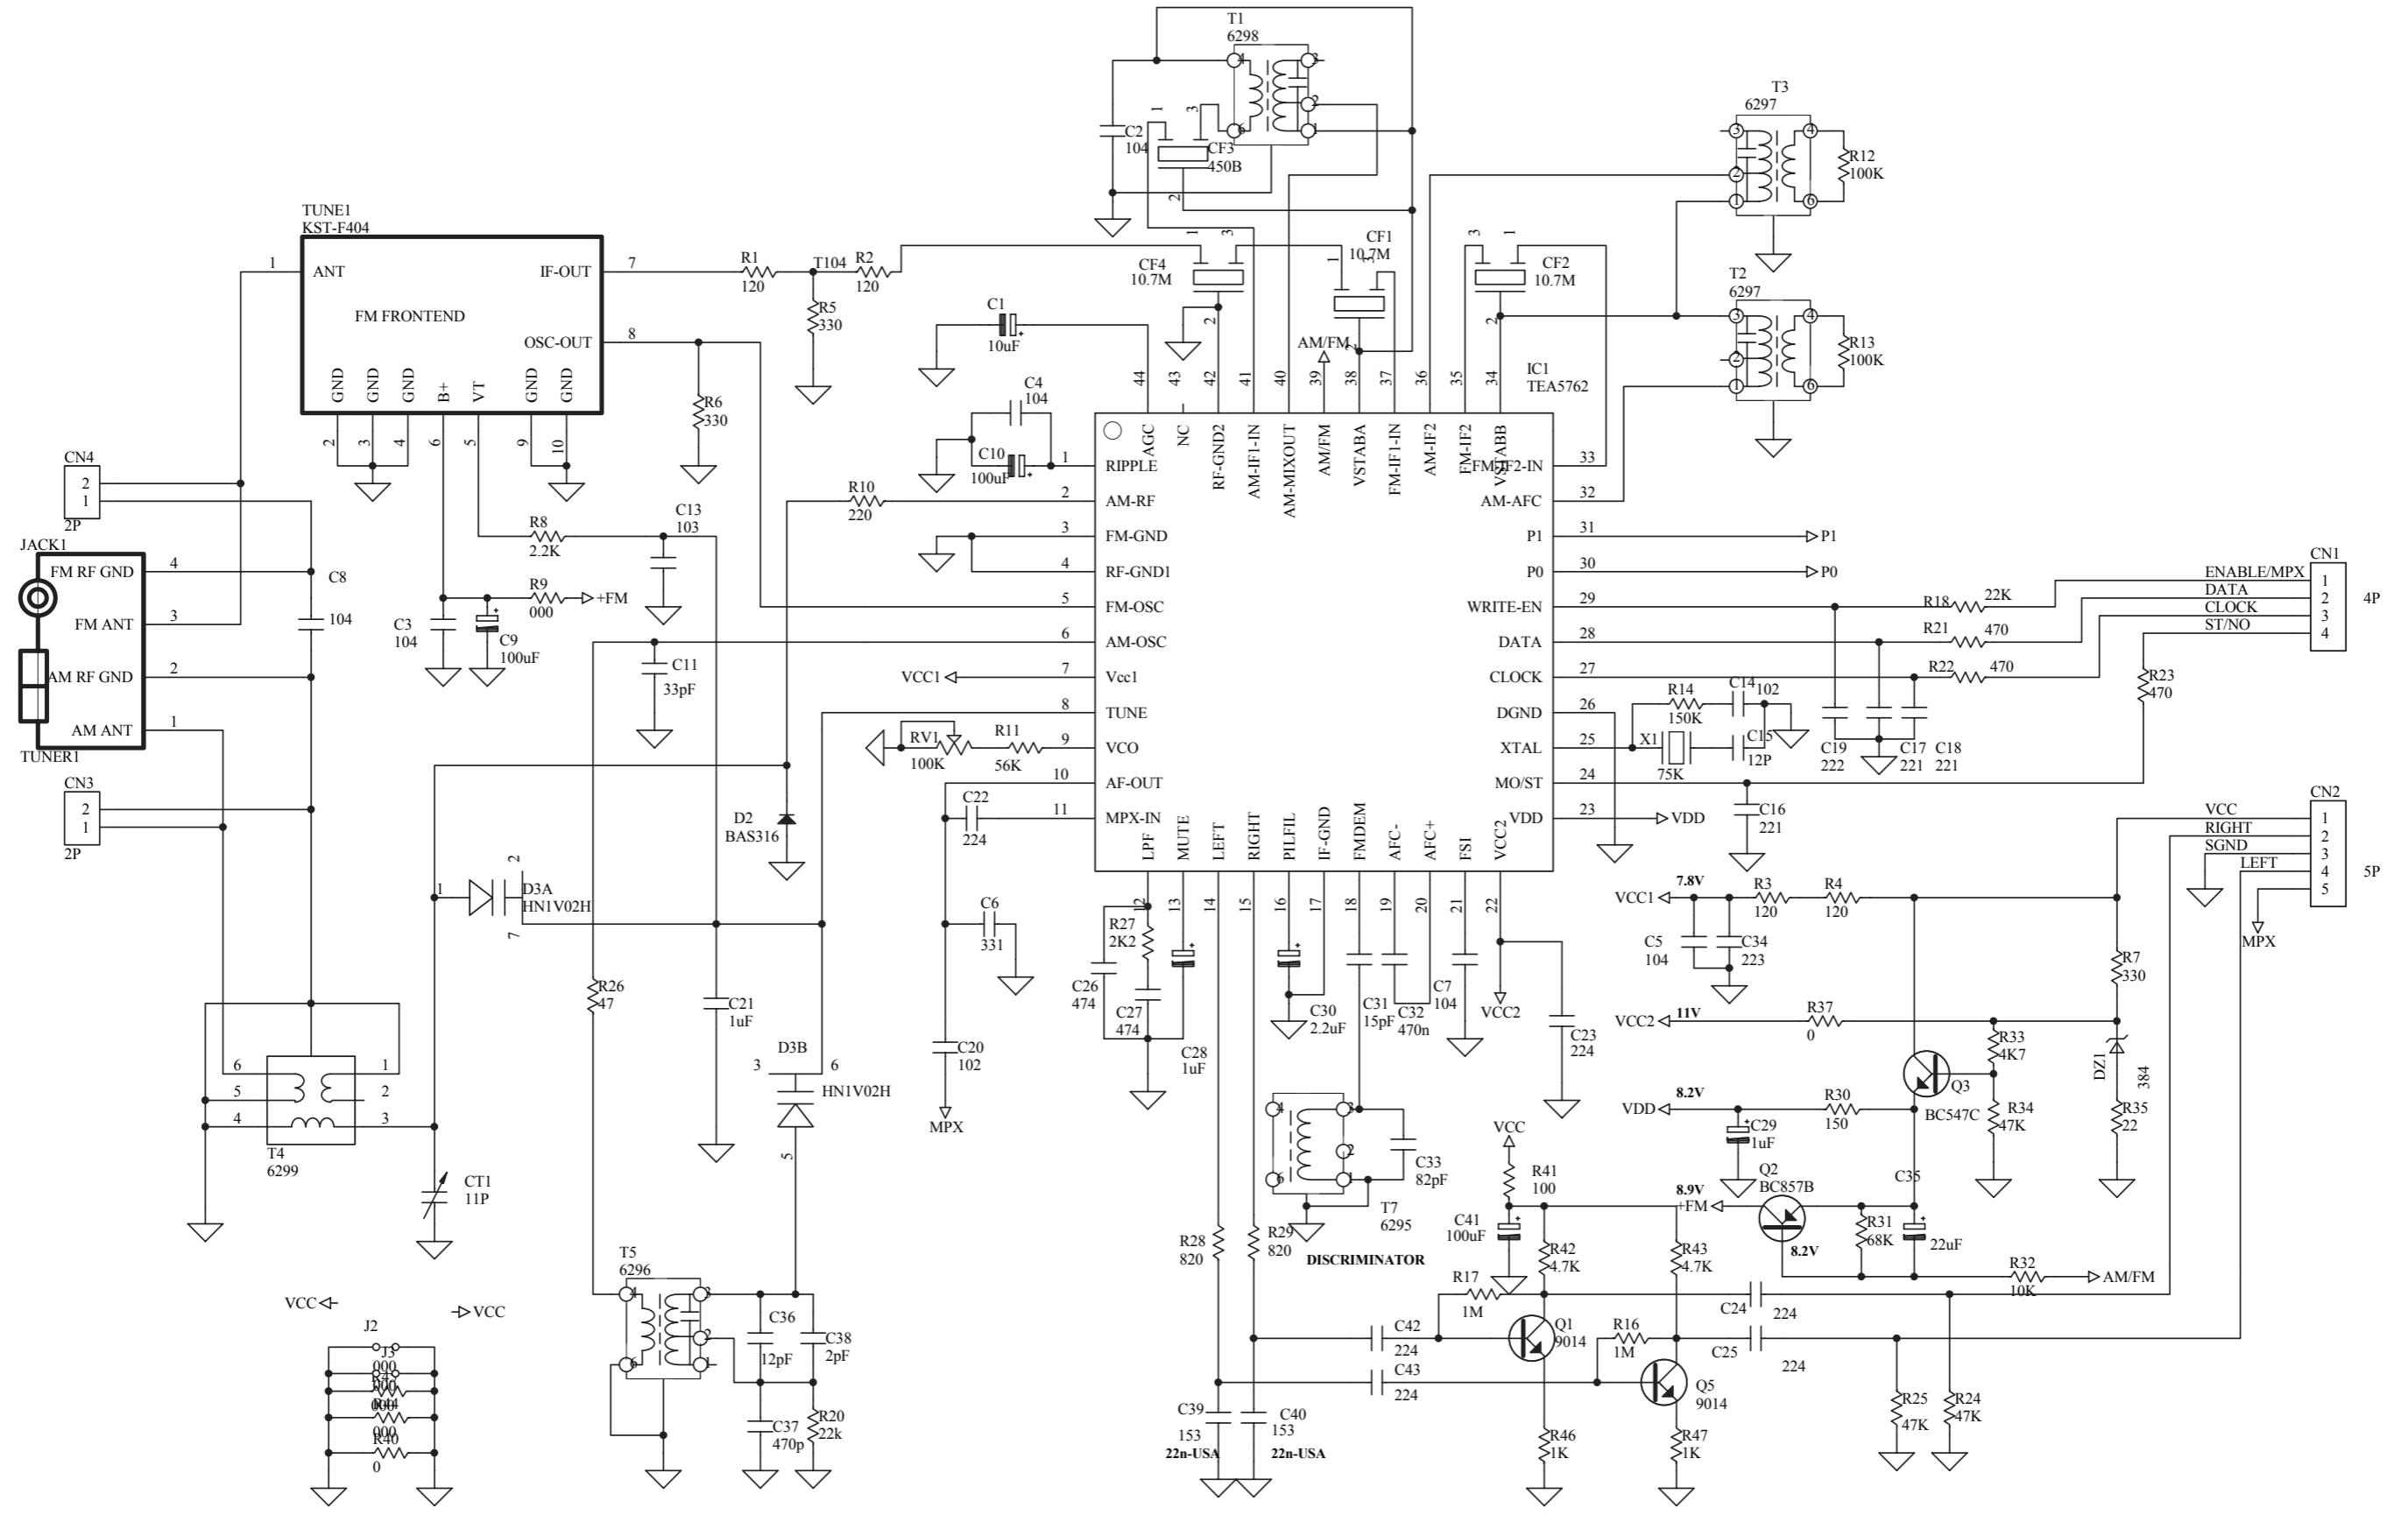



LAYOUT DIAGARM - TUNER BOARD

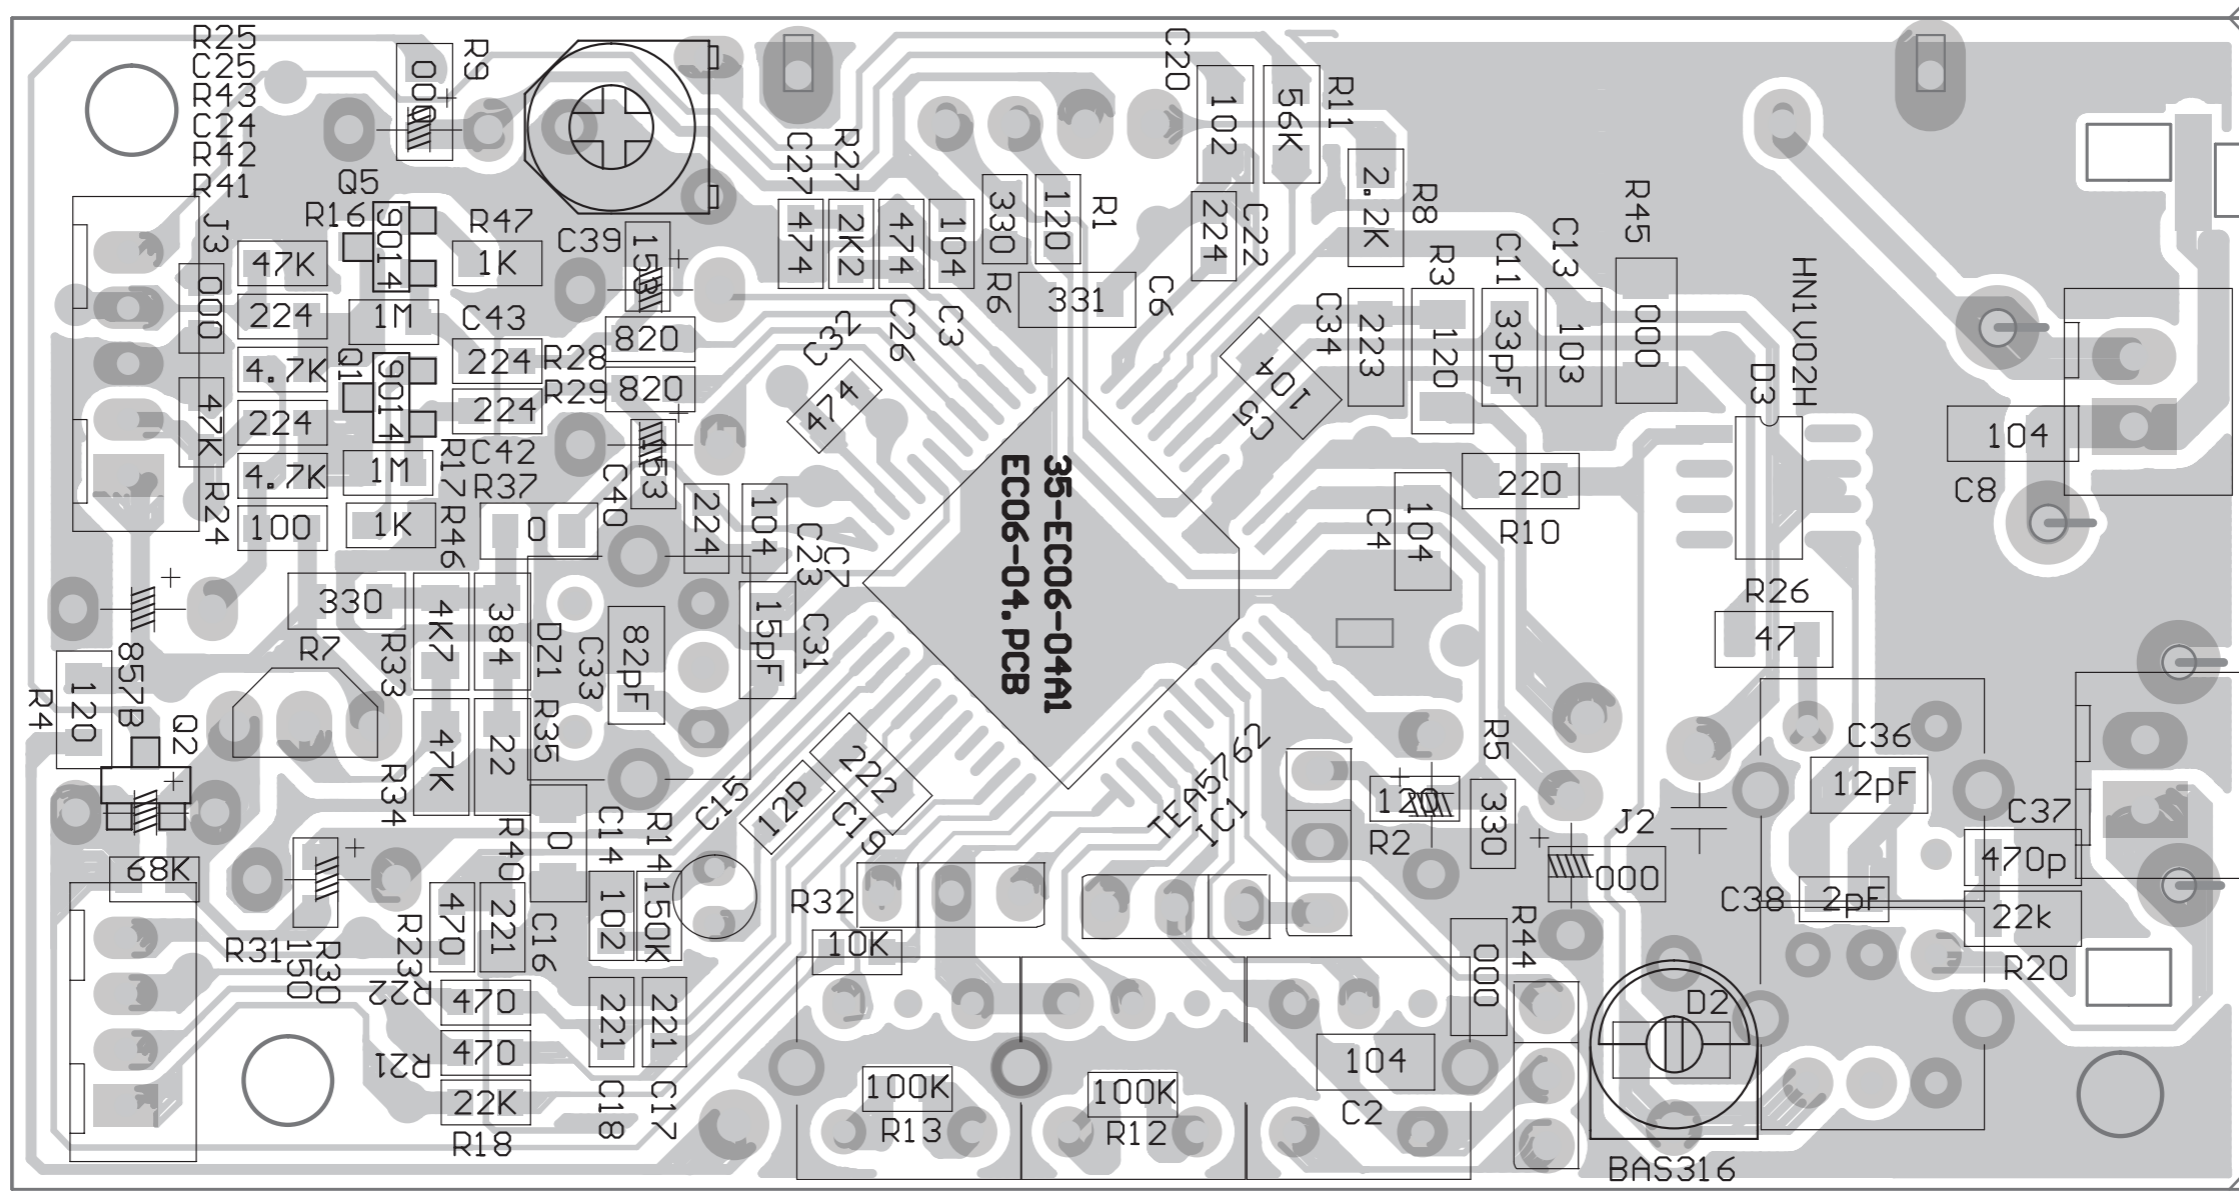


CIRCUIT DIAGRAM - AMP BOARD PART 1

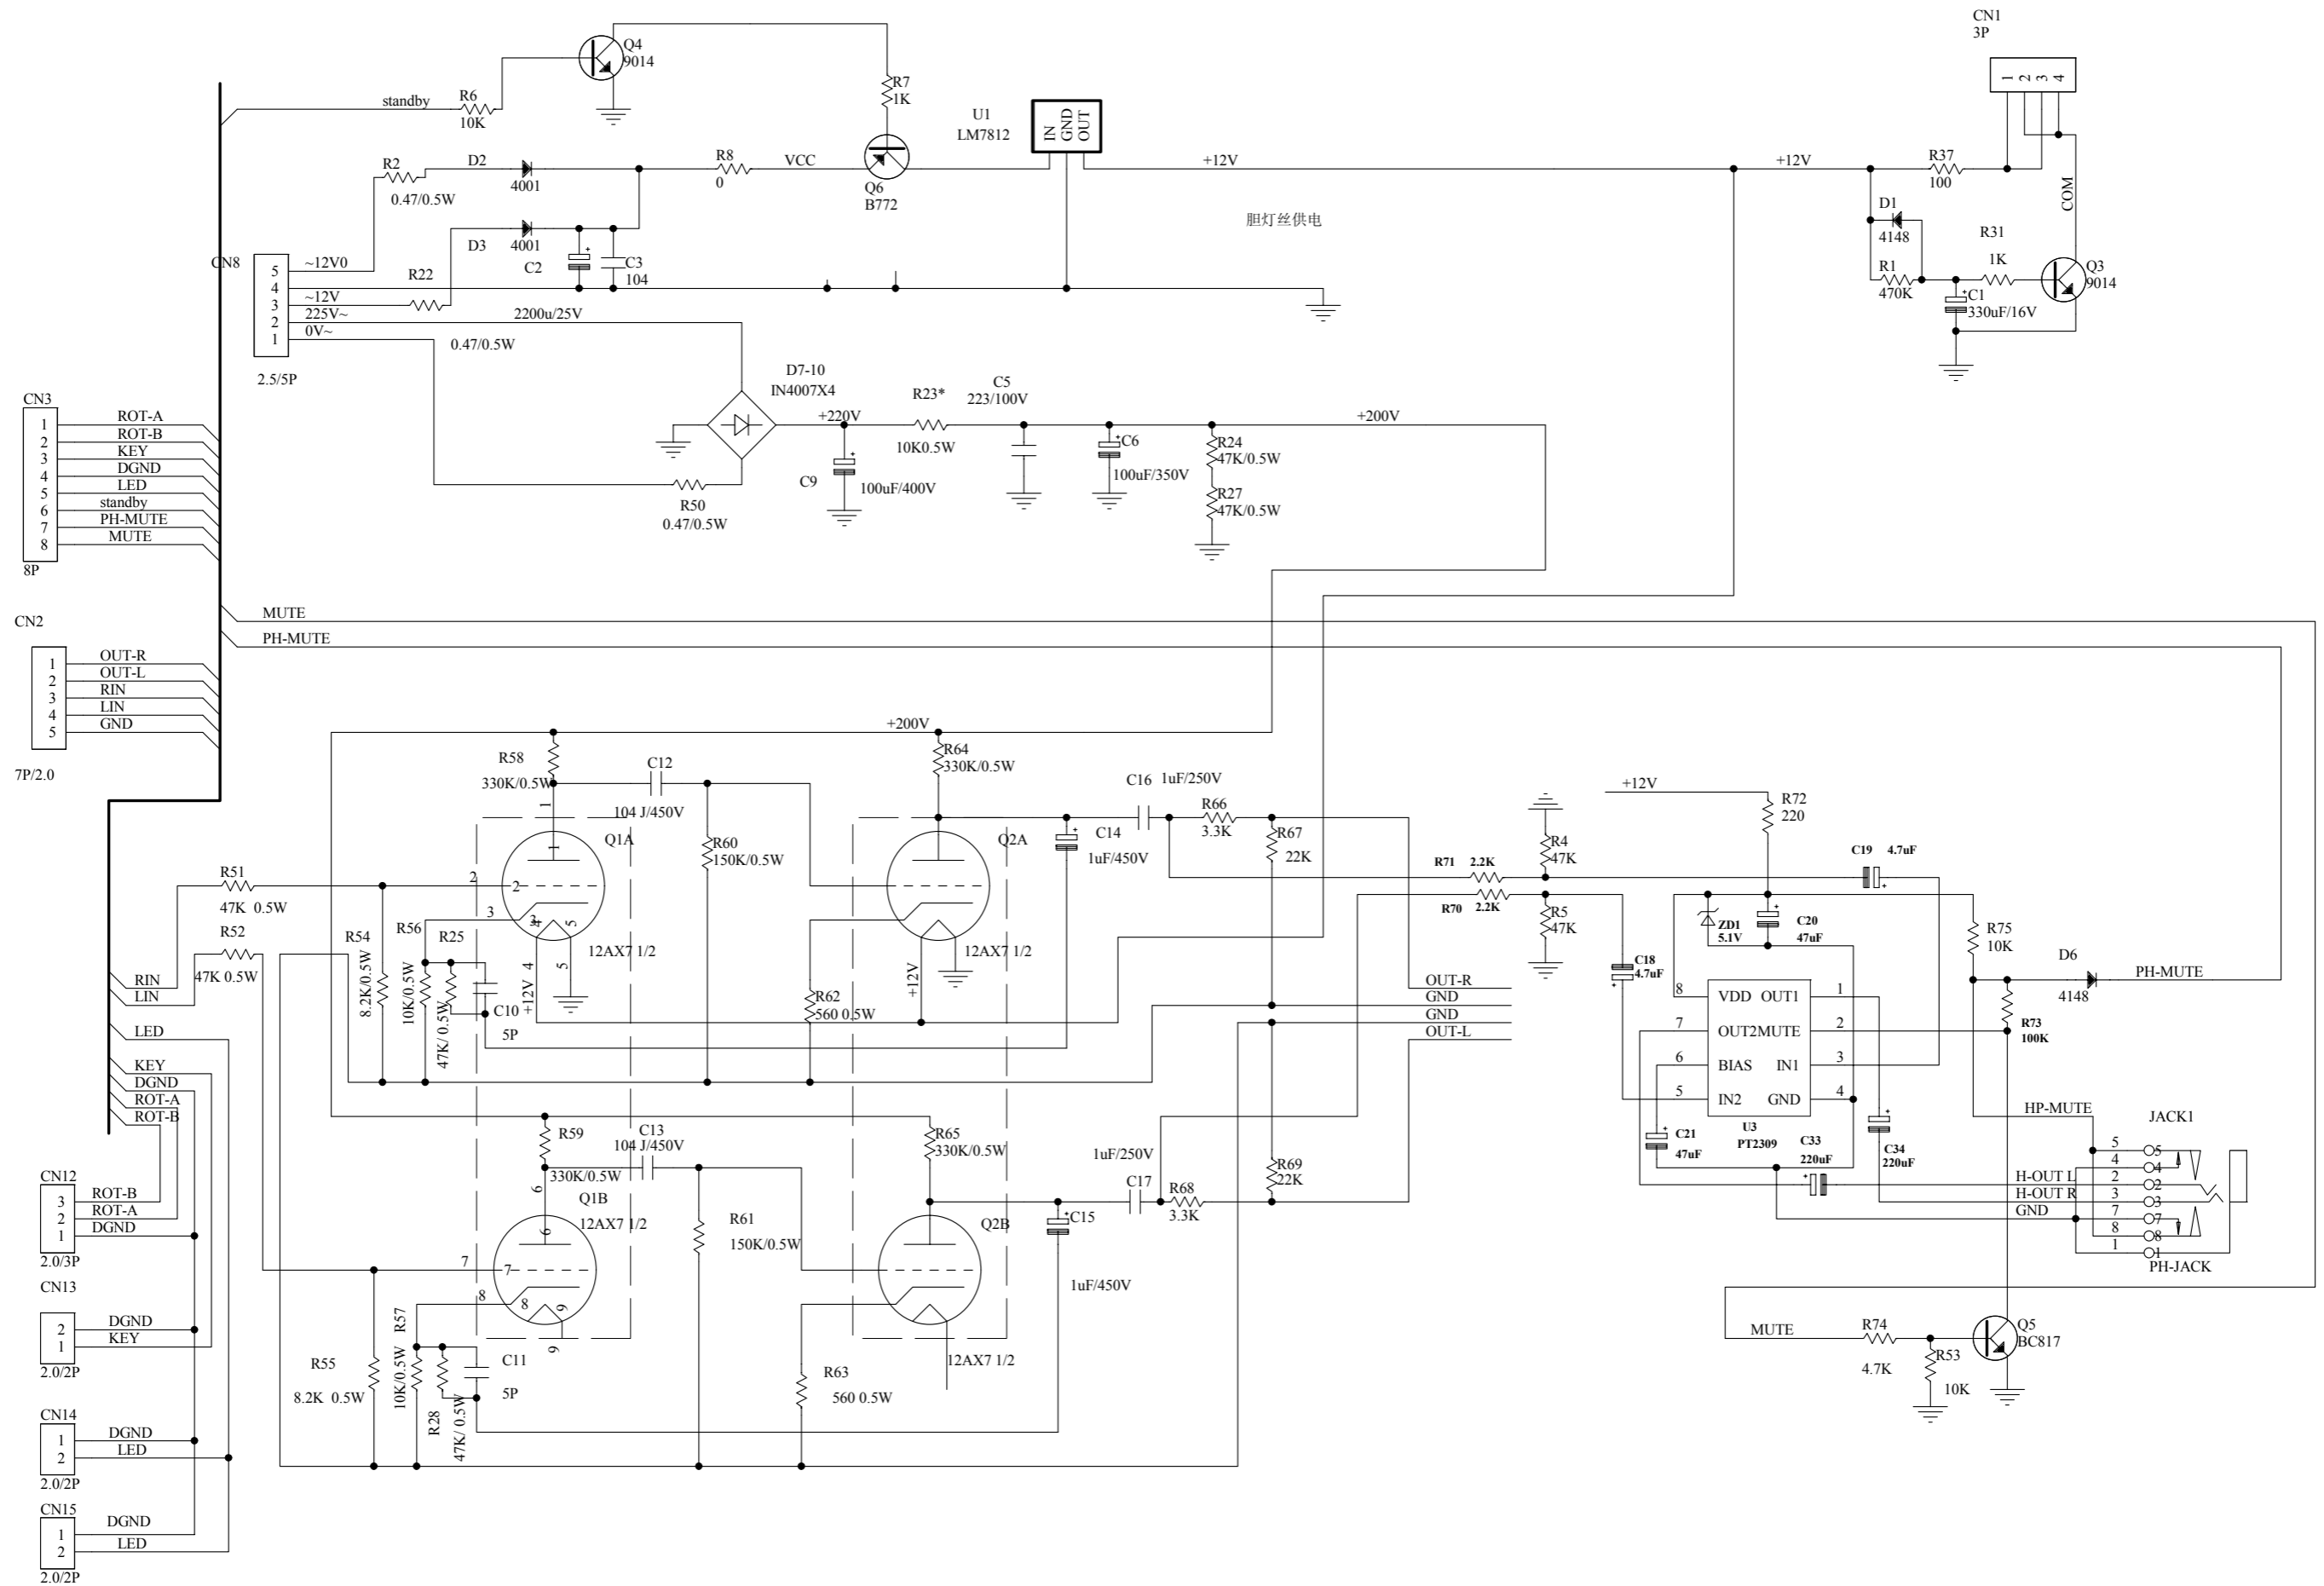


LAYOUT DIAGRAM - AMP BOARD

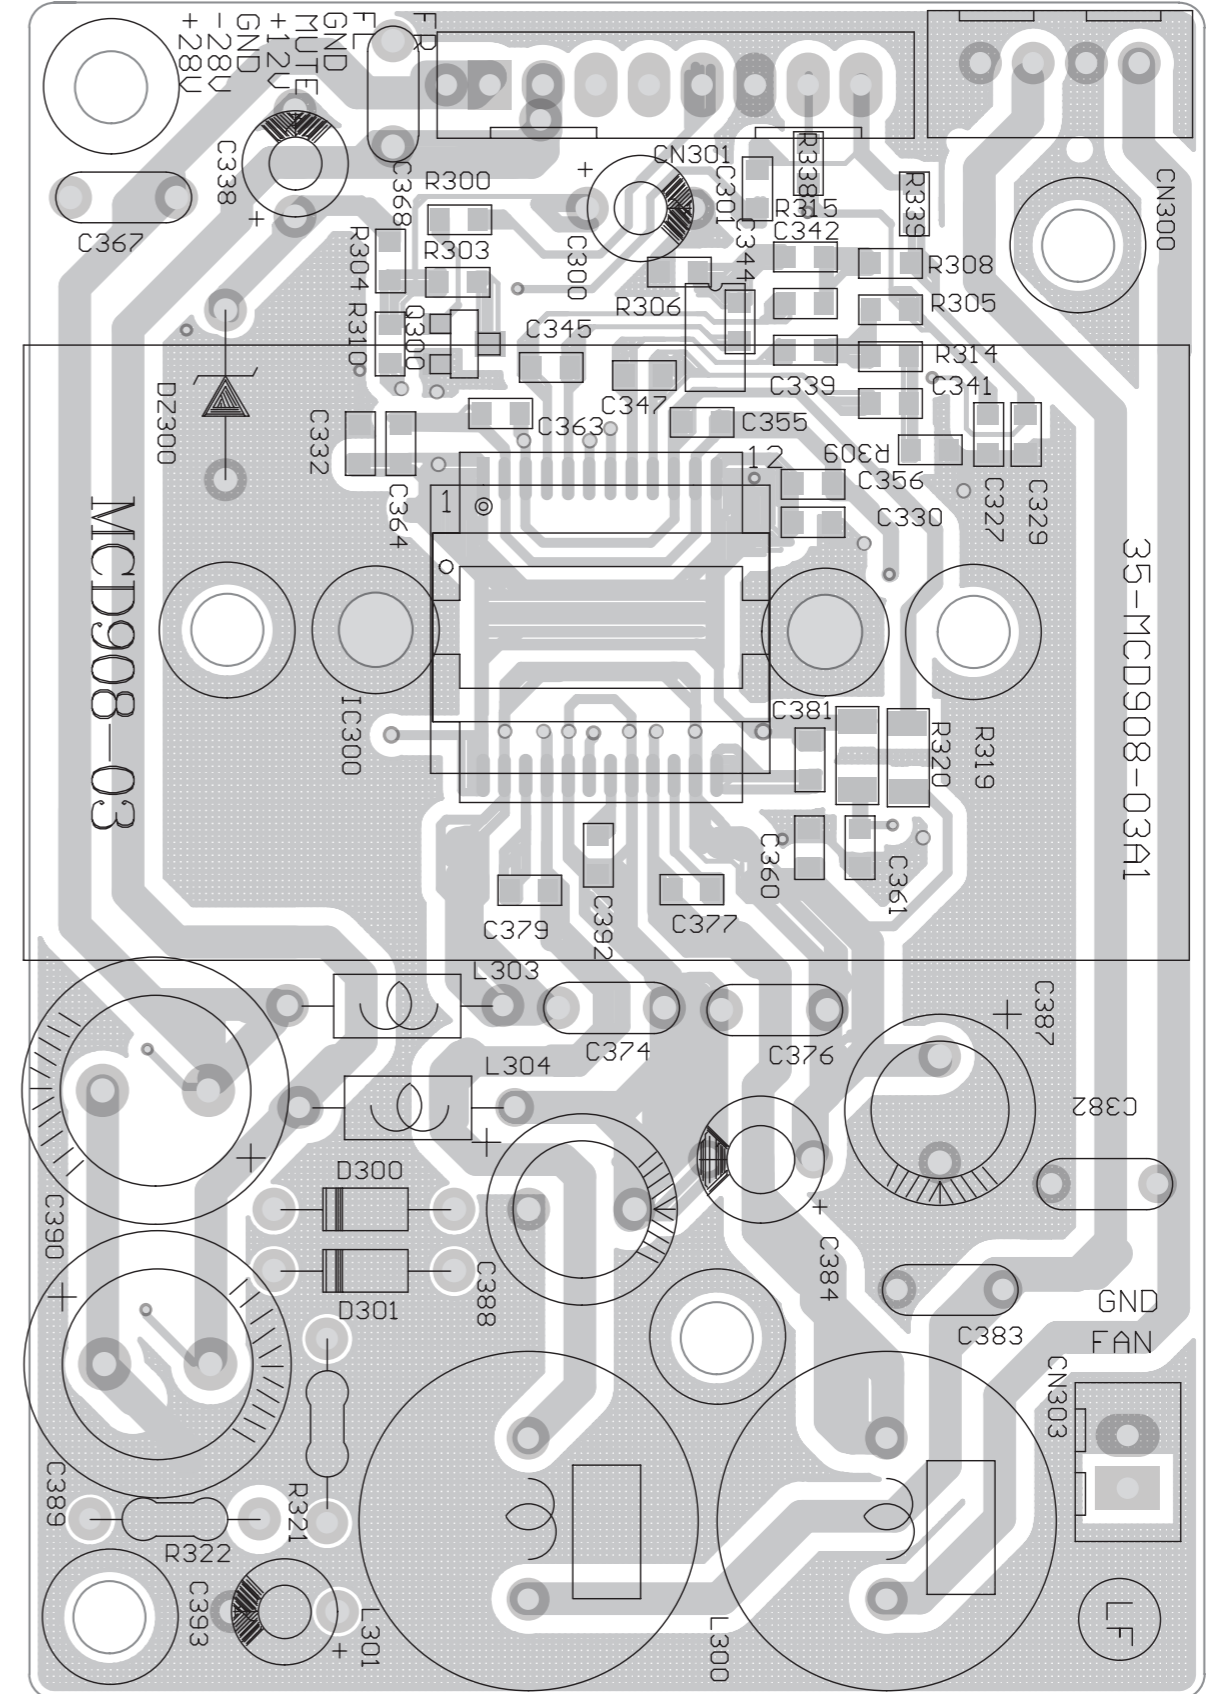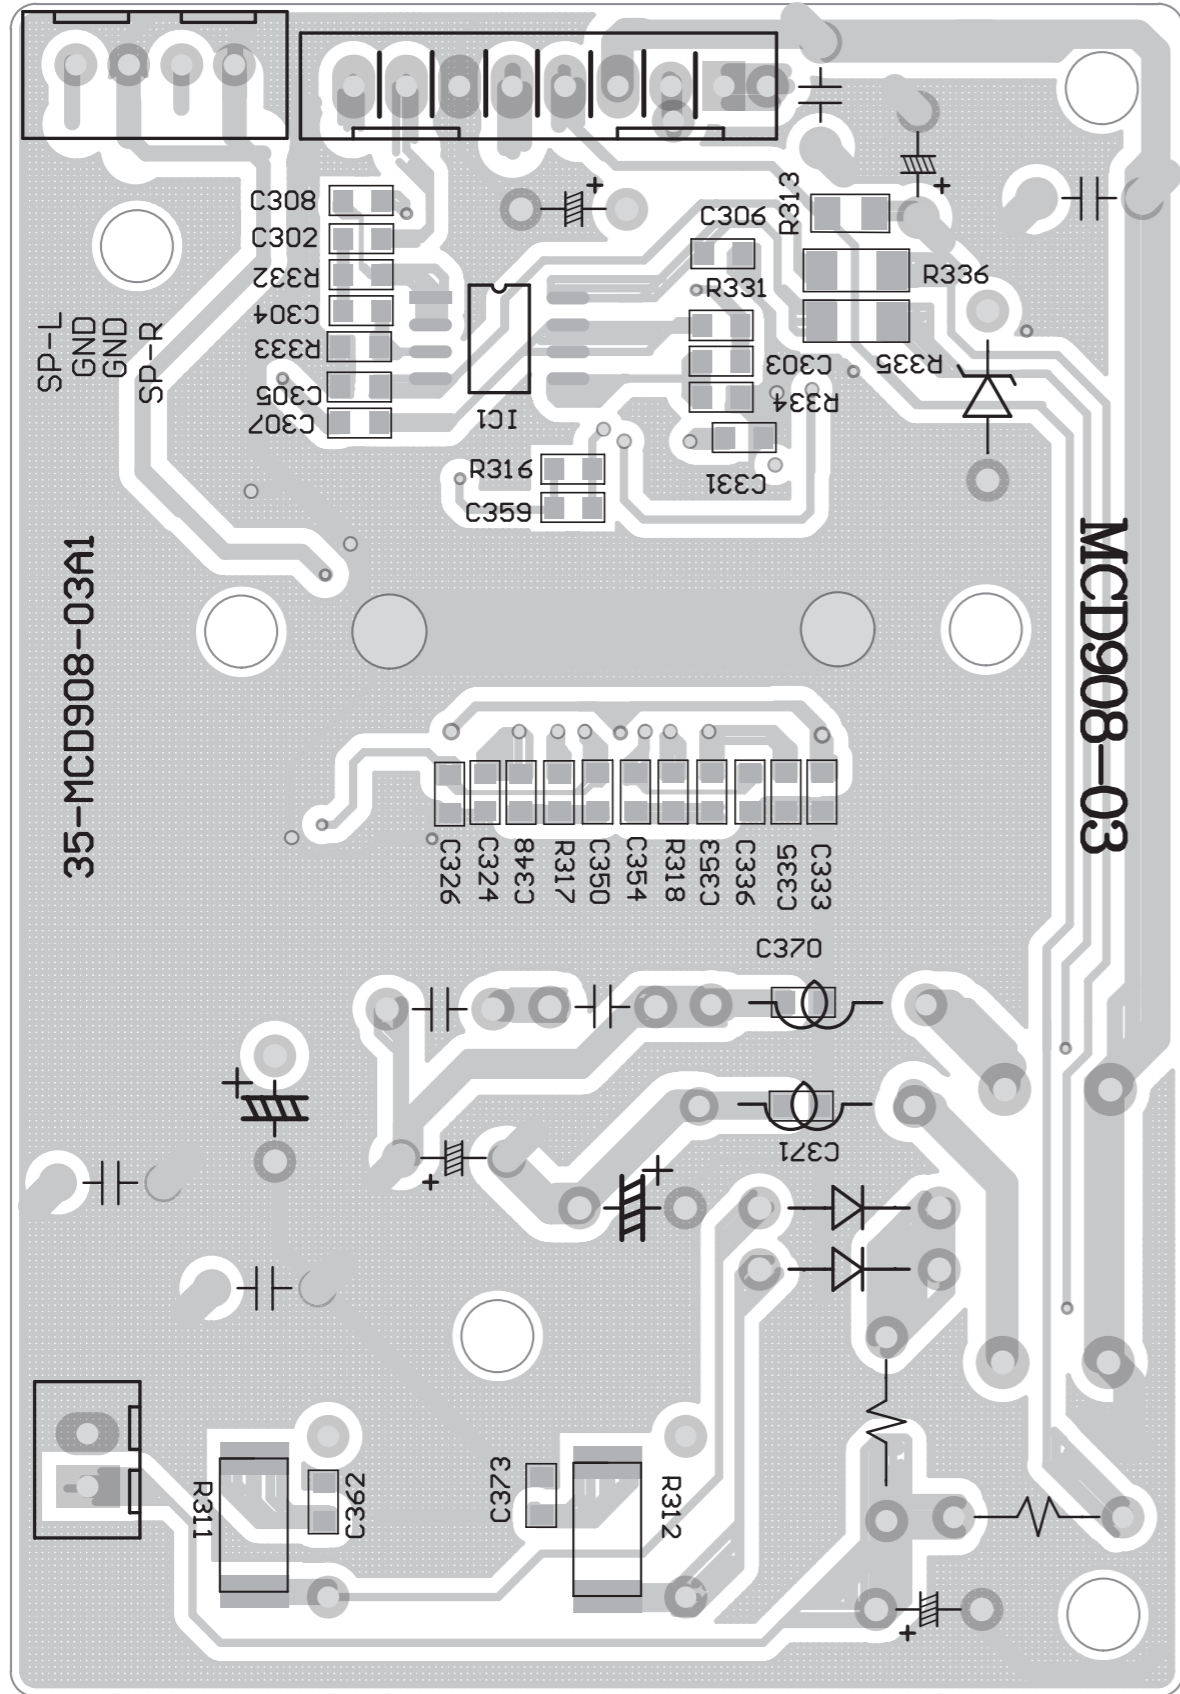




CIRCUIT DIAGRAM - CPU BOARD

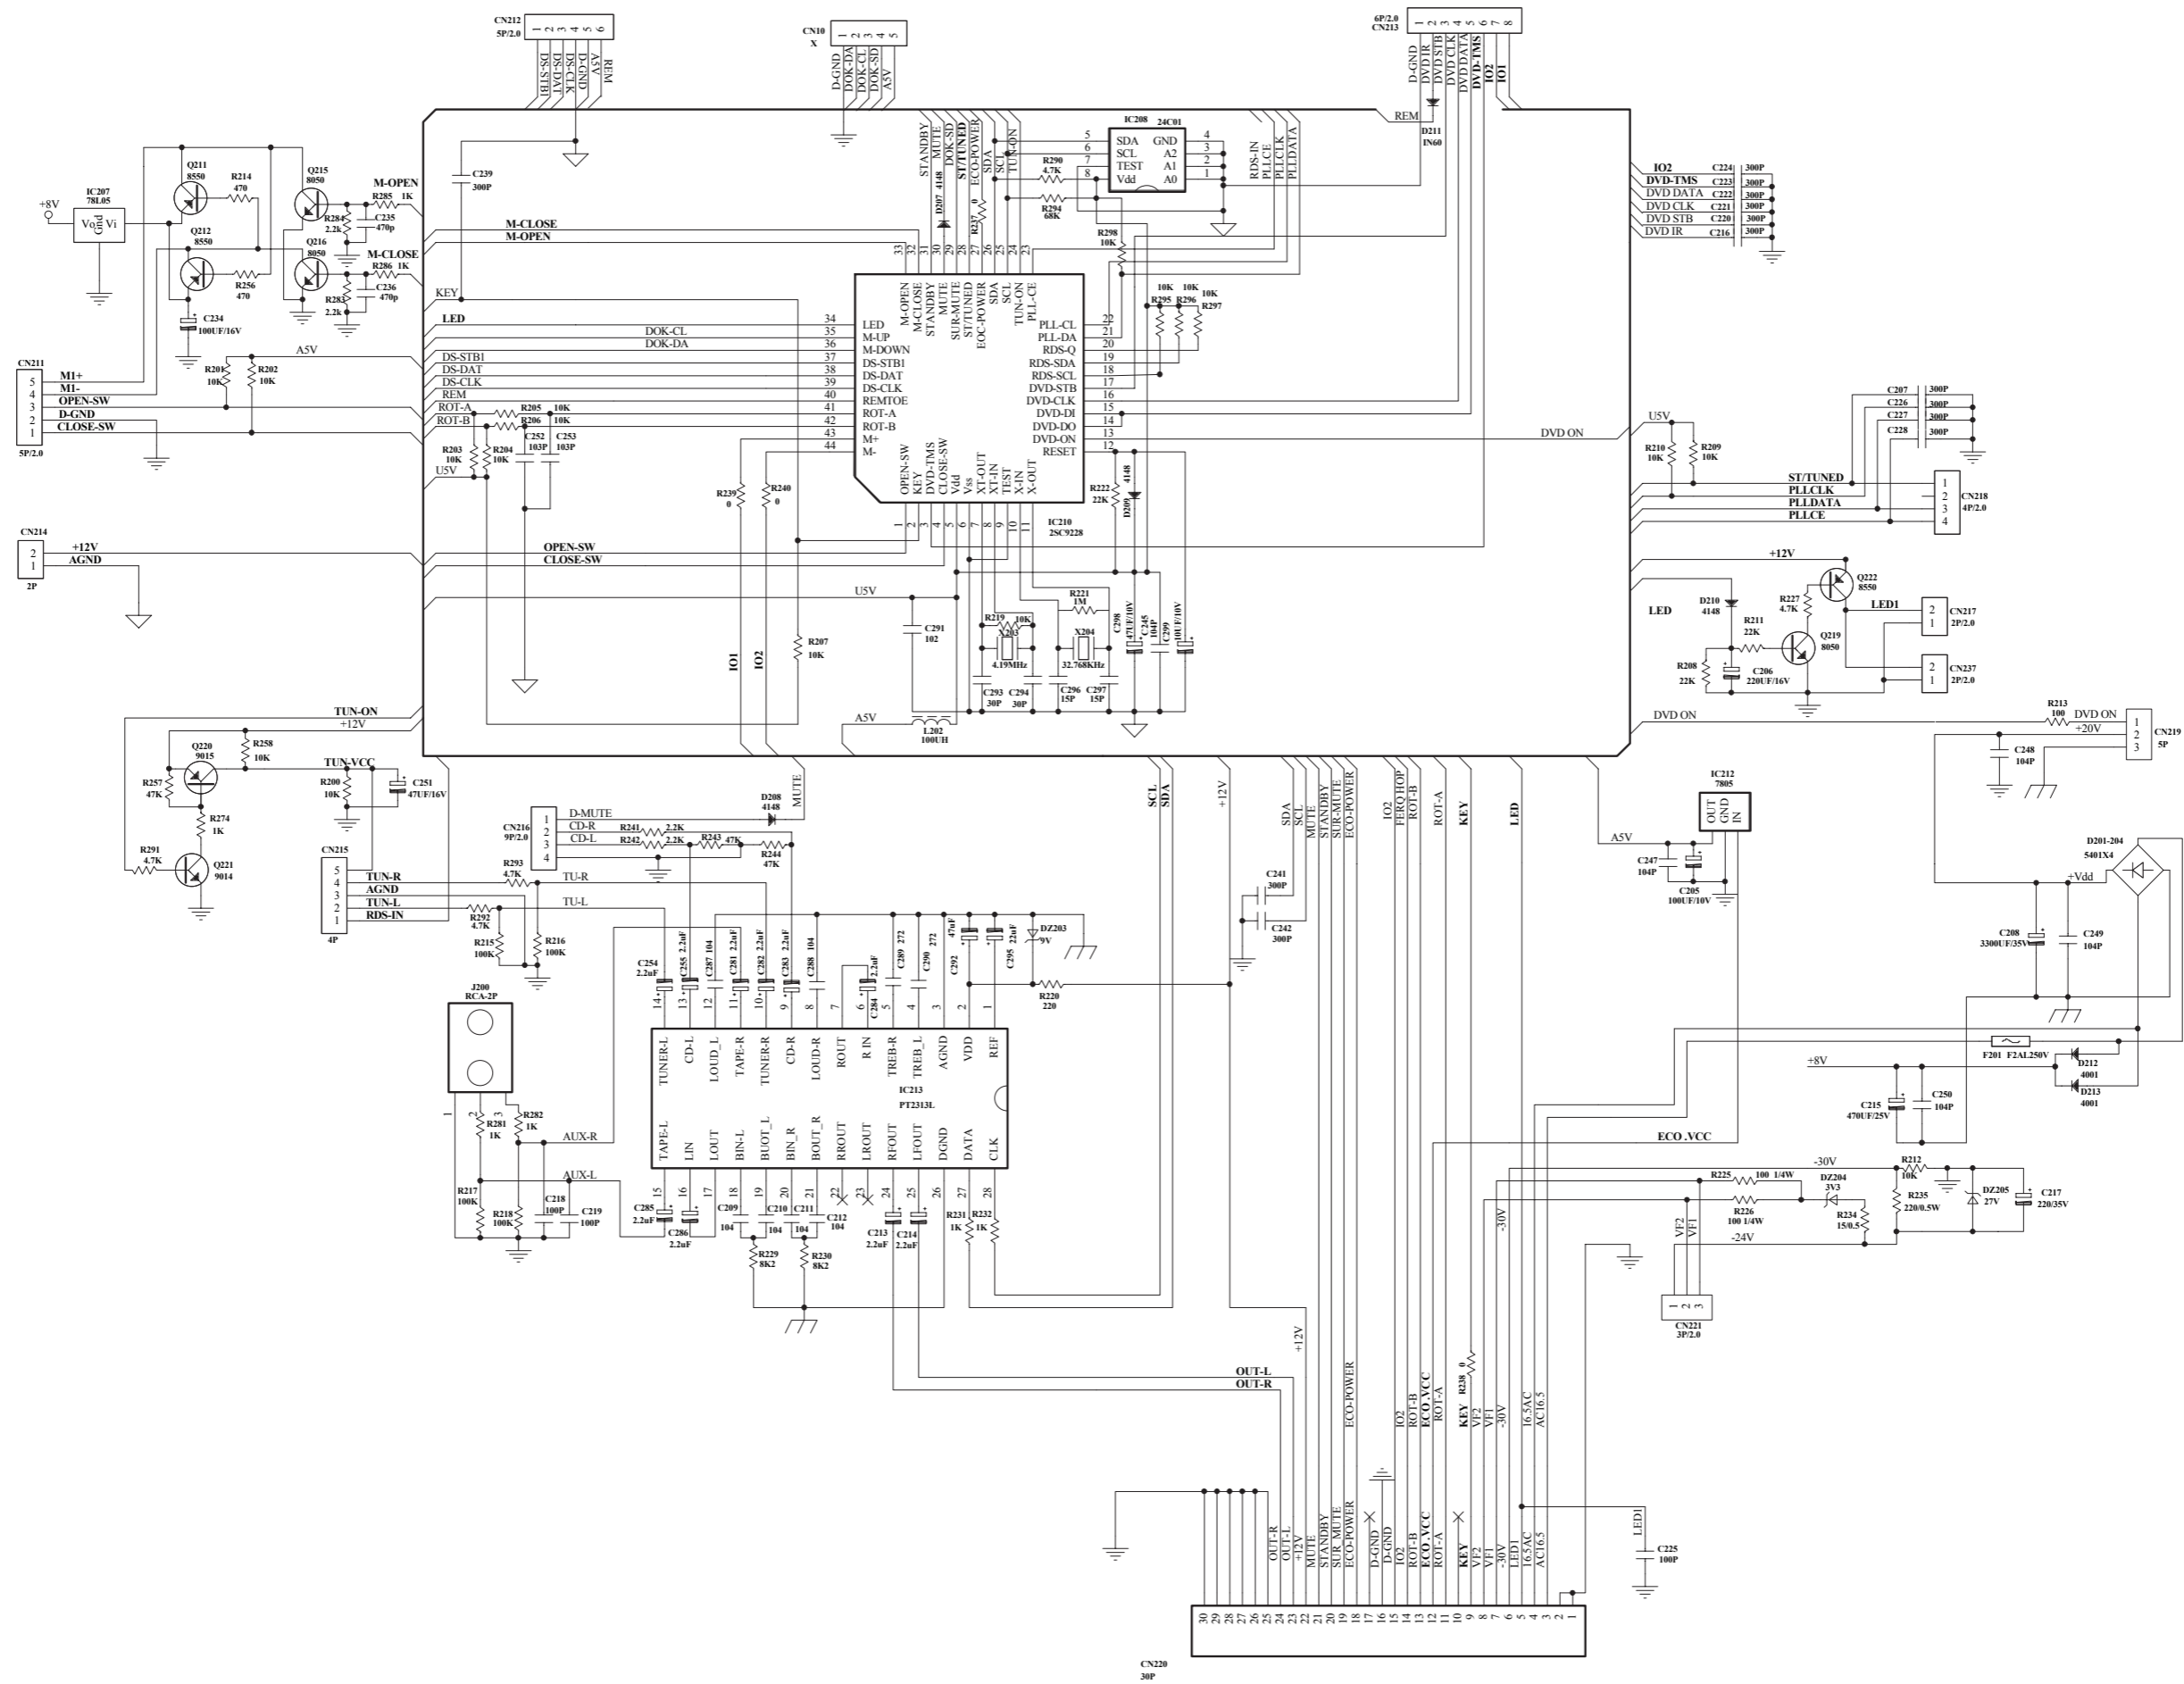


LAYOUT DIAGRAM - CPU BOARD

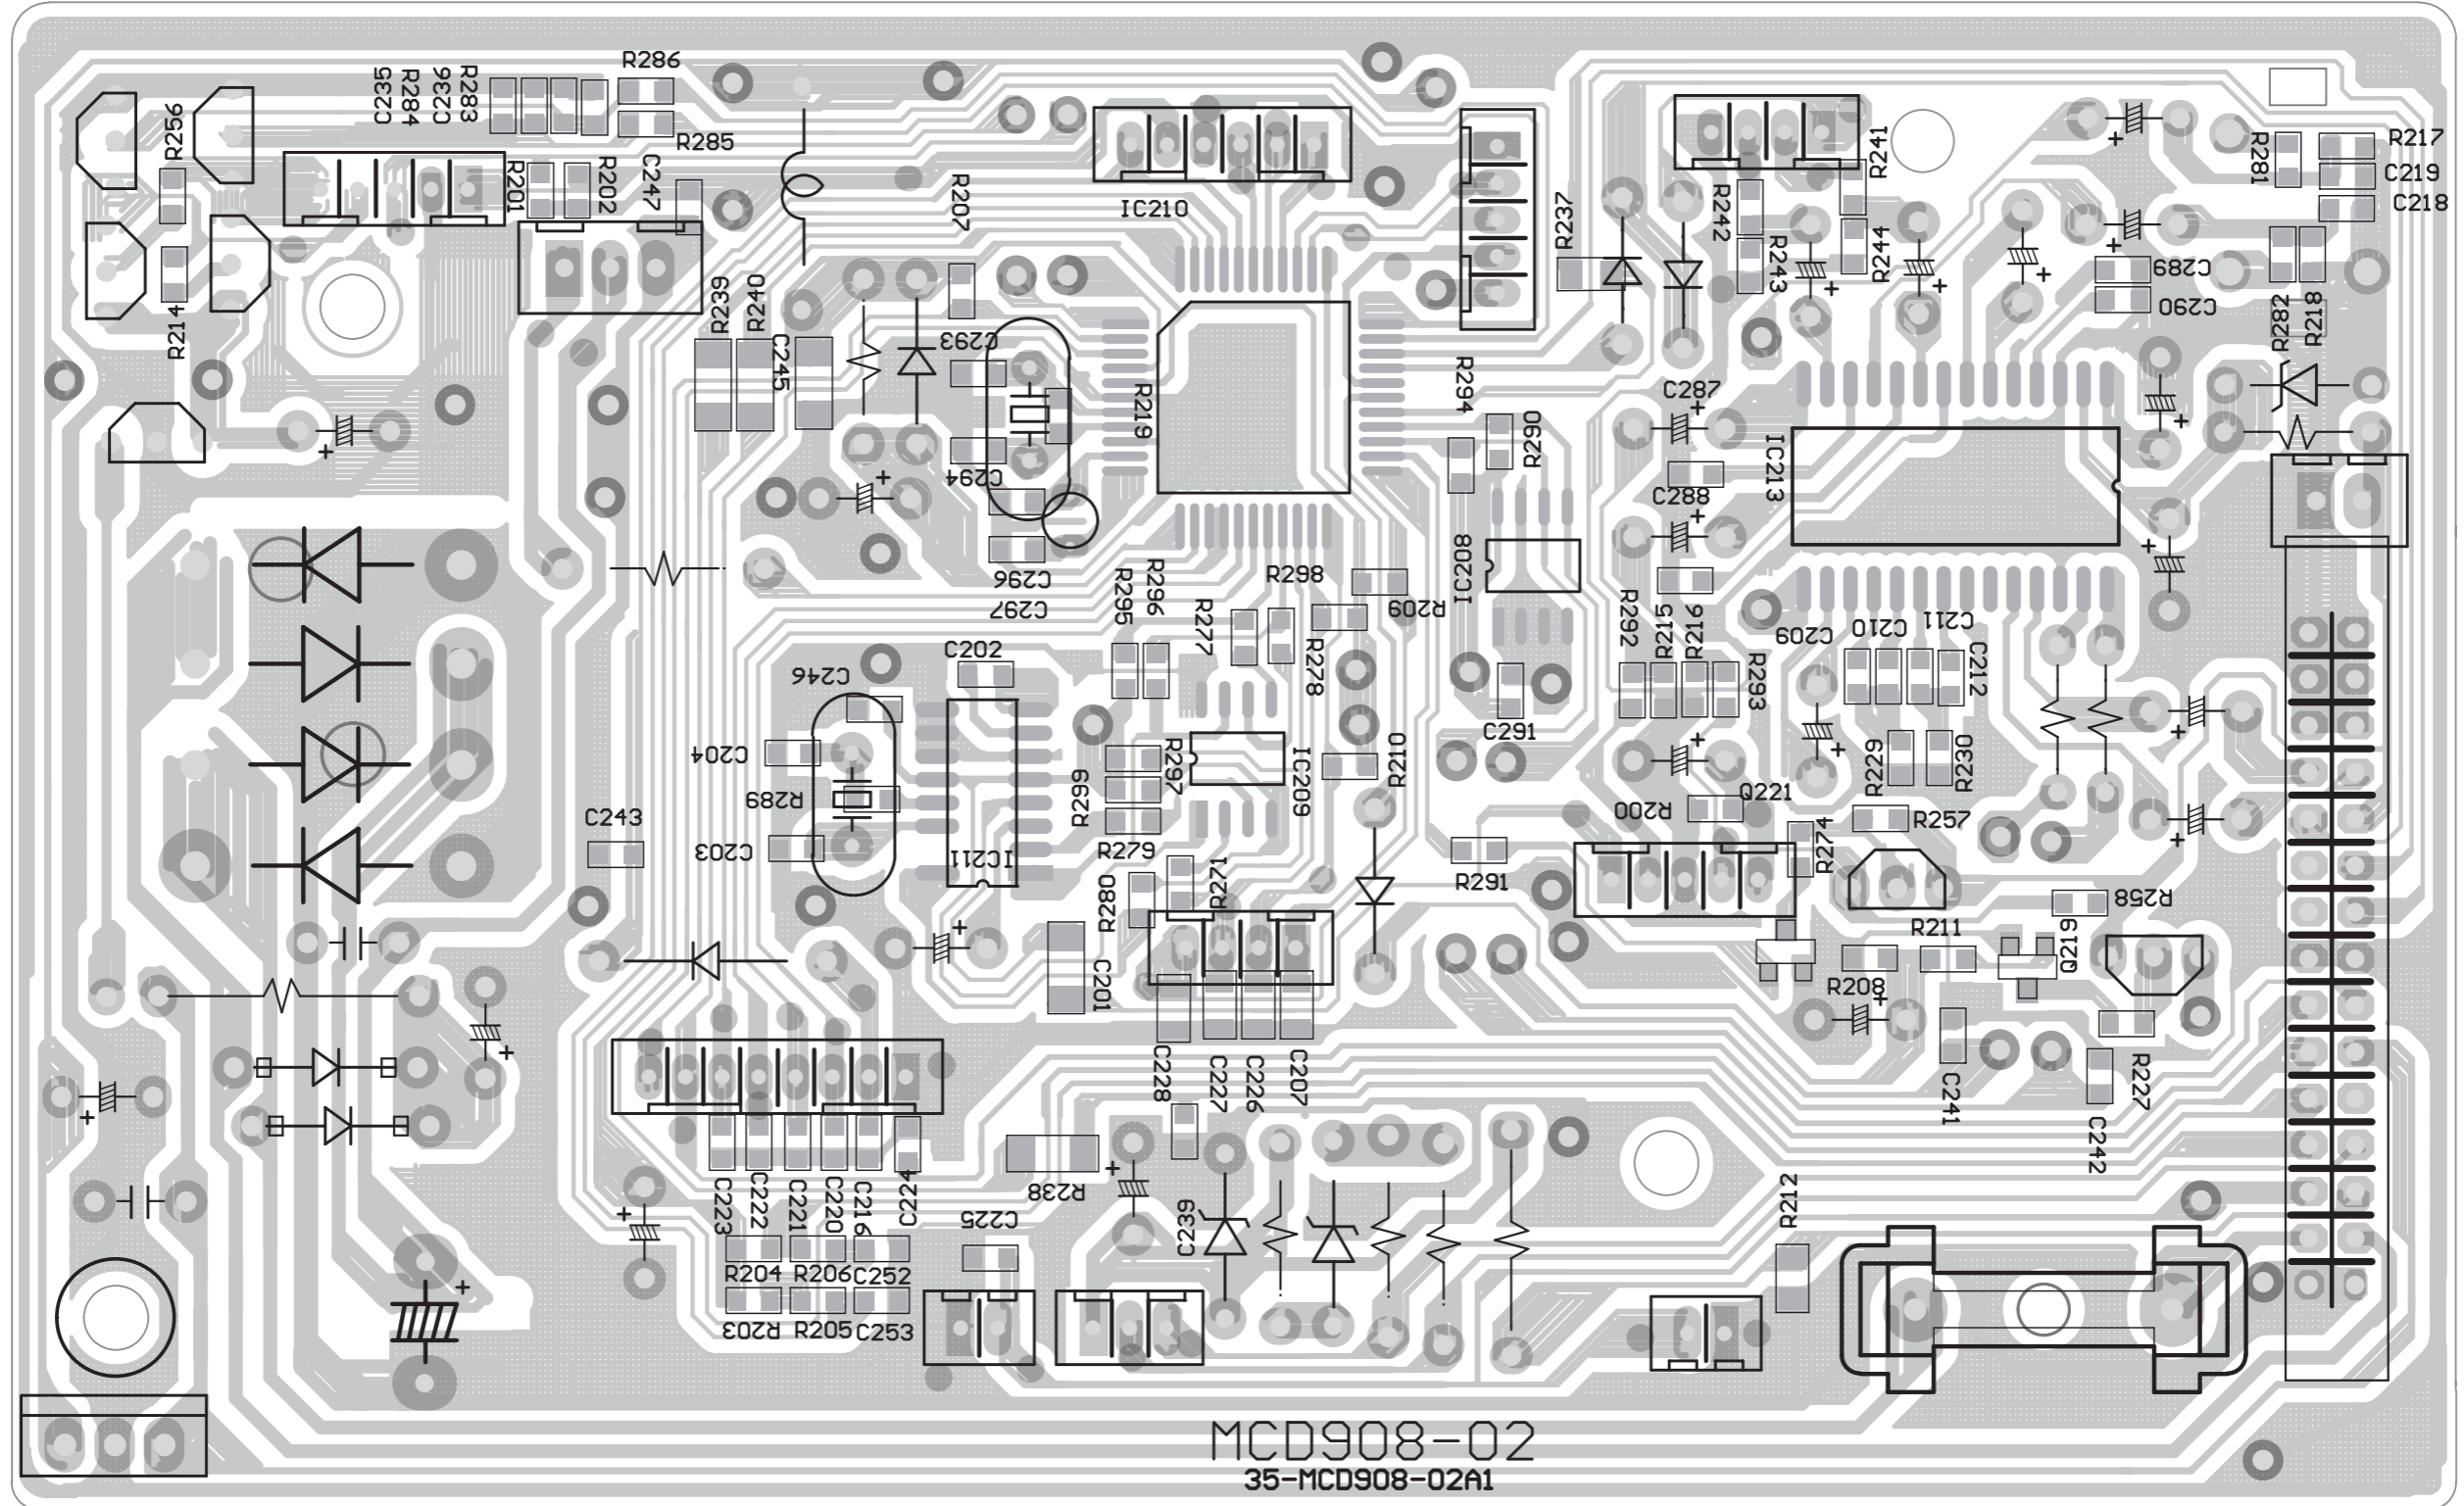

CIRCUIT DIAGRAM - POWER BOARD

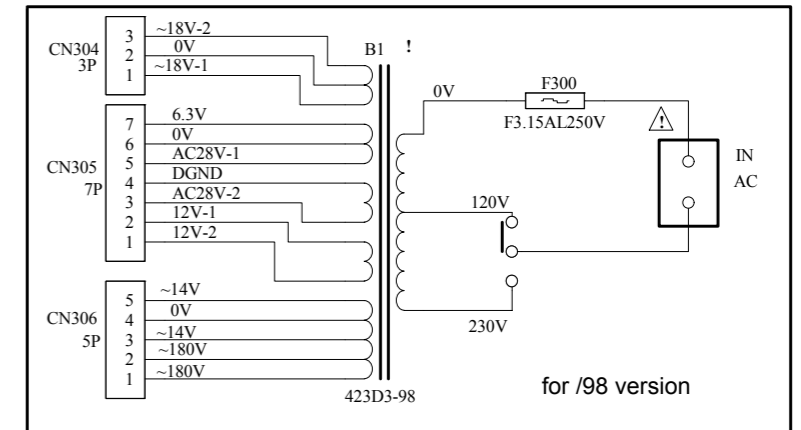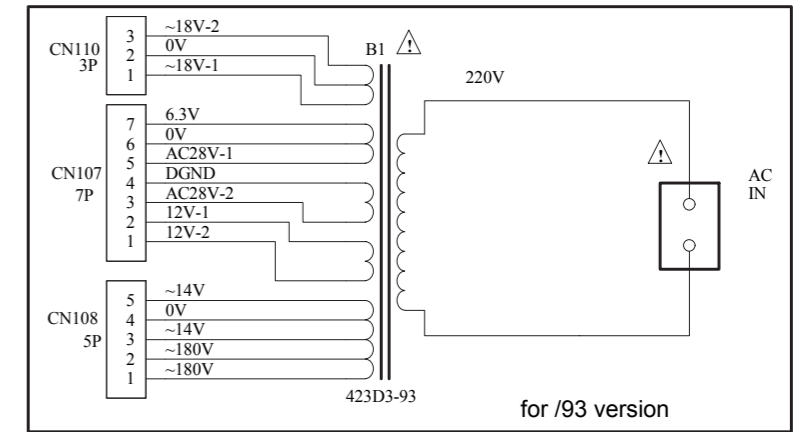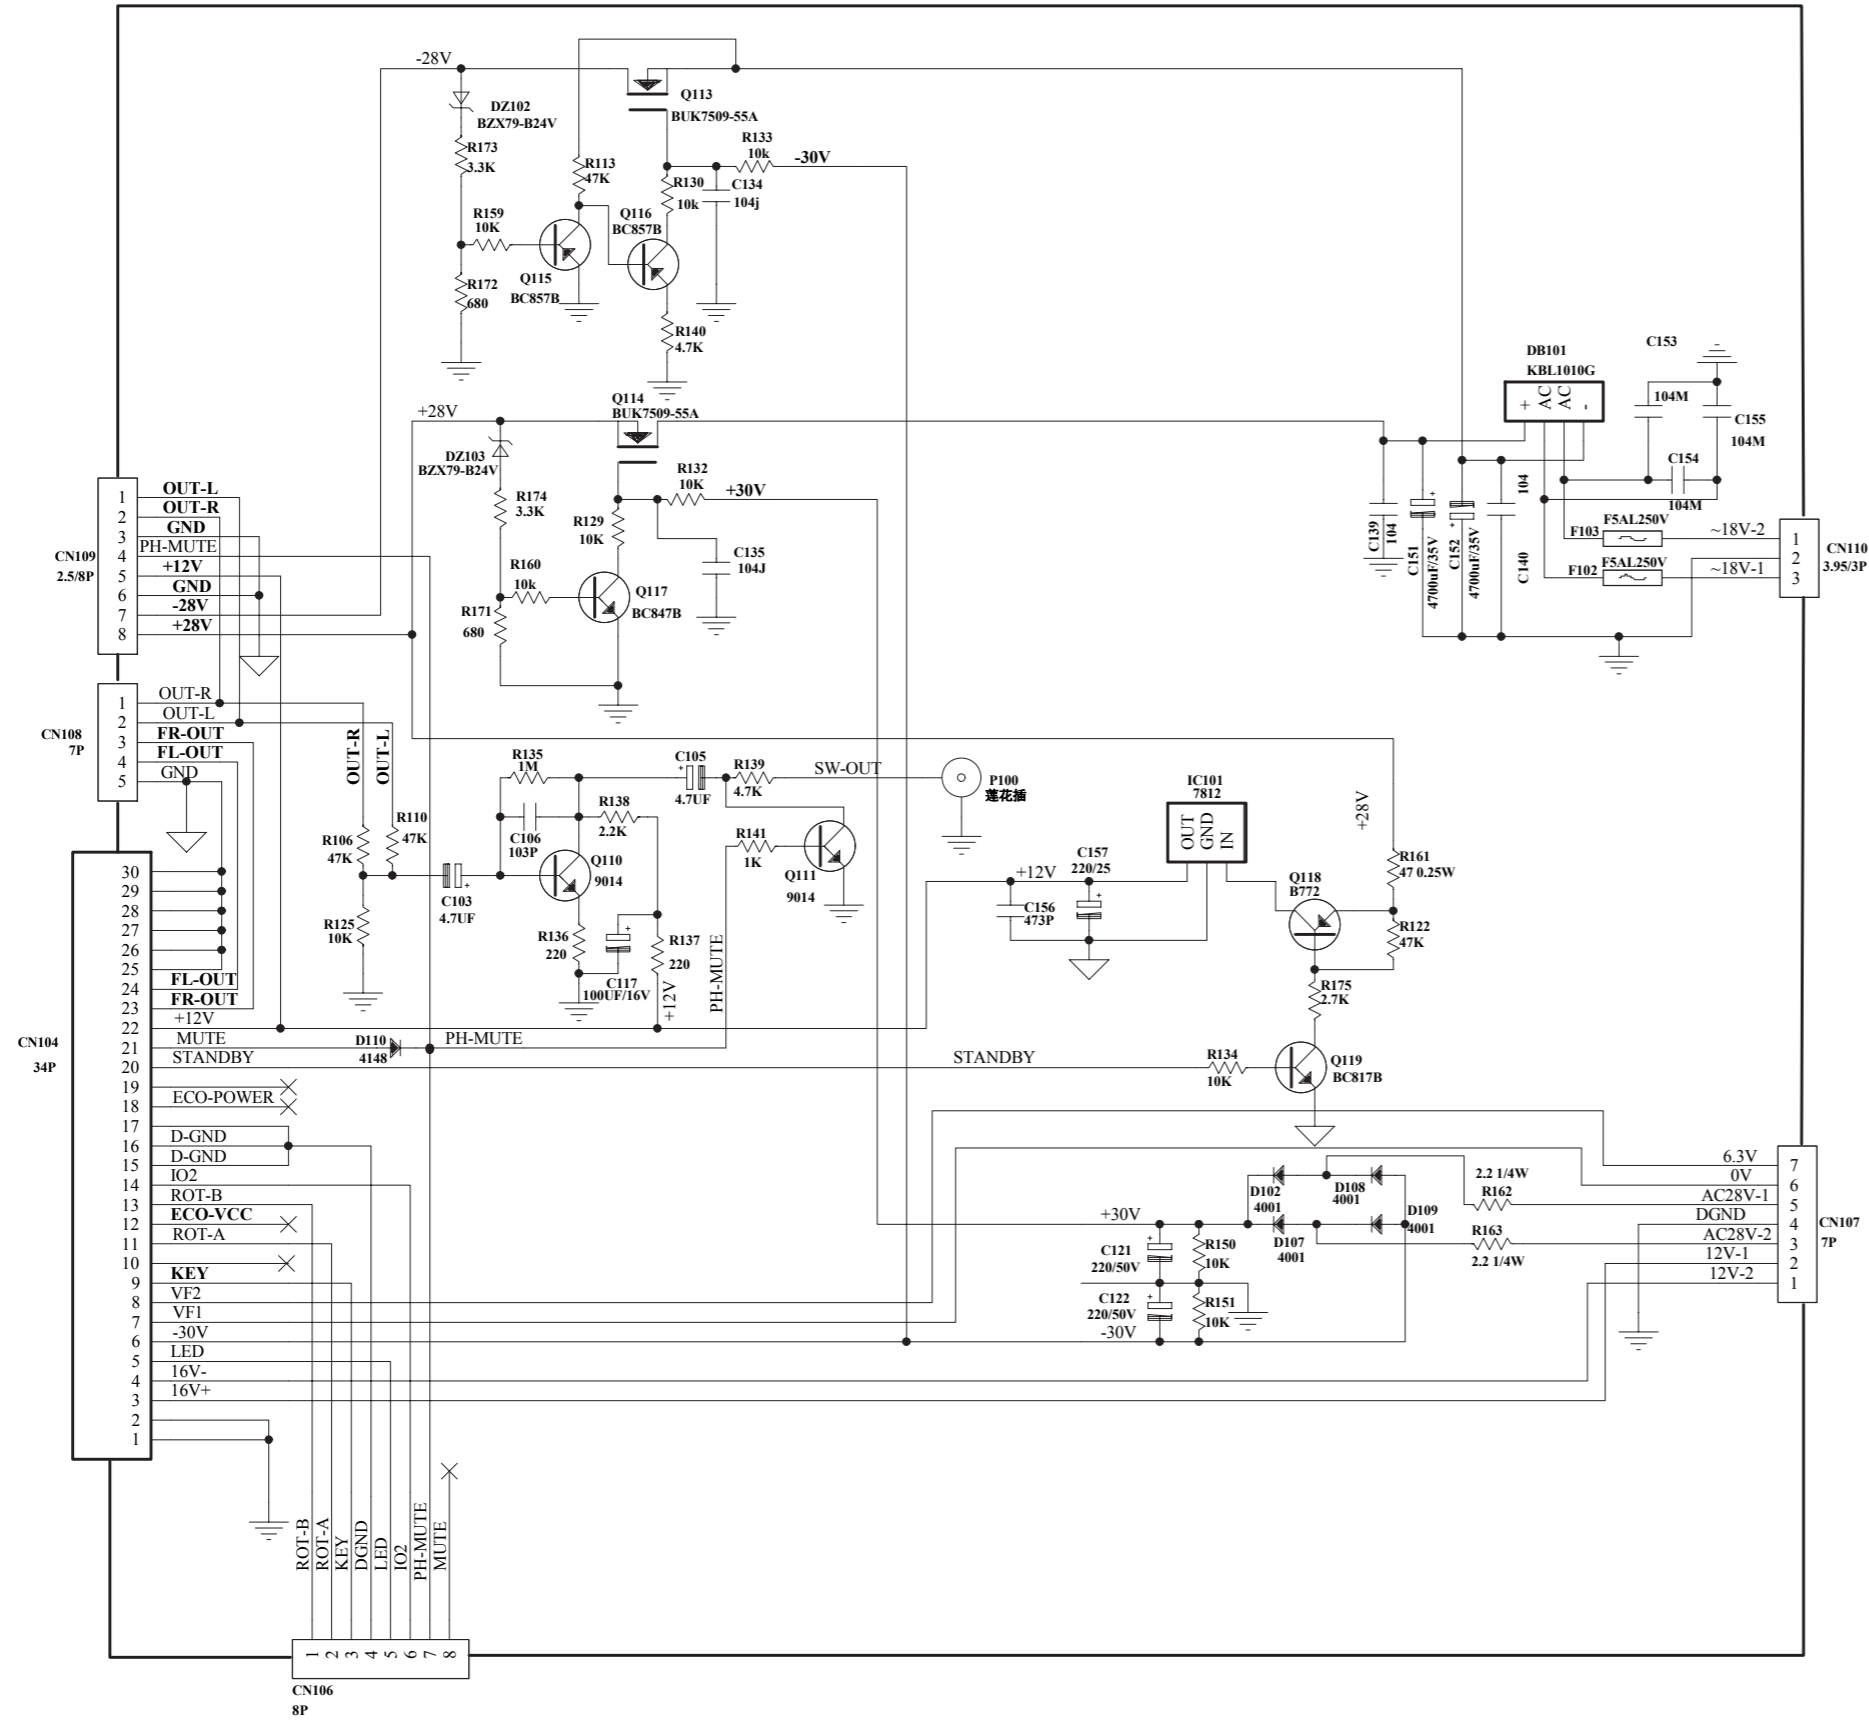


LAYOUT DIAGRAM - POWER BOARD

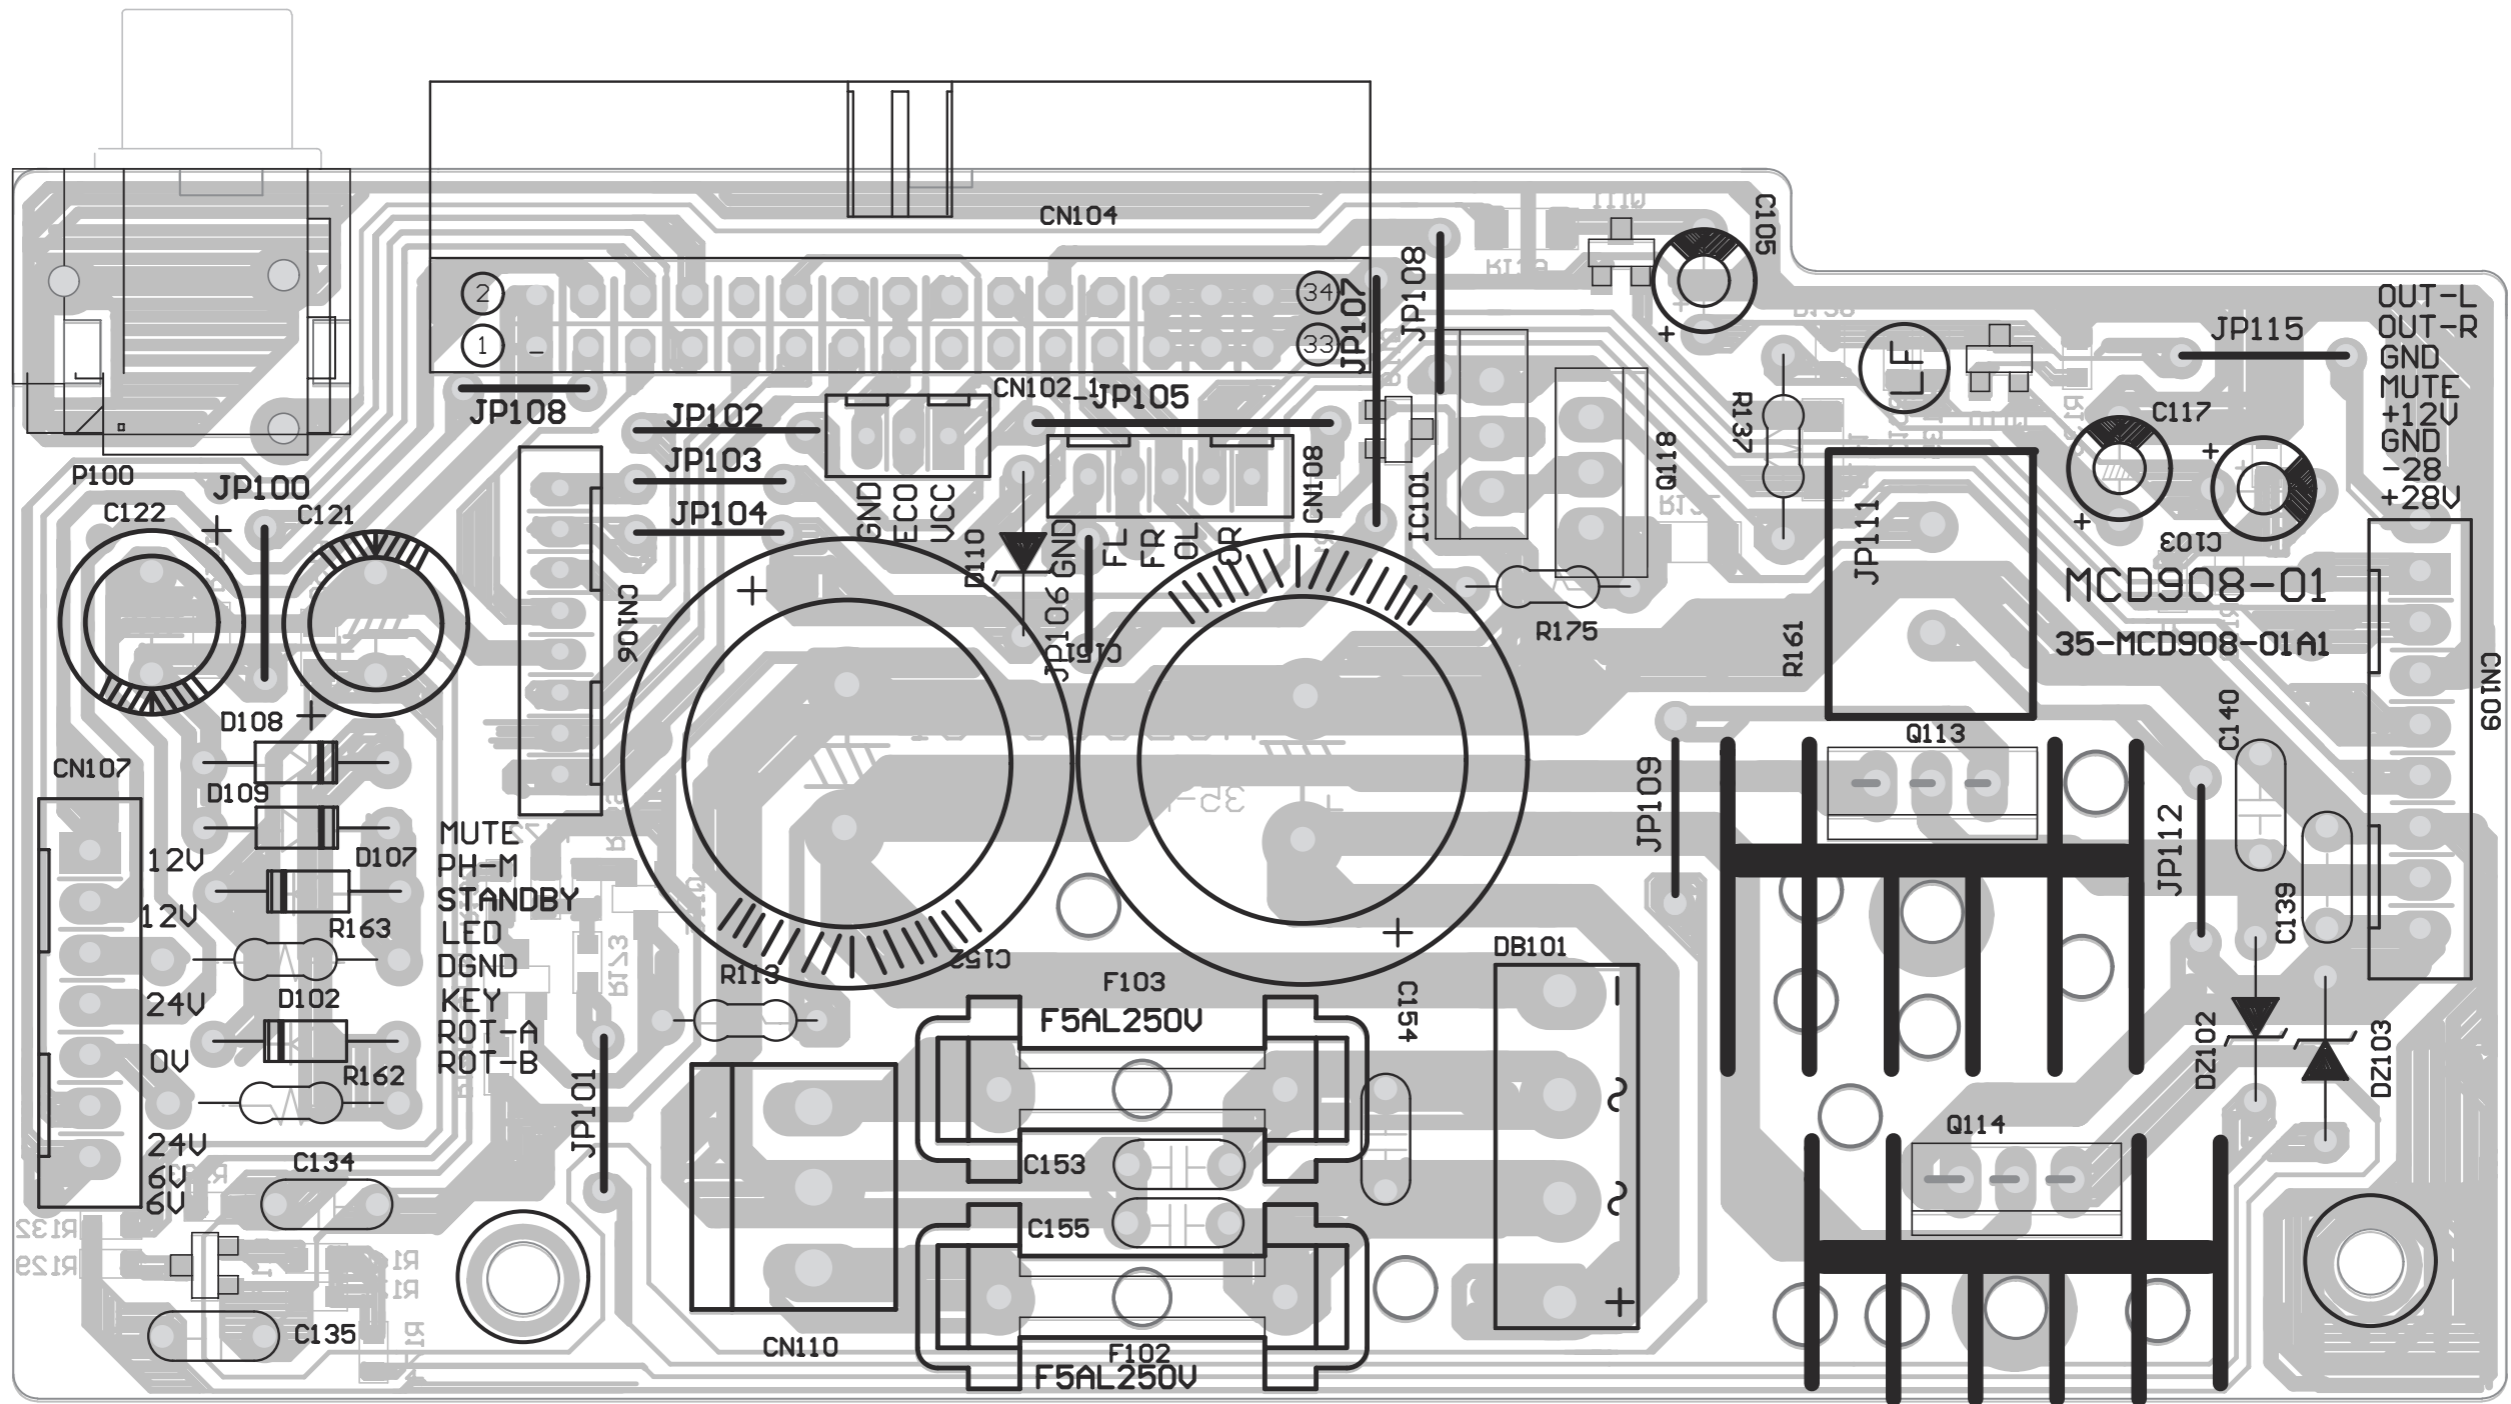

CIRCUIT DIAGRAM - DVD MPEG BOARD

MPEG is not repaired, diagram for reference only.

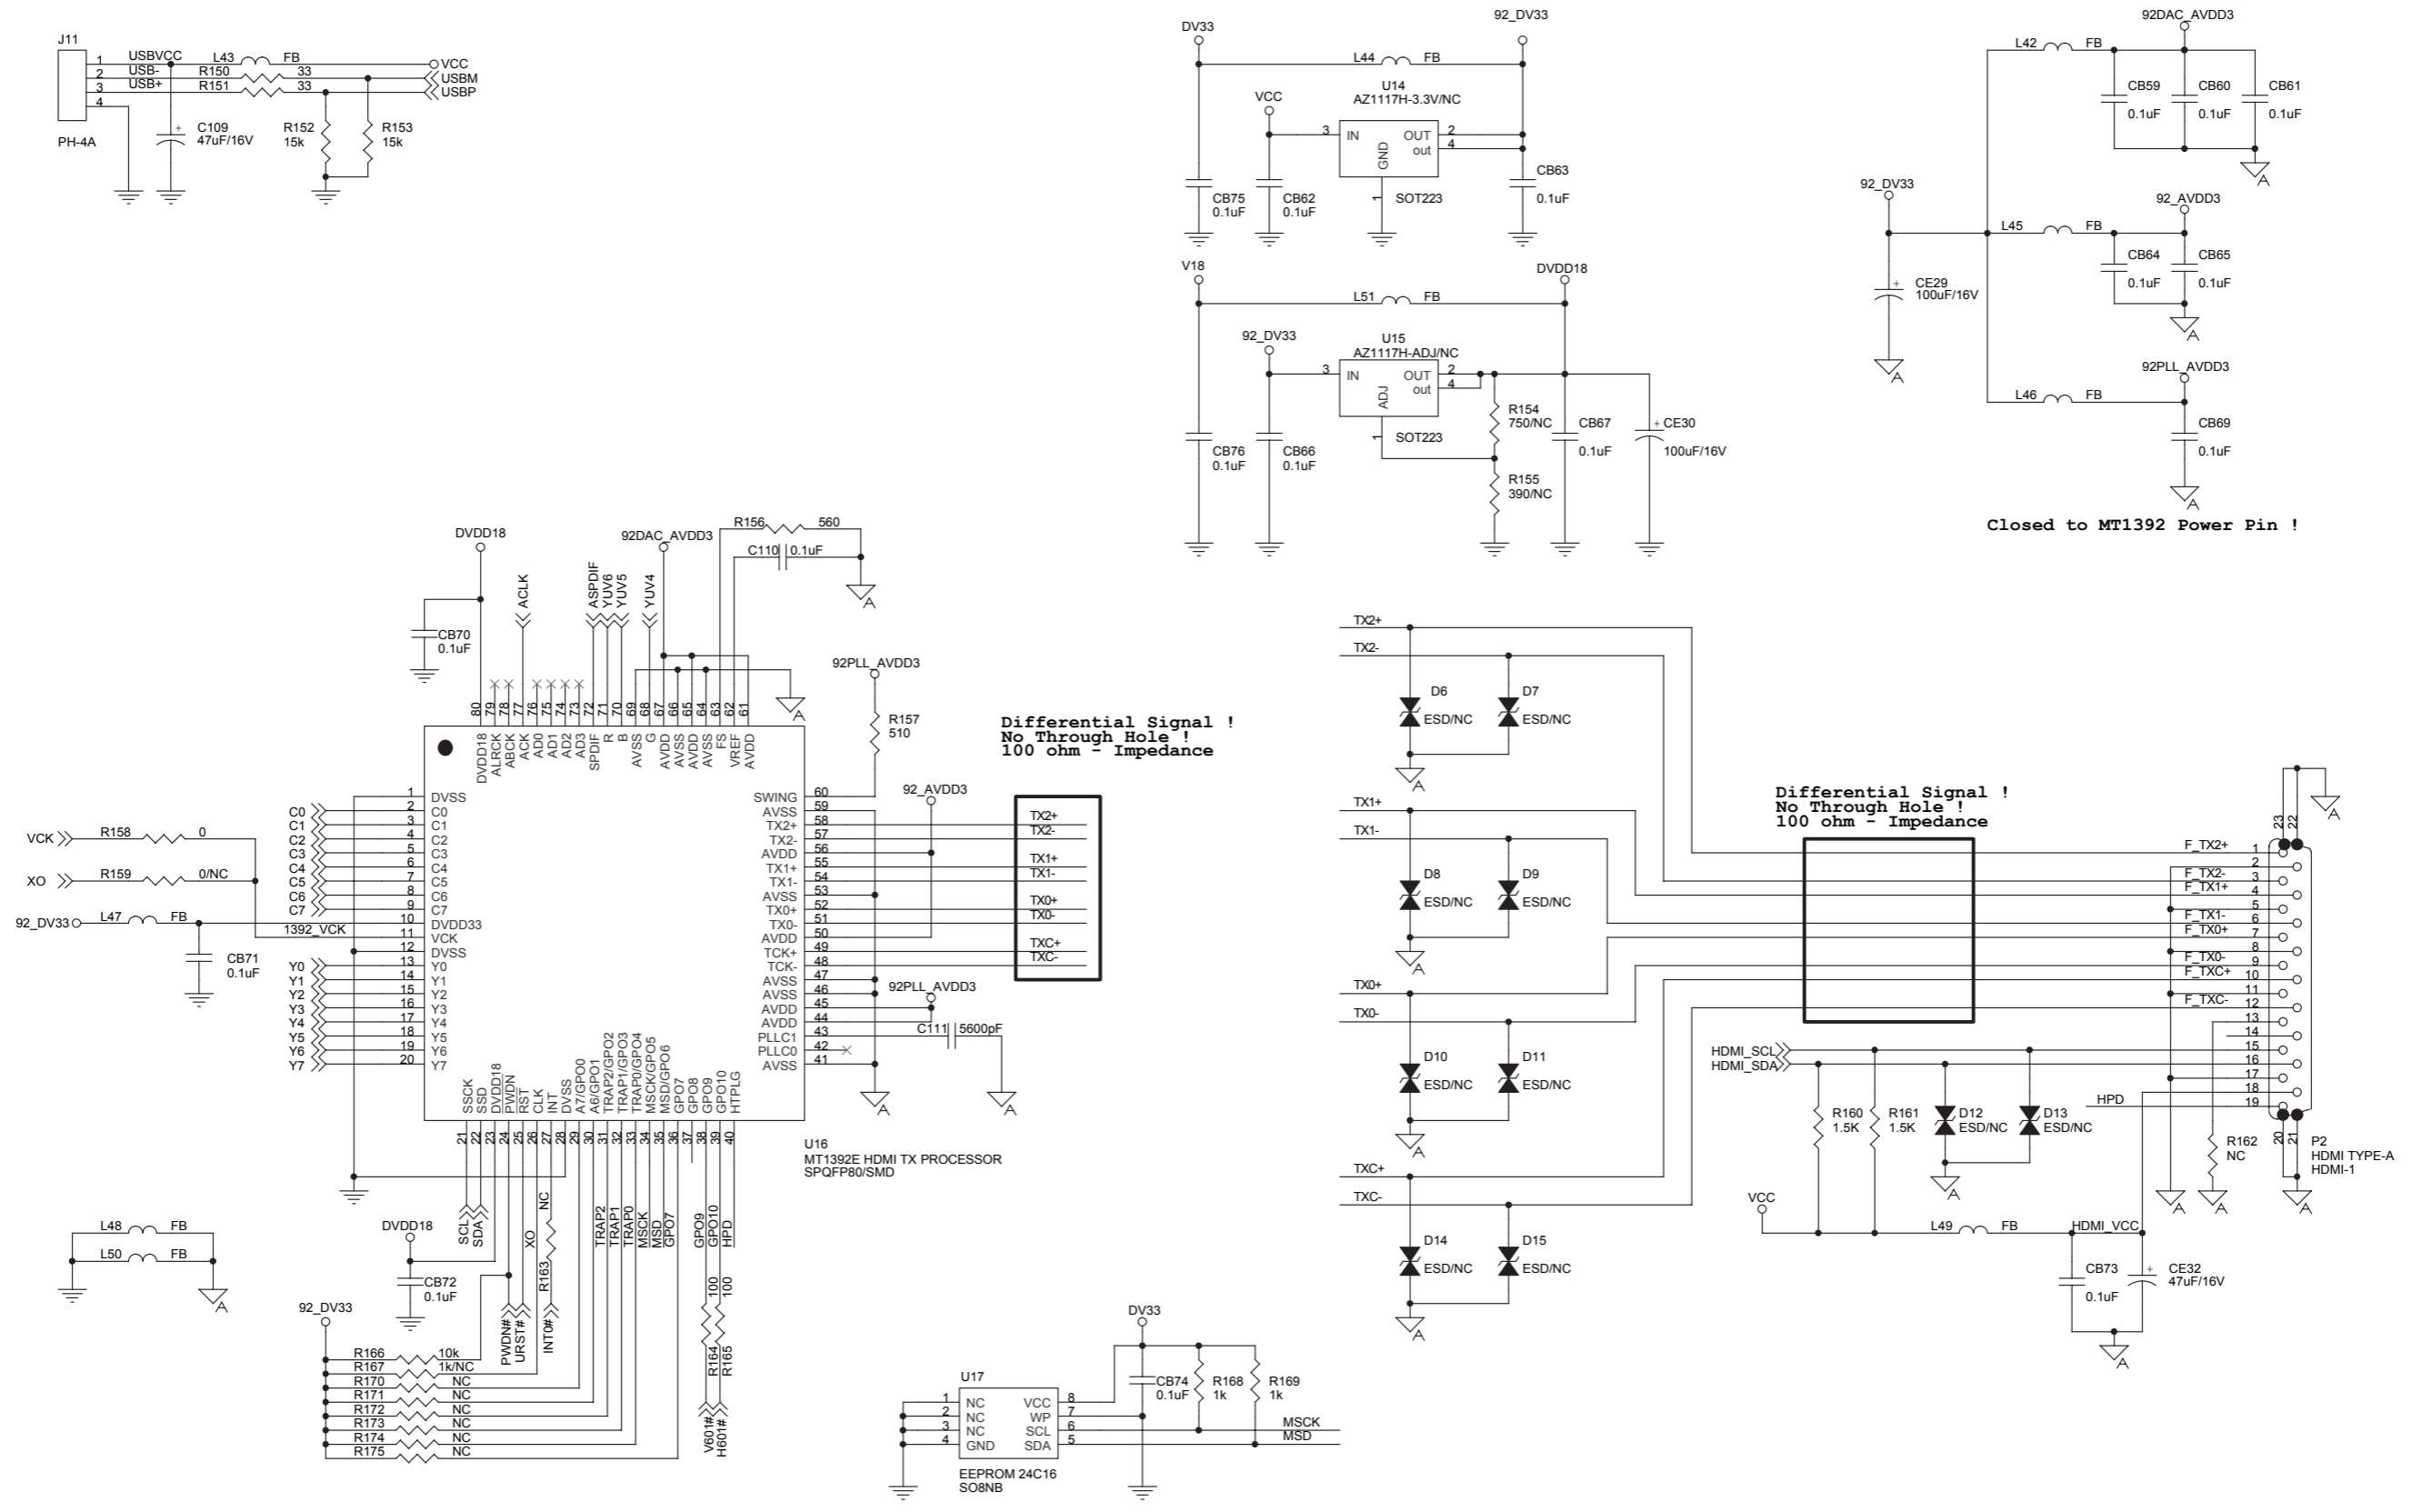


















Differential Signal!
No Through Hole!
100 ohm - Impedance

Differential Signal!
No Through Hole!
100 ohm - Impedance

Closed to MT1392 Power Pin !


CIRCUIT DIAGRAM - DVD MPEG BOARD

 MPEG is not repaired, diagram for reference only.

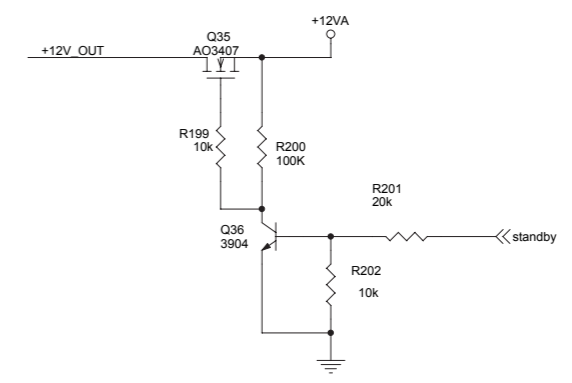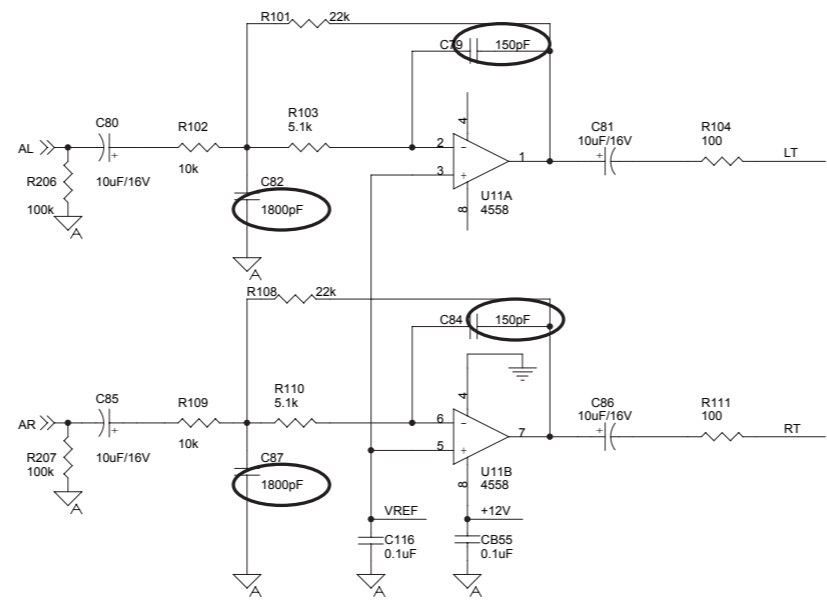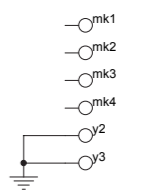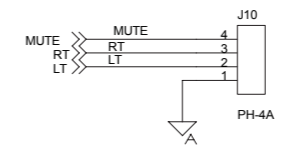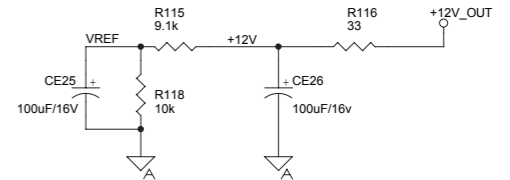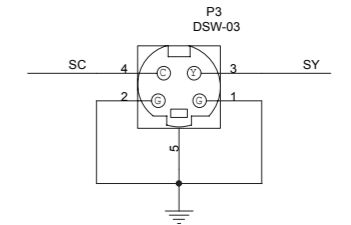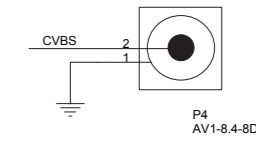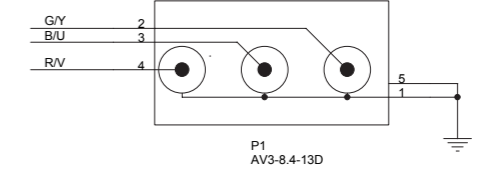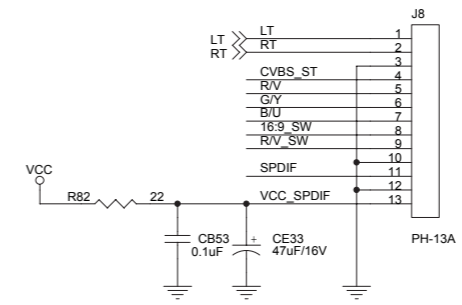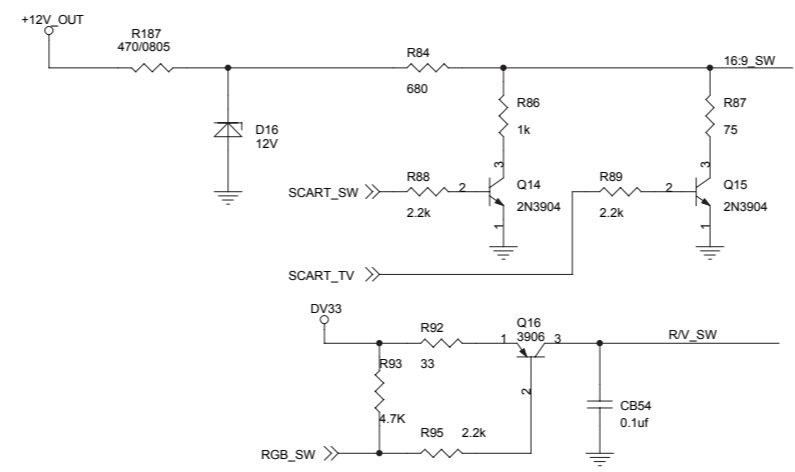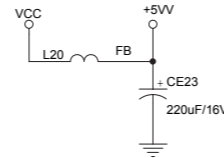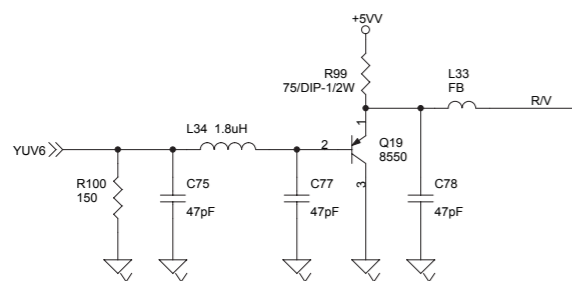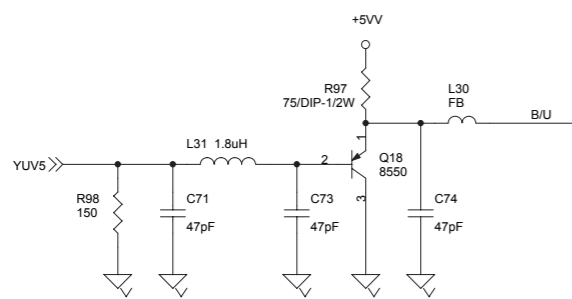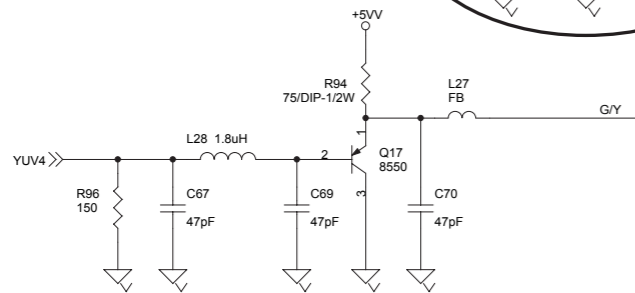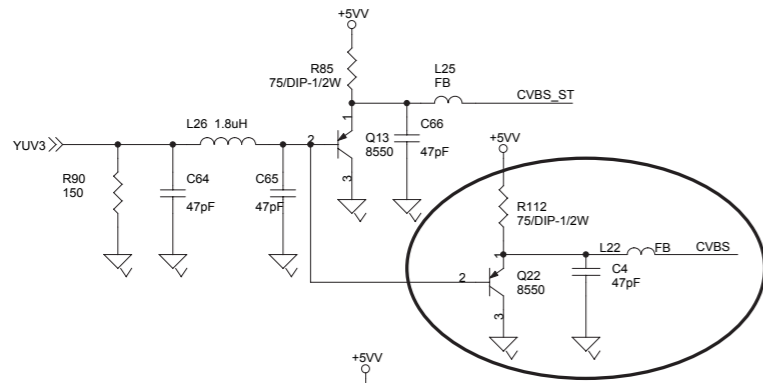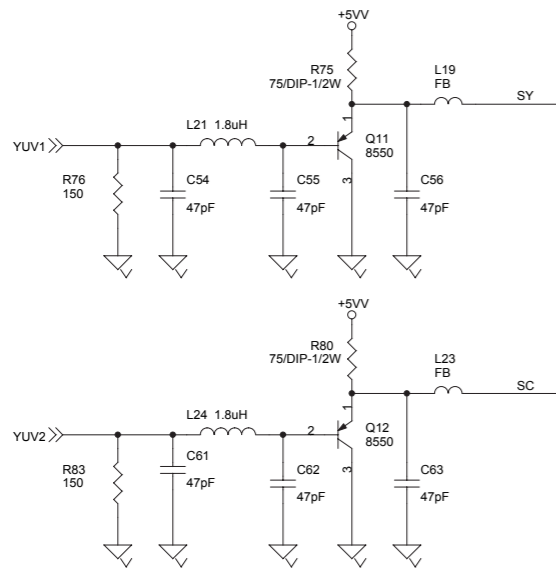


CIRCUIT DIAGRAM - DVD MPEG BOARD

MPEG is not repaired, diagram for reference only.

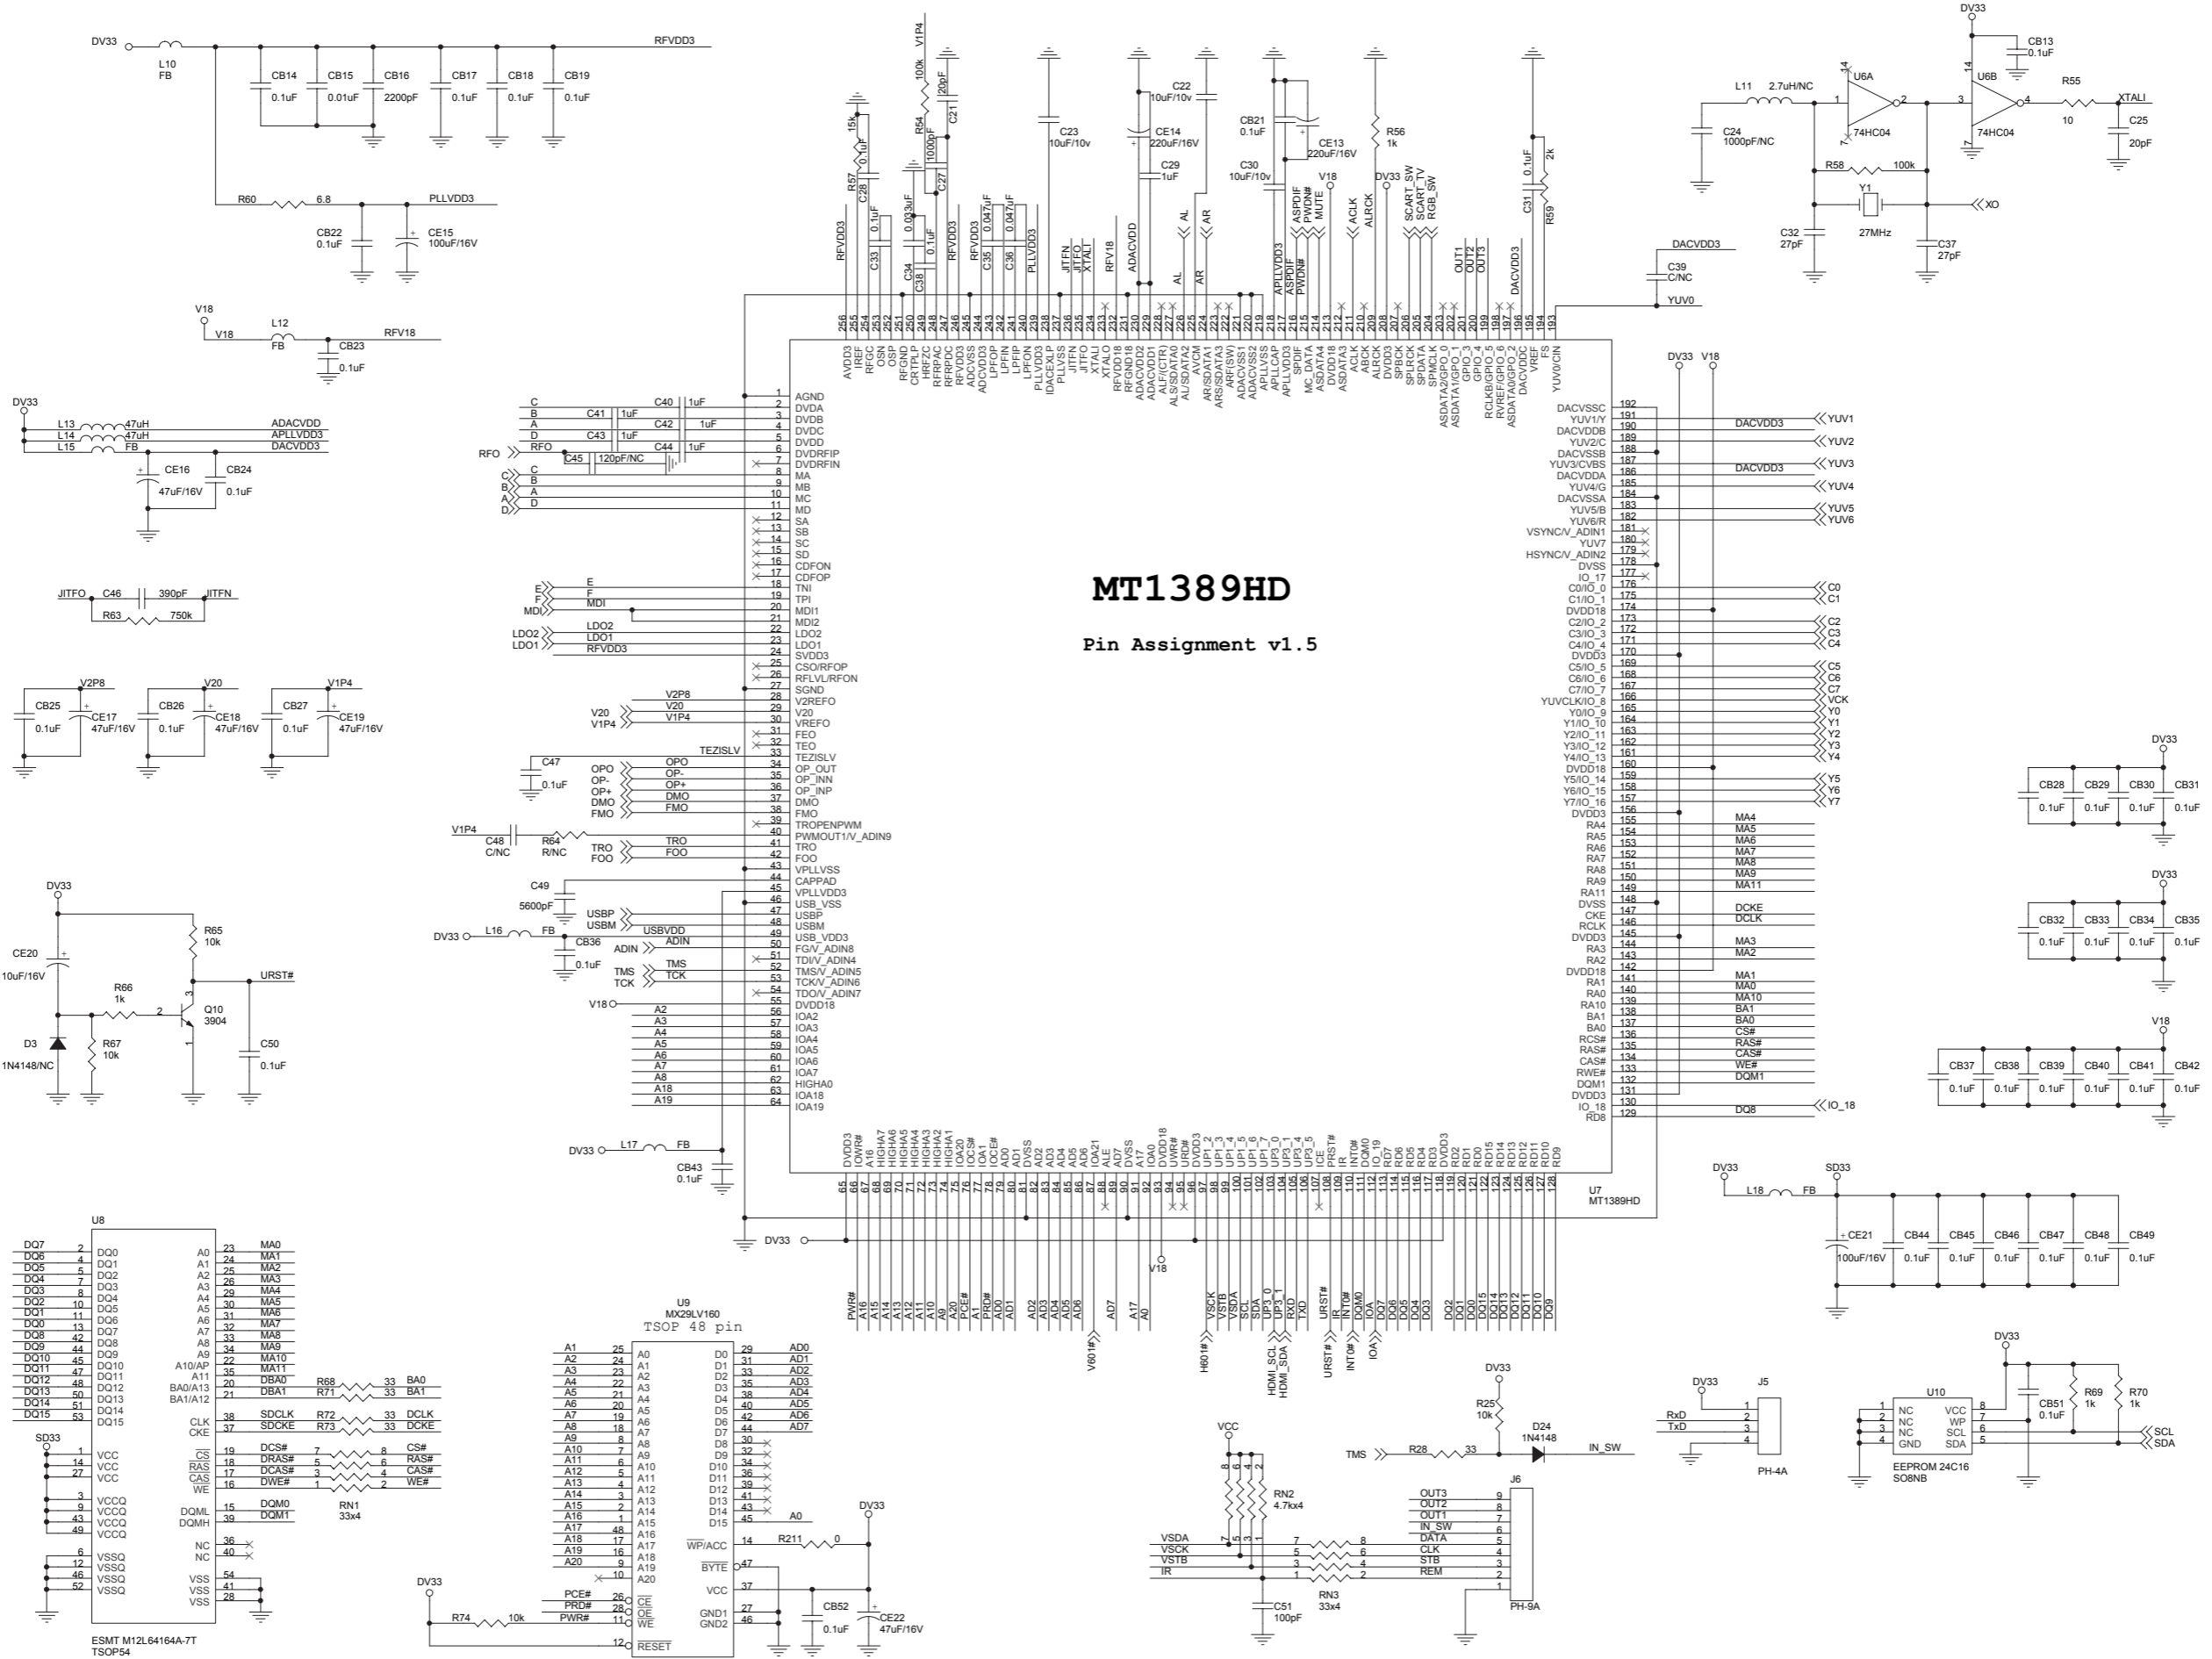


LAYOUT DIAGRAM - DVD MPEG BOARD
 MPEG is not repaired, diagram for reference only.

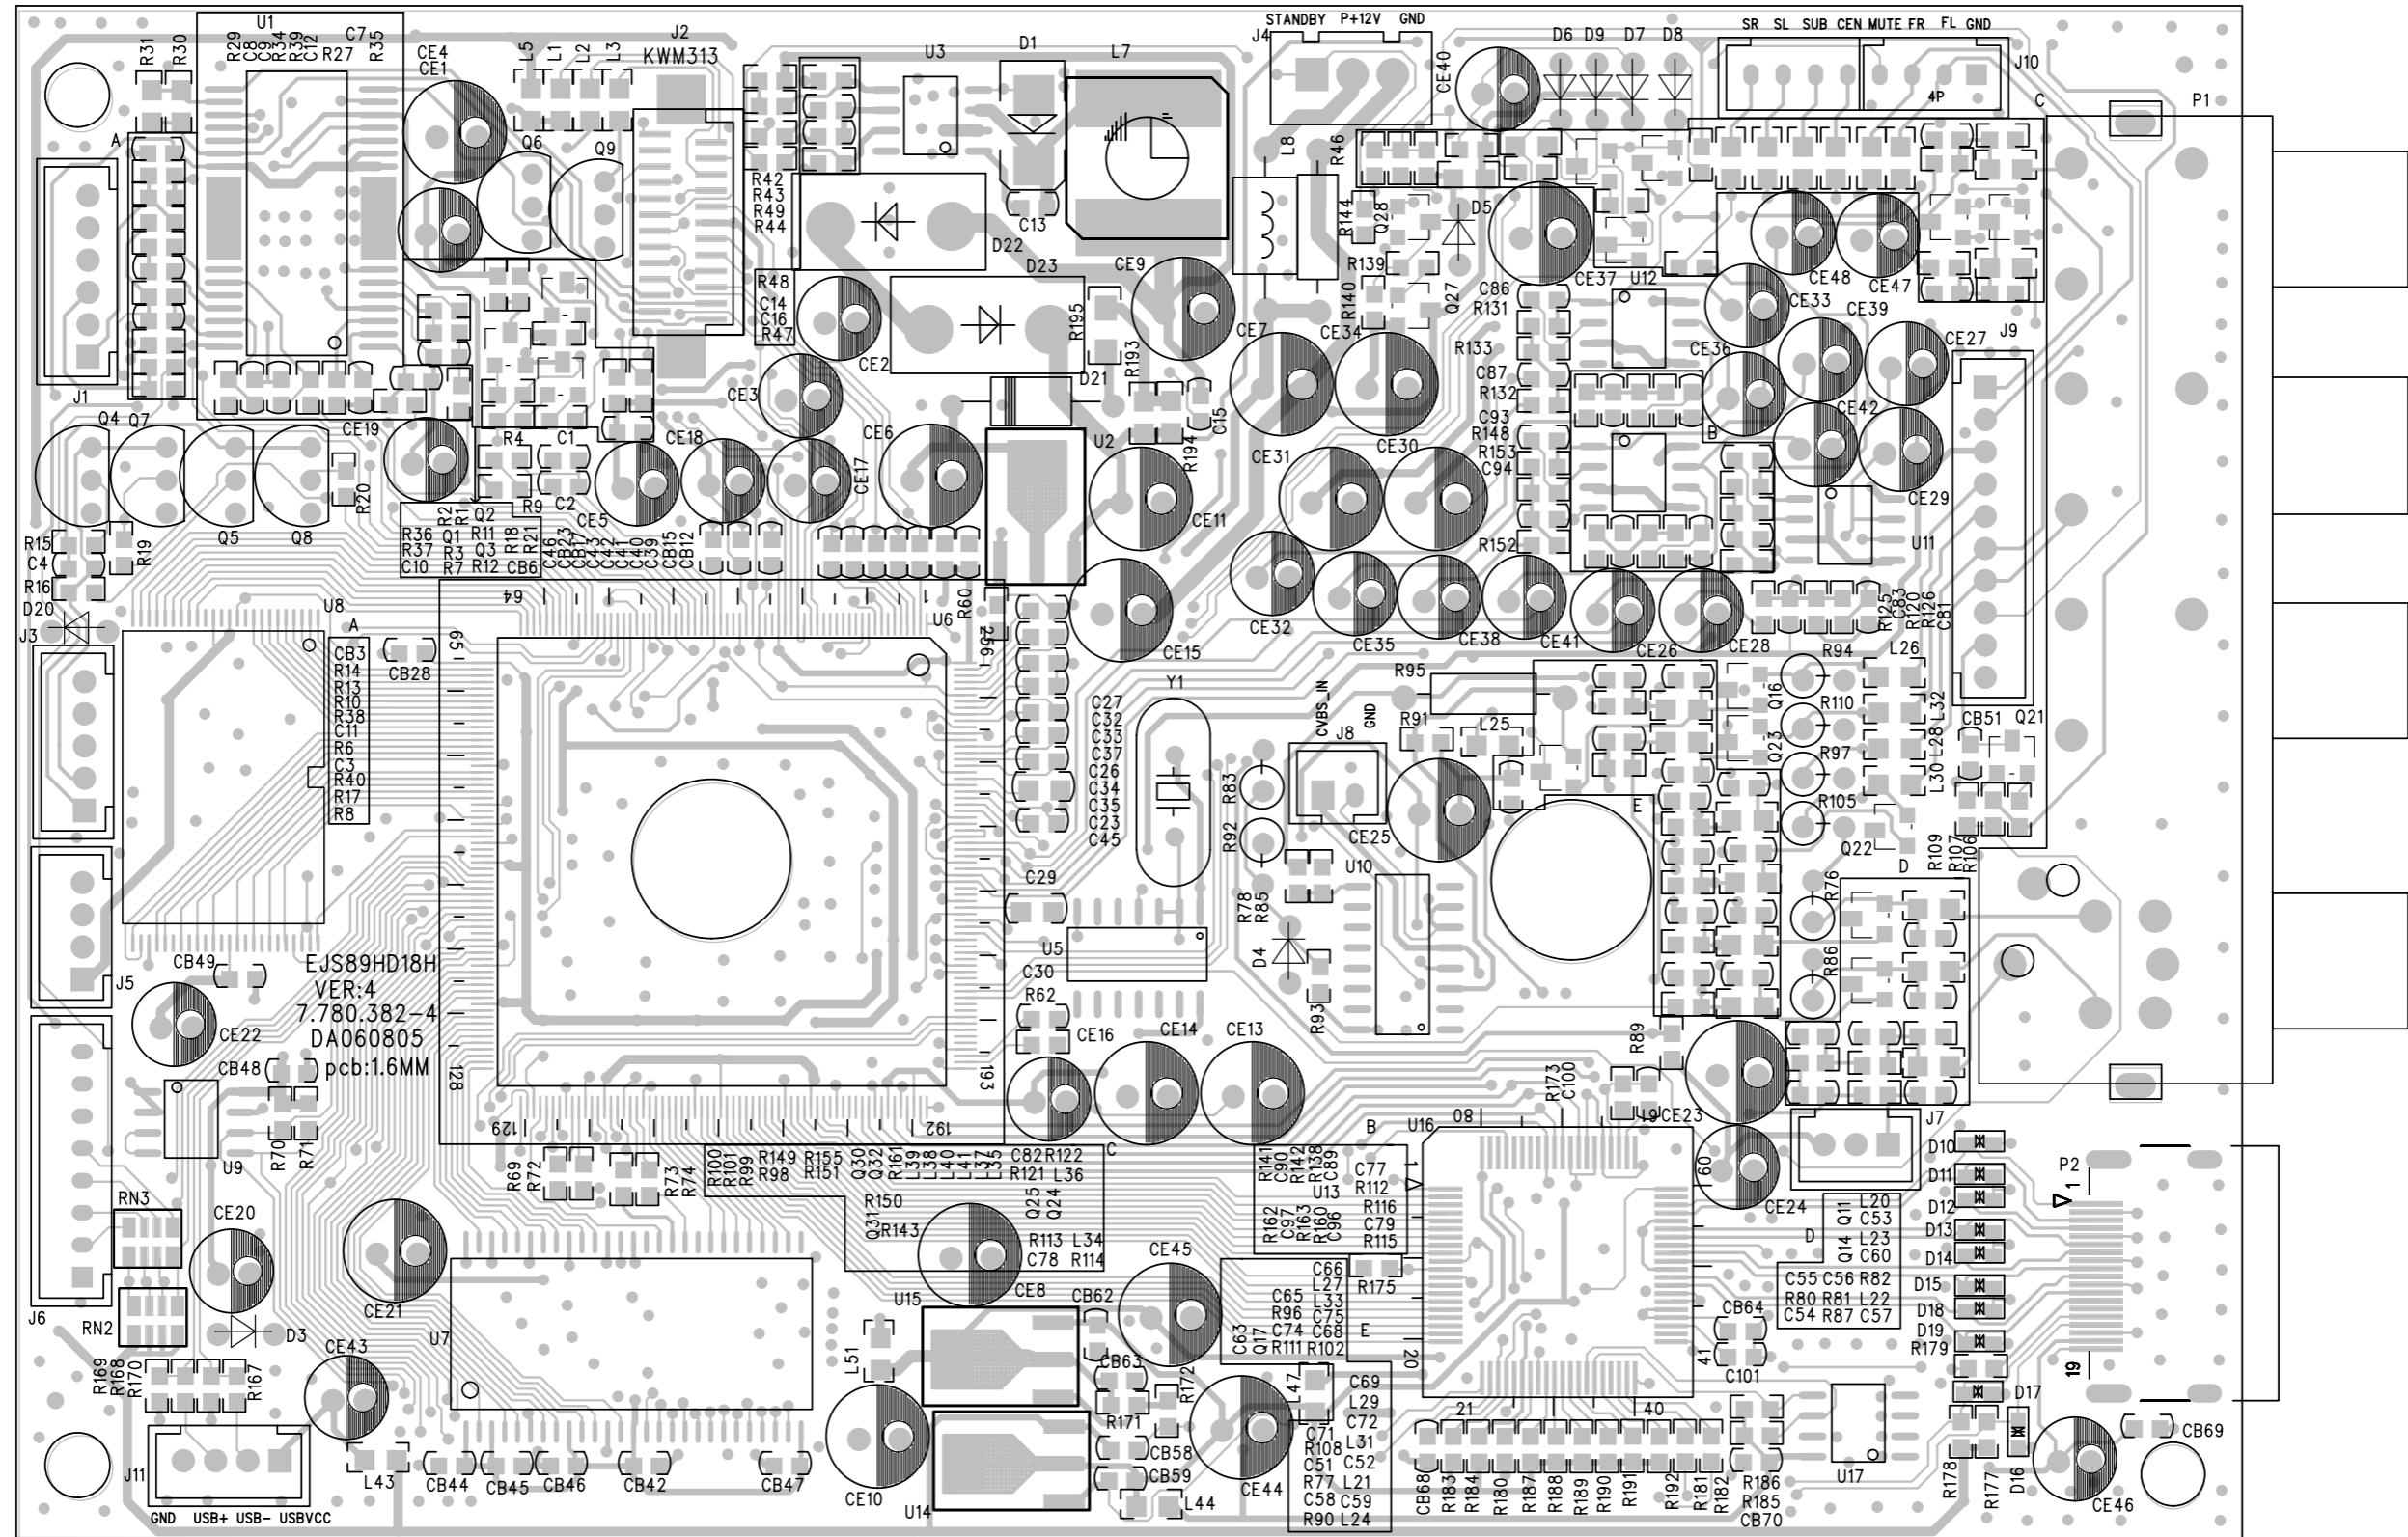


EXPLODED VIEW DIAGRAM

AMP PART

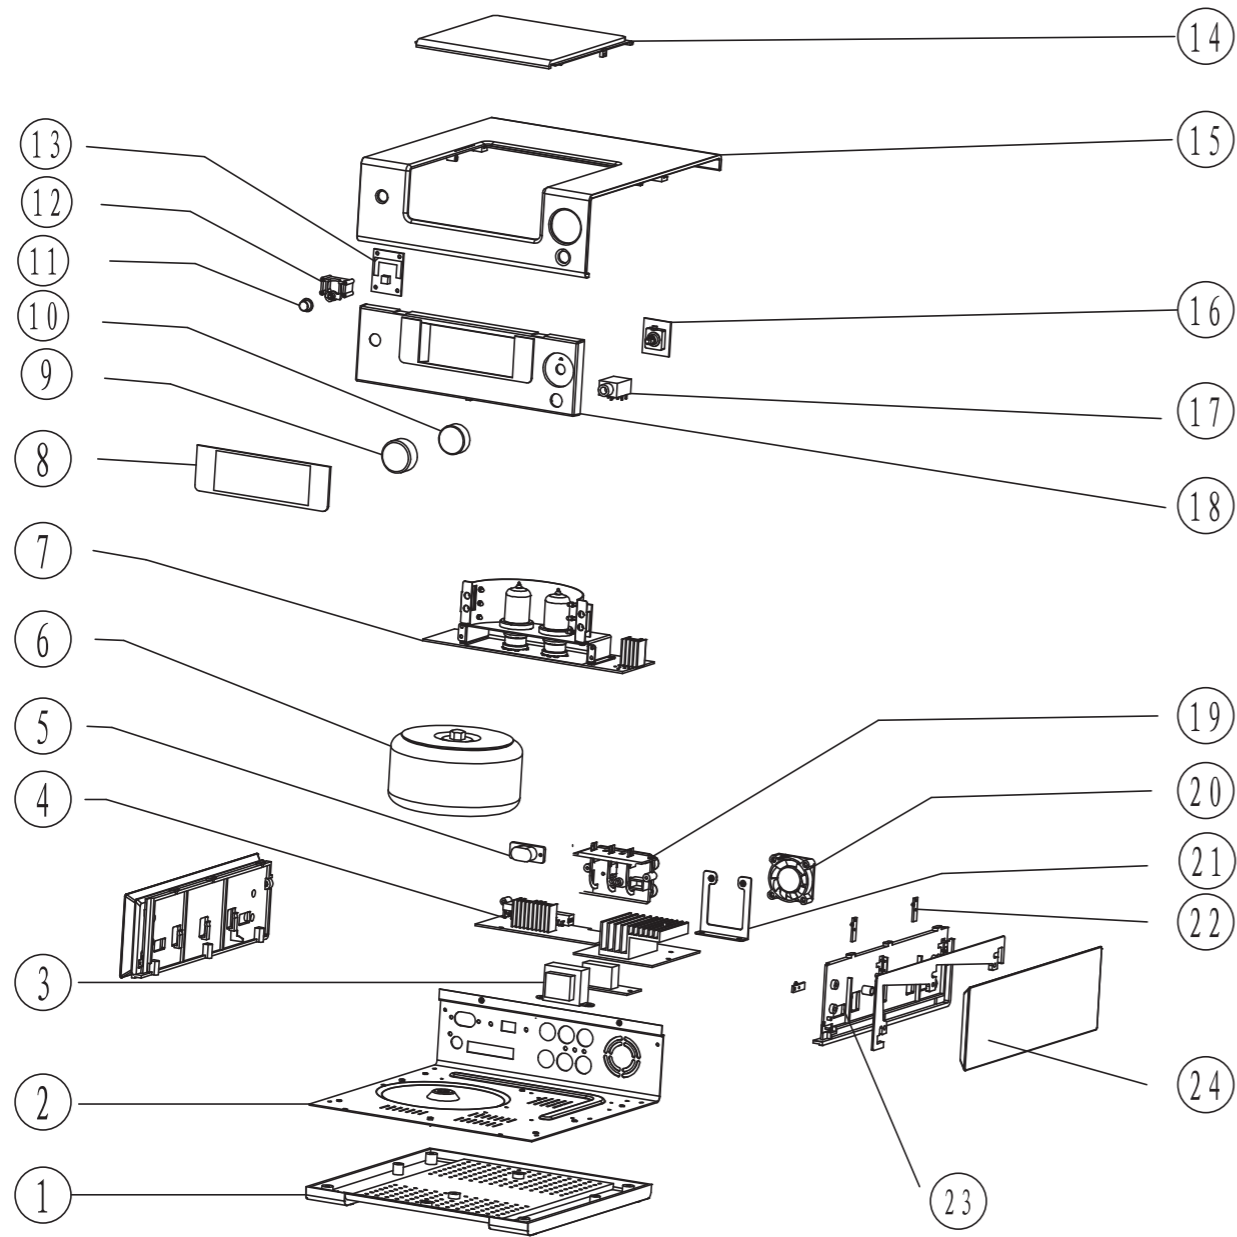

DVD PART

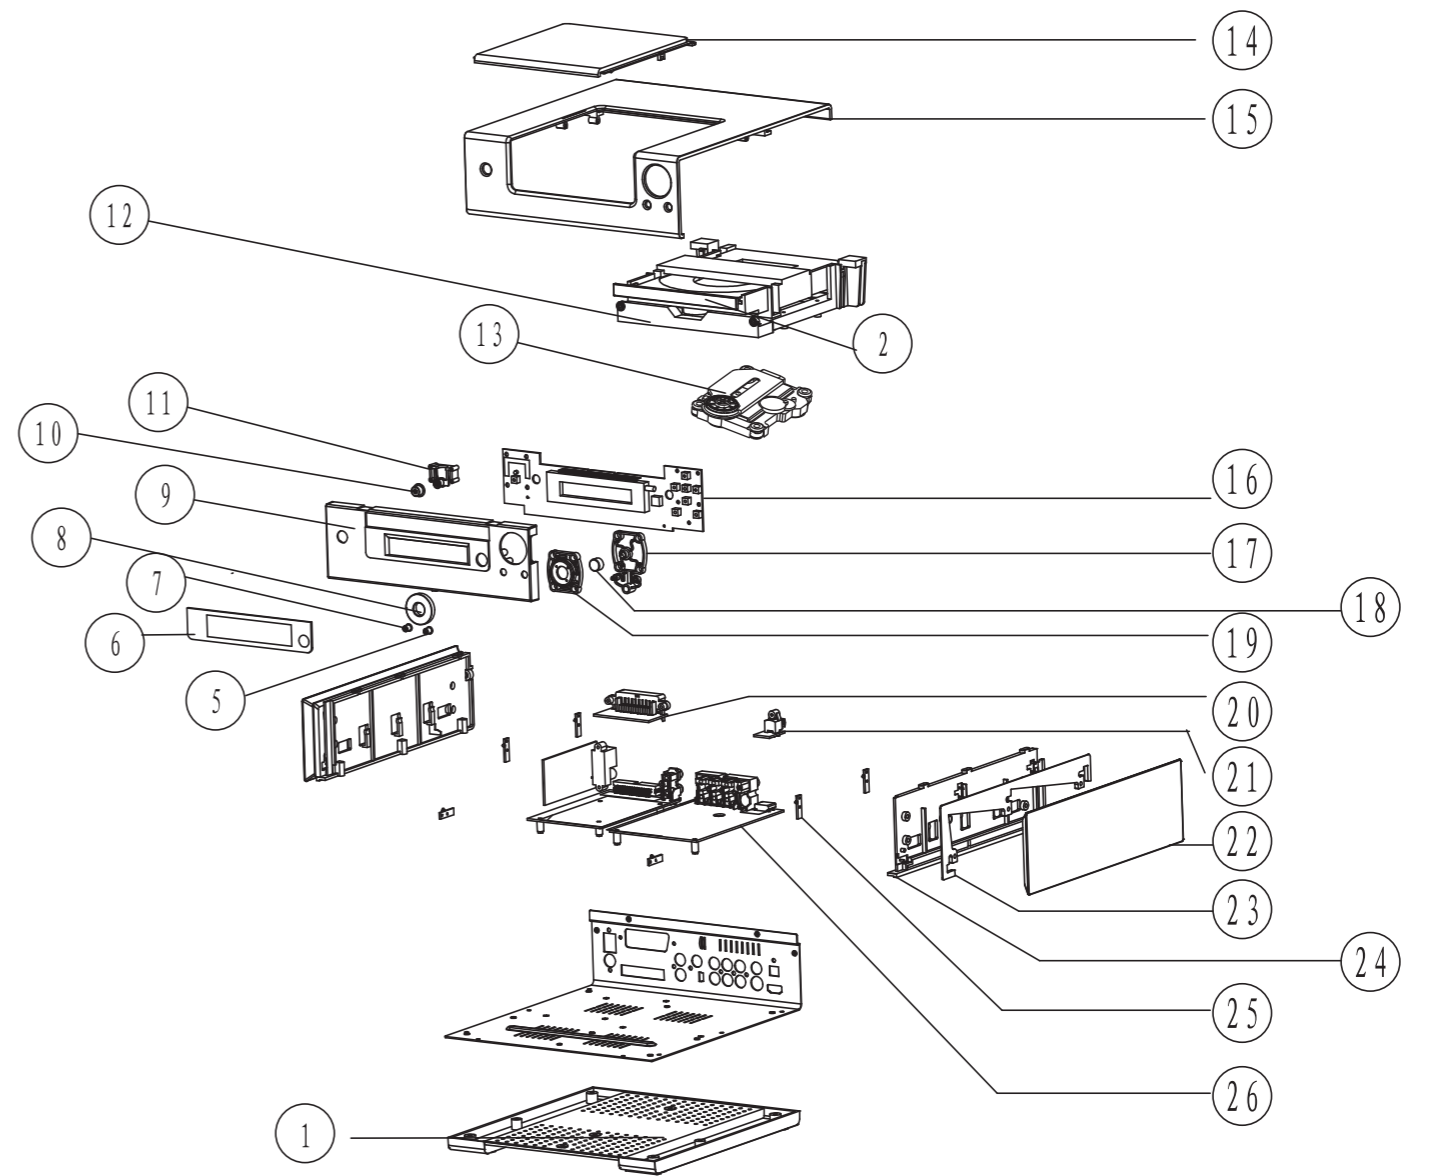

ACCESSORIES

A	9965 000 42549	SPEAKER BOX ASS'Y (-/93)
A	9965 100 00824	SPEAKER BOX INCLU. L&R BOXES (-/98)
A	9965 100 01968	SPEAKER BOX INCLU. L BOXES (-/37)
A	9965 100 01969	SPEAKER BOX INCLU. R BOXES (-/37)
B	9965 000 42550	REMOTE CONTROL ASS'Y -/37
B	9965 100 00825	REMOTE CONTROL ASS'Y PRC507-01
C	9940 000 03517	AM ANT SINGLE JUMPER WIRE
D	9965 000 41018	FM ANTENNA WIRE 1.5M
E	9965 000 42551	CONTROL CABLE WIRE 2.5/30P
F	9965 000 41615	ANTENNA HOLDER ASS'Y AM

MECHANICAL PARTSLIST**AMP PART**

1	9965 000 42518	AMP CABINET BOTTOM
5	9940 000 04884	AC SOCKET 2.5A/250V (-/93/98)
5	9940 000 05316	AC SOCKET 2.5A/250V (-/37)
6	9965 000 42519	TRANSFORMER 423D-93 220V/50 (-/93)
6	9965 100 00818	TRANSFORMER 423D-55/98 120/230 (-/98)
6	9965 100 01955	TRANSFORMER 423D-37 120V/60 UL (-/37)
8	9965 000 42520	AMP CABINET FRONT LENS
10	9965 100 00819	VOL KNOB
11	9965 000 42522	AMP SOURCE KNOB
12	9965 000 42523	AMP SOURCE BRACKET
14	9965 100 00820	MCD908 AMP TOP LENS
15	9965 000 42525	AMP CABINET TOP(ALU.)
18	9965 000 42526	AMP CABINET FRONT
23	9965 000 42527	PCB-L PMMA
23	9965 000 42528	PCB-R PMMA
24	9965 000 42545	WOODEN SIDE PLATE-L
24	9965 000 42529	WOODEN SIDE PLATE-R
	9965 100 01120	RUBBER FOOT

MECHANICAL PARTSLIST**DVD PART**

1	9965 000 42530	DVD CABINET BOTTOM
2	9965 000 42531	DVD DOOR
5	9965 000 42532	DVD DSC KNOB
6	9965 000 42533	DVD FRONT LENS PMMA
7	9965 000 42534	DVD OPEN/CLOSE KNOB
8	9965 000 42535	DVD FUNCTION KNOB
9	9965 000 42536	DVD CABINET FRONT
10	9965 000 42537	DVD STANDBY KNOB
11	9965 000 42538	DVD STANDBY KNOB BRACKET
12	9965 000 42548	DVD MECHA.BRACKET RT-656N
13	9940 000 04891	DVD MECHANISM KHM-313AAA
15	9965 000 42541	DVD TOP COVER -/93/98
15	9965 100 01949	DVD TOP COVER -/37
17	9965 000 42542	DVD KNOB BRACKET
18	9965 000 42543	DVD PLAY/STOP KNOB
19	9965 000 42544	DVD FUNCTION KNOB BRACKET
22	9965 000 42545	WOODEN SIDE PLATE-L
22	9965 000 42529	WOODEN SIDE PLATE-R
24	9965 000 42546	PLASTIC SIDE PLATE-L
24	9965 000 42547	PLASTIC SIDE PLATE-R
	9965 000 42540	DVD MECHA. ASS'Y(inclu.item12,13)
	9965 100 00811	DECODER ASS'Y MCD908/98
	9965 100 00846	DECODER ASS'Y MCD908/93
	9965 100 01952	DECODER ASS'Y MCD908/37

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTSLIST - DVD PAR**- MISCELLANEOUS -**

VFD701	9965 100 00806	VFD DISPLA
SW601	9940 000 02543	LIGHT TOUCH SWITCH
SW602	9940 000 02543	LIGHT TOUCH SWITCH
SW603	9940 000 02543	LIGHT TOUCH SWITCH
SW604	9940 000 02543	LIGHT TOUCH SWITCH
SW605	9940 000 02543	LIGHT TOUCH SWITCH
SW606	9940 000 02543	LIGHT TOUCH SWITCH
SW607	9940 000 02543	LIGHT TOUCH SWITCH
SW608	9940 000 02543	LIGHT TOUCH SWITCH
S601	9940 000 02542	IR SENSOR
X1	9940 000 03452	QUARTZ CRYSTAL 75KHZ D3.0
X204	9940 000 02551	CRYSTAL OSC FREQ. 32.768 KHZ
X203	9940 000 03152	CERMIC FILTER FREQUENCY 4.19MH
TUNE1	9965 000 41012	FM TUNER KST-F404HA-11A
CN212	9965 000 41002	SPEAKER SOCKET DJ-270-DH-03
CN213	9965 000 41002	SPEAKER SOCKET DJ-270-DH-03
J200	9940 000 03414	RCA SOCKET
F201	9940 000 02529	FUSE F2AL250V
LE1301	9940 000 03437	LED 3B4SCB01
JACK1	9965 000 42013	ANT. LEADING-OUT TERMINAL
JK1301	9940 000 02556	OPTICAL & COAXIAL SOCKET
	9940 000 04968	USB JACK A-TYPE 4P FEMALE
	9965 000 42555	CPU PCB ASS'Y -/93/98
	9965 000 01954	CPU PCB ASS'Y -/37
	9965 000 42556	TUNER BOARD ASS'Y EC06-04
	9965 000 01122	PRE-AMP PCB ASS'Y

- COILS & FILTERS -

T7	9940 000 05137	I.F.T. COIL BROWN 6295
T5	9940 000 05138	I.F.T. COIL BROWN 6296
T2	9940 000 05139	I.F.T. COIL BROWN 6298
T3	9940 000 05139	I.F.T. COIL BROWN 6298
T1	9940 000 05141	I.F.T. COIL BROWN 6298
T4	9940 000 05142	I.F.T. COIL BROWN 6299
CF1	9965 000 42552	FM CER. FILTER 10.7MHZ 3P
CF2	9965 000 42552	FM CER. FILTER 10.7MHZ 3P
CF4	9965 000 42552	FM CER. FILTER 10.7MHZ 3P

- IC & TRANSISTORS -

IC1	9940 000 03797	IC TEA5762
IC208	9940 000 03804	IC AT24C01 / AT24C02 2.7V
IC210	9965 000 42553	MCU PARTS ASS'Y(CPU U252) (-/93)
IC210	9965 100 00813	MCU PARTS ASS'Y(CPU U252) (-/98)
IC210	9965 100 01953	MCU PARTS ASS'Y(CPU U252) (-/37)
IC212	9965 100 00010	IC LM7805/LM340T5 7805
IC213	9940 000 03724	IC PT2313L
IC601	9940 000 02539	IC PT6311
Q1	9940 000 03156	CHIP TRANSISTOR 9014
Q5	9940 000 03156	CHIP TRANSISTOR 9014
Q219	9940 000 03723	TRANSISTOR 8050
Q211	9940 000 04934	TRANSISTOR 8550-C
Q212	9940 000 04934	TRANSISTOR 8550-C
Q222	9940 000 04934	TRANSISTOR 8550-C
Q221	9940 000 03156	CHIP TRANSISTOR 9014
Q220	9940 000 03441	TRRANSISTOR 9015C

ELECTRICAL PARTSLIST - AMP PART**- MISCELLANEOUS -**

JACK1	9965 100 00821	HEADPHONE JACK
	9940 000 02535	VOLUME CODER ED-1612-00-F15
J201	9965 100 00822	4PINS SPEAKER SOCKET
	9940 000 02534	HEADPHONE JACK 3.5MM
	9940 000 03432	LIGHT TOUCH SWITCH
LED50	9965 000 42562	LED DIODE ORANGE
LED502	9965 000 42562	LED DIODE ORANGE
LED503	9965 000 42562	LED DIODE ORANGE
F102	△ 9940 000 03433	FUSE F6.3AL250V (for -/93)
F103	△ 9940 000 03433	FUSE F6.3AL250V (for -/93)
F102	△ 9965 100 00823	FUSE F6.3AL250V(50F) (for -/98)
F103	△ 9965 100 00823	FUSE F6.3AL250V(50F) (for -/98)
P100	9940 000 04983	RCA SOCKET AV-8.4-0.8B
DB101	9940 000 03418	THYRISTOR RS1010G(10A)
	△ 9940 000 05166	AC LINE CORD 1.8M (for -/93)
	△ 9940 000 04888	AC LINE CORD 1.8M UL (for -/37)
	△ 9940 000 04988	AC LINE CORD 1.8M (for -/98)
	9940 000 03499	FLAT FLEX CABLE 24P
	9965 100 00523	SWITCH VSC-22-1-110/220V-m (for -/98)
T401	△ 9965 100 01967	TRANSFORMER ECO-228A-12 230V/50(-/3

- IC & TRANSISTORS -

IC300	9940 000 03422	IC TDA8920BTH
IC101	9940 000 04937	IC 7812
Q1	9965 100 01121	MOSFET 12AX7
Q2	9965 100 01121	MOSFET 12AX7
Q110	9940 000 03156	CHIP TRANSISTOR 9014
Q111	9940 000 03156	CHIP TRANSISTOR 9014
Q118	9940 000 04938	TRANSISTOR 2SB772
Q113	9965 000 42558	MOSFET BUK7509-55A
Q114	9965 000 42558	MOSFET BUK7509-55A
Q3	9965 000 42559	TRANSISTOR 9014D-5
Q4	9965 000 42559	TRANSISTOR 9014D-5
Q6	9965 000 41644	TRANSISTOR 772
U1	9940 000 04937	IC 7812
U3	9940 000 02524	IC PT2309-S(L)

Note: Only these parts mentioned in the list are normal service parts.

DVD UNIT PARTS ASS'Y MCD908/12**9965 200 00111 TRANSISTORS & IC**

IC207	9940 000 05148	IC CHMC 78L05
IC208	9965 100 00009	IC AT24C02-PC27(2.7V)
IC209	9940 000 04955	IC AC6811(RDS) /12
IC211	9940 000 05147	IC PT2579-SN SMALL
IC212	9965 100 00010	IC LM7805/LM340T5 7805
IC213	9965 100 00814	IC PT2313L
IC601	9965 100 00500	IC PT6311/SC16311/CD16311
U252	9965 100 01135	MCU PARTS ASS'Y MCD908/12

9965 200 00106 MISCELLANEOUS

29	9965 000 42556	TUNER BOARD ASS'Y EC06-04
30	9965 100 01137	CPU PCB ASS'Y MCD908/12
31	9965 100 01138	DECODER CARD ASS'Y MCD908/12
32	9965 000 42540	DVD DISC ASS'Y
F201	9940 000 04867	FUSE F2AL250V
J200	9965 100 01136	RCA SOCKET 2p AV2-8.4-13 RD WH
J201	9965 100 00822	4PINS SPEAKER SOCKET
JACK1301	9965 100 00235	OPTICAL DIGITAL JACK TX179AT
LED601	9940 000 04948	LED LAMP(BLUE) /12
S601	9940 000 04961	IR SENSOR BLACK
SW601	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW602	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW603	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW604	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW605	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW606	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW607	9940 000 04963	LIGHT TOUCH SW. TC103 H5
SW608	9940 000 04963	LIGHT TOUCH SW. TC103 H5
VFD701	9965 100 00806	VFD DISPLAY NE-705D-2.GB
X204	9965 100 00012	CRYSTAL OSC FREQ.32.768KHz

9965 200 00104 DVD UNIT CASING PARTS ASS'Y MCD908/12

10	9965 000 42534	DVD OPEN/CLOSE KNOB
11	9965 000 42532	DVD DSC KNOB
12	9965 000 42543	DVD PLAY/STOP KNOB
13	9965 000 42535	DVD FUNCTION KNOB
14	9965 000 42544	DVD FUNCTION KNOB BRACKET
15	9965 100 00810	DVD KNOB BRACKET
16	9965 000 42538	DVD STANDBY KNOB BRACKET
17	9965 100 01238	MCD908 TOP LENS
18	9965 000 42539	DVD MECHANISM BRACKET
19	9965 100 01239	MCD908 DVD CABINET BOTTOM

9965 200 00104 DVD UNIT CASING PARTS ASS'Y MCD908/12

20	9965 100 01240	MCD908 SIDE PLATE-L SILVER
21	9965 100 01241	MCD908 SIDE PLATE-R SILVER
22	9965 000 42527	PCB-L PMMA
23	9965 000 42528	PCB-R PMMA
24	9965 100 01242	1204 FILTER LENS (B)
25	9965 000 42545	SIDE PLATE-L
26	9965 000 42529	SIDE PLATE-R
3	9965 100 01235	MCD908 DVD CABINET METAL
4	9965 000 42541	DVD TOP COVER(ALU.)
5	9965 100 01236	MCD908 TOP COVER BRACKET
6	9965 100 01237	MCD908 DVD CABINET FRONT
7	9965 000 42533	DVD FRONT LENS PMMA
8	9965 000 42531	DVD DOOR
9	9965 000 42537	DVD STANDBY KNOB

AMP UNIT PARTS ASS'Y MCD908/12**9965 200 00112 AMP UNIT CASING PARTS ASS'Y MCD908/12**

35	9965 100 01139	MCD908 AMP CABINET METAL
36	9965 100 01140	MCD908 AMP TOP COVER(ALU.)
37	9965 100 01141	MCD908 AMP LAMP BRACKET(ALU.)
38	9965 100 01142	MCD908 AMP LAMP PALTE
39	9965 100 01143	MCD908 AMP CABINET FRONT
40	9965 100 01144	MCD908 BRACKET(ALU.) DECK CIR
41	9965 100 01145	MCD908 FAN BRACKET 48X56X12
42	9965 000 42521	VOL KNOB
43	9965 000 42520	AMP CABINET FRONT LENS
44	9965 000 42522	AMP SOURCE KNOB
45	9965 000 42523	AMP SOURCE BRACKET
46	9965 100 00820	MCD908 AMP TOP LENS ABS
47	9965 100 01146	MCD908 AMP CABINET BOTTOM
48	9965 100 01240	MCD908 SIDE PLATE-L SILVER
49	9965 100 01241	MCD908 SIDE PLATE-R SILVER
50	9965 000 42527	PCB-L PMMA
51	9965 000 42528	PCB-R PMMA
52	9965 000 42545	SIDE PLATE-L
53	9965 000 42529	SIDE PLATE-R
54	9965 100 00819	VOL KNOB

9965 200 00108 TRANSISTORS & IC

4558	9965 100 01147	IC D4558/RC4558 SOP
IC101	9940 000 04937	IC 7812
IC300	9965 100 00464	CHIP IC TDA8920(PACKING)
Q113	9965 000 42558	MOSFET BUK7509-55A
Q114	9965 000 42558	MOSFET BUK7509-55A

9965 200 00108 TRANSISTORS & IC

Q1	9965 100 01121	MOSFET 12AX7
Q2	9965 100 01121	MOSFET 12AX7
Q6	9940 000 04938	TRANSISTOR 2SB772A
U1	9940 000 04937	IC 7812
U3	9940 000 04952	IC PT2309-S(L)

9965 200 00109 MISCELLANEOUS

57	9965 100 00821	HEADPHONE JACK
58	9965 000 41645	ROT ENCODER
59	9965 100 00822	4PINS SPEAKER SOCKET
60	9965 100 00020	LIGHT TOUCH SW.
C12	9965 100 01150	MYLAR CAPACITOR 104P 280V K
C13	9965 100 01150	MYLAR CAPACITOR 104P 280V K
C14	9965 100 01152	ELE.CAPACITOR 1U 450V L-5
C15	9965 100 01152	ELE.CAPACITOR 1U 450V L-5
C16	9965 100 01151	METALLIZED CAP. 1u 250V
C17	9965 100 01151	METALLIZED CAP. 1u 250V
C5	9965 100 01153	CERAMIC CAPACITOR 223P 1000V L
C6	9965 100 01149	ELECTROLYTIC CAP. 100U 350V
C9	9965 100 01149	ELECTROLYTIC CAP. 100U 350V
DZ102	9965 100 01148	ZENER DIODE BZX-79-B24V52
DZ103	9965 100 01148	ZENER DIODE BZX-79-B24V52
F102	9965 100 00823	FUSE F6.3AL250V(50F)
F103	9965 100 00823	FUSE F6.3AL250V(50F)
LED1301X6	9940 000 04947	LED DIODE D3 3B4SCB01 (BLUE)
LED501X2	9965 000 42562	LED DIODE ORANGE
REL400	9940 000 04864	RELAY 10A 240VAC/30VDC
T401	9965 000 41017	TRASFO. EI-228A-12 230V/50

9965 200 00107 ACCESSORY PARTS ASS'Y MCD908/12

62	9965 000 41018	FM ANTENNA WIRE 1.5M
63	9940 000 05169	SPEAKER CORDS 3M
64	9965 100 00218	VIDEO CABLE 1.5m 3P RD WHI YEL
65	9965 000 42551	CONTROL CABLE WIRE 2.5/30P
66	9940 000 04988	AC LINE CORD 1.8M
67	9965 000 41615	ANTENNA HOLDER ASS'Y AM
68	9965 100 01154	REMOTE CONTROL ASS'Y PRC507-01
69	9965 100 01155	FREQ DIVIDER ASS'Y PH MCD908
70	9965 100 01156	SPEAKER BOX ASS'Y(L) MCD908/12
71	9965 100 01157	SPEAKER BOX ASS'Y(R) MCD908/12

Note: Only these parts mentioned in the list are normal service parts.


DISASSEMBLY DIAGRAM

Dismantling of the Plastic Bottom

1) Loosen 5 screws as indicated.




2. Remove 4 rubber feet and loosen 4 screws to remove plastic bottom.

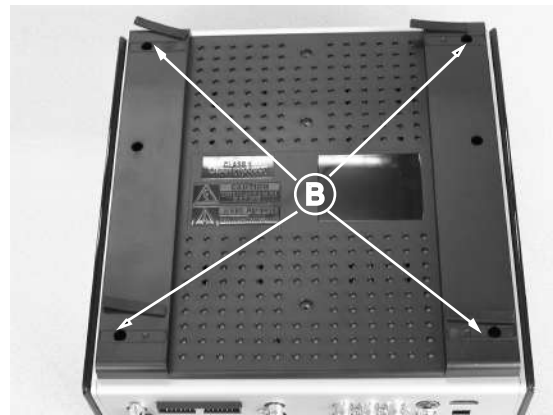


Dismantling of the Top Cabinet and Mecha. bottom Cabinet

3) Loosen 9 screws as indicated first.

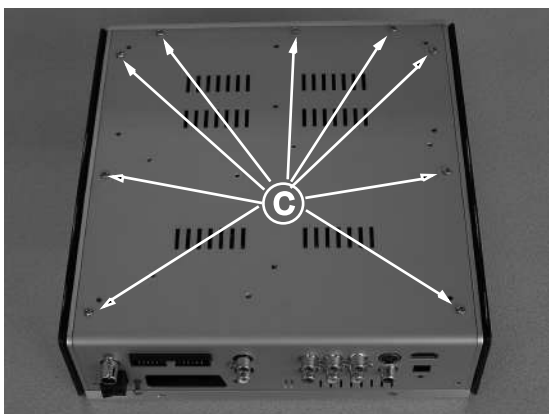

4) Then Loosen 4 screws .

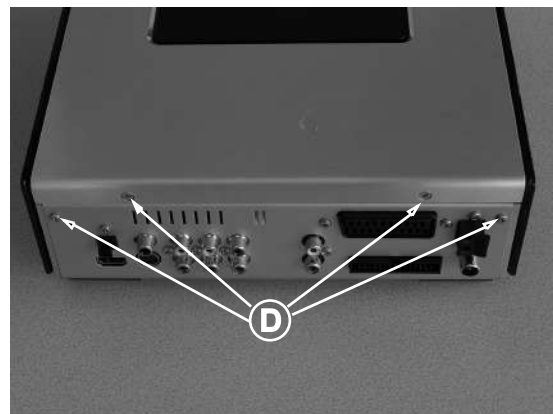

Version list

V1.0 for version /98/93

V1.1 add partlist of version /12

V1.2 new version /37 added.

Part list

ZHONGSHAN SHI NEON ELECTRONIC FACTORY LTD

BOM COMPONENT LIST

BOM NUMBER:		PH-MCD908-12				
PART NUMBER	DESCRIPTION	QTY.	UNIT	LOCATION	REMARK	
09-MCD908-01A101	DVD UNIT PARTS ASS'Y MCD908/12	1	SET			
07-MCD908-06A101	DISPLAY PCB ASS'Y MCD908/12	1	SET			
13000520	CARBON FILM RESISTOR 3.3 1/2W-52	2	PCS	R603, R604	L06-008-011	
13000186	CARBON FILM RESISTOR 1K 1/8W J-52	1	PCS	R614		
13000401	CARBON FILM RESISTOR 4.7K 1/8W J-52	1	PCS	R613		
14000386	CHIP CERAMIC CAP. 104P 50V M (0805) Y5V	4	PCS	C602-605		
13000070	CHIP RESISTOR 10K 1/16W J (0805)	2	PCS	R609, 610		
13000117	CHIP RESISTOR 33K 1/16W J (0805)	4	PCS	R605-608		
13000124	CHIP RESISTOR 4.7K 1/16W J (0805)	1	PCS	R601		
13000127	CHIP RESISTOR 47K 1/16W J (0805)	1	PCS	R602		
14000321	ELECTROLYTIC CAP. 47u 16V L-5 5X11	2	PCS	C601, 606		
16000018	DIODE 4148-52	3	PCS	D601-603		
16000038	LED LAMP (BLUE) 3R4CB71D-2B-208	1	PCS	LED601		
19000163	IC PT6311/SC16311/CD16311	1	PCS	IC601		
29000227	VFD DISPLAY NE-705D-2.GB	1	PCS	VFD701	S06-008-047	
13000121	CHIP RESISTOR 47 1/16W J (1206)	1	PCS	R611		
23000032	LIGHT TOUCH SW. TC103 H5	8	PCS	SW601-608		
21000001	IR SENSOR BLACK (SMALL)	1	PCS	S601		
35-MCD908-06A1	DISPLAY PCB MCD908-06	1	PCS			
07-MCD908-02A101	CPU PCB ASS'Y MCD908/12	1	SET			
13000058	CHIP RESISTOR 0 1/16W J (0805)	1	PCS	R237		
13000060	CHIP RESISTOR 0 1/4W J (1206)	3	PCS	R238-240		
13000180	CARBON FILM RESISTOR 100 1/4W J-52	2	PCS	R226, 225		
13000645	CHIP RESISTOR 100K 1/16W J(0603)	4	PCS	R216, 215, 218, 217		
14000667	CHIP CERAMIC CAP. 100P 50V K (0603) X7R	3	PCS	C219, 218, 225		
14000203	ELECTROLYTIC CAP. 100u 16V L-5 8X5	2	PCS	C234, 205		
15000010	FIXED INDUCTOR 100uH	1	PCS	L202		
14000668	CHIP CERAMIC CAP. 102P 50V K (0603) X7R	1	PCS	C291		
14000669	CHIP CERAMIC CAP. 103P 50V K (0603) X7R	2	PCS	C253, 252		
14000382	CHIP CERAMIC CAP. 104P 50V M (0603) Y5V	9	PCS	C212, 211, 210, 209, 288, 287, 246, 247		
14000021	CERMIC CAP. 104P 50V K-5	2	PCS	C250, 248		
14000484	CHIP CAPACITOR 104P 100V M (1206) Y5V	1	PCS	C245		
13000646	CHIP RESISTOR 10K 1/16W J(0603)	16	PCS	R258, 200-207, 295-299, 210, 209		
13000070	CHIP RESISTOR 10K 1/16W J (0805)	1	PCS	R212		
14000181	ELECTROLYTIC CAP. 10u 25V L-5 5X11	1	PCS	C299		
13000242	CARBON FILM RESISTOR 15 1/2W J-52	1	PCS	R234		
14000745	CHIP CERAMIC CAP. 15P 50V J (0603) NPO	2	PCS	C297, 296		

Part list

13000186	CARBON FILM RESISTOR 1K 1/8W J-52	2	PCS	R232, 231
13000661	CHIP RESISTOR 1K 1/16W J(0603)	10	PCS	R277-282, 285, 286, 274, 271
13000667	CHIP RESISTOR 2.2K 1/16W J(0603)	5	PCS	R289, 241, 242, 284, 283
14000234	ELECTROLYTIC CAP. 2.2u 50V L-5 5X11	11	PCS	C213, 214, 200, 281-286, 255, 254
13000293	CARBON FILM RESISTOR 220 1/2W J-52	1	PCS	R220,
14000656	ELE. CAPACITOR 220u 35V L-5 105° C 8X11.5	1	PCS	C217
14000256	ELECTROLYTIC CAP. 220u 16V L-5 6.3X11	1	PCS	C206
13000303	CARBON FILM RESISTOR 22K 1/8W J-52	1	PCS	R222
14000238	ELECTROLYTIC CAP. 22u 16V L-5 5X11	1	PCS	C295
19000024	I. C. AT24C01/AT24C02 2.7V(SOP PACKING)	1	PCS	IC208
14000895	CHIP CERAMIC CAP. 272P 50V K(0603)X7R	2	PCS	C290, 289
25000009	PINS CONNECTOR 2.0/2P	2	PCS	CN237, 217
14000419	CHIP CERAMIC CAP. 330P 50V K (0603) X7R	10	PCS	C243, 242, 241, 239, 216, 220-224
25000075	PIN CONNECTOR 30P BENDING L=8.8mm	1	PCS	CN220
14000876	CHIP CERAMIC CAP. 30P 50V J (0603) NPO	2	PCS	C294, 293
22000021	CRYSTAL OSC FREQ. 32.768KHz Φ3XH8±10PPM	1	PCS	X204
14000548	CAPACITOR 3300u 35V L 105°C 16X30	1	PCS	C208
25000049	PINS CONNECTOR 2.0/8P	1	PCS	CN213
14000641	CHIP CERAMIC CAP. 330P 50V K (1206) X7R	1	PCS	C201
25000014	PINS CONNECTOR 2.0/3P	1	PCS	CN221
22000018	CERMIC FILTER FREQUENCY 4.19mHz	1	PCS	X203
22000009	CRYSTAL 4.332mHz 49U	1	PCS	X205
13000414	CARBON FILM RESISTOR 4.7 1/4W J-52	1	PCS	R228
13000697	CHIP RESISTOR 4.7K 1/16W J(0603)	5	PCS	R293, 292, 291, 227, 290,
16000058	ZENER DIODE 3.3V 1/2W-52	1	PCS	DZ204
16000089	ZENER DIODE 27V 1/2W-52	1	PCS	DZ205
16000104	RECTIFIER DIODE 4001-52	2	PCS	D213, 212
16000110	RECTIFIER DIODE 5401	4	PCS	D201-204
16000018	DIODE 4148-52	4	PCS	D210, 207, 208, 209
14000867	CHIP CERAMIC CAP. 470P 50V K (0603) X7R	2	PCS	C236, 235
14000351	ELECTROLYTIC CAP. 470u 25V L 8X16	1	PCS	C215
13000125	CHIP RESISTOR 47K 1/16W J (0603)	3	PCS	R257, 243, 244
14000677	CHIP CERAMIC CAP. 47P 50V J(0603)NPO	1	PCS	C203
14000321	ELECTROLYTIC CAP. 47u 16V L-5 5X11	2	PCS	C292, 251, 298
14000420	CHIP CERAMIC CAP. 330P 50V K (0805) X7R	4	PCS	C228, 227, 226, 207
13000675	CHIP RESISTOR 22K 1/16W J(0603)	5	PCS	R211, 208
13000664	CHIP RESISTOR 1M 1/16W J(0603)	5	PCS	R221
13000699	CHIP RESISTOR 470 1/16W J(0603)	5	PCS	R214, 256
13000293	CARBON FILM RESISTOR 220 1/2W J-52	1	PCS	R235
16000110	RECTIFIER DIODE 5401	4	PCS	D201-204
14000877	CHIP CERAMIC CAP. 560P 50V K (0603) X7R	1	PCS	C202

Part list

25000016	PINS CONNECTOR 2.5mm3P	1	PCS	CN219	
25000025	PINS CONNECTOR 2.0/4P	2	PCS	CN218, 216	
25000040	SPEAKER SOCKET DJ-270-DH-03	2	PCS	CN212, 213	
25000034	PINS CONNECTOR 2.0/5	2	PCS	CN211, CN215	
14000234	ELECTROLYTIC CAP. 2.2u 50V L-5 5X11	1	PCS	C200	
13000791	CHIP RESISTOR 68K 1/16W J (0603)	1	PCS	R294	
19000102	IC LM7805/LM340T5 7805	1	PCS	IC212	
19000115	IC CHMC 78L05	1	PCS	IC207	
17000022	TRANSISTOR 8050C	2	PCS	Q216, 215	
17000004	CHIP TRANSISTOR 8050 (SOT-23)	1	PCS	Q219	
14000757	CHIP CERAMIC CAP. 82P 50V J (0603) NPO	1	PCS	C204	
17000028	TRANSISTOR 8550-C	3	PCS	Q222, 212, 211	
13000717	CHIP RESISTOR 8.2K 1/16W J(0603)	2	PCS	R230, 229	
17000009	CHIP TRANSISTOR 9014 (SOT-23)	1	PCS	Q221	
17000082	CHIP TRANSISTOR 9015	1	PCS	Q220	
16000077	ZENER DIODE 9.1V 1/2W	1	PCS	DZ203	
19000185	IC AC6811(RDS)CHIP	1	PCS	IC209	
16000115	DIODE IN60 L26	1	PCS	D211	
19000077	IC PT2313L	1	PCS	IC213	
24000070	RCA SOCKET 2p AV2-8.4-13 RED WHITE	1	PCS	J200	
19000087	IC PT2579-SN SMALL	1	PCS	IC211	
26000002	△FUSE F2AL250V	1	PCS	F201	
26000051	△FUSE HOLDER(PLASTIC)	1	PCS	F201	
35-MCD908-02A1	CPU PCB MCD908-02	1	PCS		
07-MCD908-13A101	LAMP PCB ASS'Y MCD908-13	6	SET		
13000833	CHIP RESISTOR 680 1/4W J (1206)	1	PCS	R1301	
16000035	LED DIODE Φ3 3B4SCB01 (BLUE)	1	PCS	LED1301	
35-MCD908-13A1	LENS PCB MCD908 MCD908-13	1	PCS		
07-MCD908-15A101	SCATR PCB ASS'Y MCD908	1	SET		
13000530	CHIP RESISTOR 100 1/4W J(1206)	2	PCS	R1506, 1507	
13000070	CHIP RESISTOR 10K 1/16W J (0805)	3	PCS	R1504, 1505,	
25000056	PINS CONNECTOR 2.0/10P	1	PCS	CN1502	
25000082	SCART 21 PINS SOCKET SCART-113(HAO HUI)	1	PCS	J1501	
35-MCD908-15A1	SCART PCB MCD908-15	1	PCS		
07-MCD908-11A101	OPTICAL TERMINAL PCB ASS'Y MCD908	1	SET		
24000038	OPTICAL & COAXIAL TERMINAL AV-CQ-05	1	PCS	JACK1301	
25000014	PINS CONNECTOR 2.0/3P	1	PCS	CN1301	
35-MCD908-11A1	OPTICAL TERMINAL PCB MCD908-11	1	PCS		
07-MCD908-16A101	USB PCB ASS'Y MCD908	1	SET		
24000019	USB A-TYPE 4 P FEMALE 90° DIP TYPE	1	PCS		
35-MCD908-16A1	USB PCB MCD908-16 MCD908	1	PCS		

Part list

07-EC06-04A101	TUNER BOARD PCB ASS'Y EC06-04 CE	1	SET	
12000095	I.F.T. COIL BLACK 6295	1	PCS	T7
12000093	I.F.T. COIL BROWN 6296	1	PCS	T5
12000091	I.F.T. COIL YELLOW 6297	2	PCS	T2, 3
12000090	I.F.T. COIL BLACK 6298	1	PCS	T1
12000092	I.F.T. COIL BLACK 6299	1	PCS	T4
13000058	CHIP RESISTOR 0 1/16W J (0805)	5	PCS	R9, 44, J2, 37, 40
13000060	CHIP RESISTOR 0 1/4W J (1206)	1	PCS	R45
13000637	CHIP RESISTOR 0 1/16W J(0603)	1	PCS	J3
20000008	FM CERMIC FILTER 10.7MHz3 PINS	3	PCS	CF2, CF1, CF4
13000641	CHIP RESISTOR 100 1/16W J(0603)	1	PCS	R41
34000046	SEMI-FIXED RESISTOR 100 K OHM SF-065J-B1	1	PCS	RV1
13000645	CHIP RESISTOR 100K 1/16W J(0603)	2	PCS	R13, 12
14000199	ELECTROLYTIC CAP. 100 μ 16V L-5 5X11	3	PCS	C10, C9, C41
14000375	CHIP CERAMIC CAP. 102P 50V K (0805) X7R	1	PCS	C20
14000668	CHIP CERAMIC CAP. 102P 50V K (0603) X7R	1	PCS	C14
14000380	CHIP CERAMIC CAP. 103P 50V M (0805) Y5V	1	PCS	C13
14000386	CHIP CERAMIC CAP. 104P 50V M (0805) Y5V	4	PCS	C8, 4, 2, 5
14000382	CHIP CERAMIC CAP. 104P 50V M (0603) Y5V	2	PCS	C7, 3
13000646	CHIP RESISTOR 10K 1/16W J(0603)	1	PCS	R32
14000518	CAPACITOR 10 μ 25V L 4X7	1	PCS	C1
14000478	TRIMMER CAP. 10p M TC03Z100H169B00	1	PCS	CT1
13000080	CHIP RESISTOR 120 1/16W J(0805)	1	PCS	R4
13000885	CHIP RESISTOR 120 1/4W J(1206)	1	PCS	R3
13000800	CHIP RESISTOR 120 1/16W J(0603)	2	PCS	R2, 1
14000670	CHIP CERAMIC CAP. 12P 50V J (0603) NPO	1	PCS	C15
14000392	CHIP CERAMIC CAP. 12p 50V J(0805) NPO	1	PCS	C36
13000656	CHIP RESISTOR 150 1/16W J(0603)	1	PCS	R30
13000658	CHIP RESISTOR 150K 1/16W J(0603)	1	PCS	R14
14000743	CHIP CERAMIC CAP. 153P 50V M (0603) Y5V	2	PCS	C40, 39
14000395	CHIP CERAMIC CAP. 15p 50V J(0805) NPO	1	PCS	C31
13000661	CHIP RESISTOR 1K 1/16W J(0603)	2	PCS	R46, 47
13000664	CHIP RESISTOR 1M 1/16W J(0603)	2	PCS	R17, 16
14000653	ELE.CAPACITOR 1 μ 50V L-5 105°C 4X7	2	PCS	C29, 28
14000894	CERMIC CAP. 1U 50V L-5	1	PCS	C21
13000101	CHIP RESISTOR 2.2K 1/16W J (0805)	1	PCS	R8
14000652	ELE.CAPACITOR 2.2 μ 50V L-5 105° C 4X7	1	PCS	C30
13000095	CHIP RESISTOR 22 1/16W J (0805)	1	PCS	R35
13000098	CHIP RESISTOR 220 1/16W J (0805)	1	PCS	R10
14000741	CHIP CERAMIC CAP. 220P 50V K (0603) X7R	3	PCS	C18, 17, 16
14000407	CHIP CERAMIC CAP. 222P 50V K (0805) X7R	1	PCS	C19

L06-008-011

Part list

14000410	CHIP CERAMIC CAP. 223P 50V M(0805) Y5V	1	PCS	C34	L06-008-011
14000756	CHIP CERAMIC CAP.224P 50V M (0603) Y5V	6	PCS	C25, 24, 23, 22, 42, 43	
13000103	CHIP RESISTOR 22K 1/8W J (0805)	1	PCS	R20	
13000675	CHIP RESISTOR 22K 1/16W J(0603)	1	PCS	R18	
14000658	ELE.CAPACITOR 22 μ 16V L-5 105° C 4X7	1	PCS	C35	
13000667	CHIP RESISTOR 2.2K 1/16W J(0603)	1	PCS	R27	
14000882	CHIP CERAMIC CAP. 2P 50V J(0603) NPO	1	PCS	C38	L06-008-011
13000113	CHIP RESISTOR 330 1/16W J (0805)	1	PCS	R7	
13000689	CHIP RESISTOR 330 1/16W J(0603)	2	PCS	R6, 5	
14000420	CHIP CERAMIC CAP. 330P 50V K (0805) X7R	1	PCS	C6	L06-008-011
14000418	CHIP CERAMIC CAP. 33P 50V J (0805) NPO	1	PCS	C11	L06-008-011
16000048	CHIP ZENER DIODE BZX384-C11 11V	1	PCS	DZ1	
13000697	CHIP RESISTOR 4.7K 1/16W J(0603)	2	PCS	R42, 43	
13000120	CHIP RESISTOR 47 1/16W J 0805	1	PCS	R26	
13000699	CHIP RESISTOR 470 1/16W J(0603)	3	PCS	R21-23	
14000676	CHIP CERAMIC CAP.474P 50V M (0603) Y5V	1	PCS	C32	
14000443	CHIP CERAMIC CAP. 560P 50V K (0805) X7R	1	PCS	C37	
14000676	CHIP CERAMIC CAP.474P 50V M (0603) Y5V	2	PCS	C27, 26	
13000127	CHIP RESISTOR 47K 1/16W J (0805)	1	PCS	R34	
13000125	CHIP RESISTOR 47K 1/16W J (0603)	2	PCS	R25, 24	
13000124	CHIP RESISTOR 4.7K 1/16W J (0805)	1	PCS	R33	
25000025	PINS CONNECTOR 2.0/4P	1	PCS	CN1	
13000133	CHIP RESISTOR 56K 1/16W J (0805)	1	PCS	R11	
25000034	PINS CONNECTOR 2.0/5	1	PCS	CN2	
13000791	CHIP RESISTOR 68K 1/16W J (0603)	1	PCS	R31	
22000011	CRYSTAL 75KHz \pm 20PPm Φ 3.0	1	PCS	X1	
13000719	CHIP RESISTOR 820 1/16W J(0603)	2	PCS	R29, 28	
14000447	CHIP CERAMIC CAP. 82p 50V J(0805) NPO	1	PCS	C33	
17000009	CHIP TRANSISTOR 9014 (SOT-23)	2	PCS	Q1, 5	
16000047	CHIP DIODE BAS316	1	PCS	D2	
17000018	TRANSISTOR BC547C-5	1	PCS	Q3	
17000001	CHIP TRANSISTOR BC857B(SOT23)	1	PCS	Q2	
16000010	VARIODE DIODE HN1V02H SOP8	1	PCS	D3	
32000013	FM TUNER KST-F404HA-11A	1	PCS	TUNE1	
19000042	IC TEA5762	1	PCS	IC1	
24000279	ANT. LEADING-OUT TERMINAL WP2-4C	1	PCS	JACK1	
25000187	SINGLE JUMPER WIRE AWG#26 L=60mm BROWN	1	PCS		L06-008-011
35-EC06-04A1	RADIO PCB EC06-04	1	PCS		
08-MCD759-01A101	DVD DISC ASS'Y MCD759	1	SET		
31000066	DVD MECHANISM SONY KHM-313AAA OPTICAL	1	PCS		
31000043	DVD BRACKET RT-656n	1	PCS		

Part list

36000265	DVD MECHANISM SHOCKPROOF WASHER BLUE	4	PCS	
38000424	SCREW 2.6 X10 PWITH (Φ10) NICKEL-PLATE	4	PCS	DVD MECHANISM
04-MCD908-01A101	MCU PARTS ASS'Y MCD908/12	1	SET	
19000169	CPU U252(3P9228 XYZ-CAN CHANGE)	1	PCS	IC210
45-MCD908-01A101	MCD908/12 CPU SOFTWARE(V1.0)	1	PCS	
04-MCD908-02A101	DECODER CARD ASS'Y MCD908/12	1	SET	
32000266	DVD DECORDER BOARD 89DH18(2.0CH)	1	PCS	
46-MCD908-01A101	MCD908/12 DVD SOFTWARE(2.1CH)	1	PCS	
08-MCD908-01A101	DVD UNIT CASING PARTS ASS'Y MCD908/12	1	SET	
37-MCD908-01A101	MCD908 DVD CAB. METAL BOTTOM	1	PCS	
37-MCD908-02A101	MCD908 DVD TOP COVER(ALU.)	1	PCS	
39-MCD908-01A101	MCD908 DVD CABINET FRONT ABS	1	PCS	
39-MCD908-02A101	MCD908 DVD FRONT LENS PMMA	1	PCS	
39-MCD908-04A101	MCD908 DVD DOOR ABS	1	PCS	
39-MCD908-05A101	MCD908 DVD STANDBY KNOB	1	PCS	
39-MCD908-06A101	MCD908 DVD OPEN/CLOSE KNOB ABS	1	PCS	
39-MCD908-07A101	MCD908 DVD DSC KNOB ABS	1	PCS	
39-MCD908-08A101	MCD908 DVD PLAY/STOP KNOB ABS	1	PCS	
39-MCD908-09A101	MCD908 DVD FUNCTION KNOB ABS	1	PCS	
39-MCD908-10A100	MCD908DVD FUNCTION KNOB BRACKET	1	PCS	
39-MCD908-11A100	MCD908DVD KNOB BRACKET ABS	1	PCS	
39-MCD908-12A100	MCD908DVD STANDBY KNOB BRACKET ABS	1	PCS	
39-MCD908-13A101	MCD908 DVD TOP LAMP ABS	1	PCS	
39-MCD908-14A100	MCD908 DVD MECHANISM BRACKET ABS	1	PCS	
39-MCD908-15A101	MCD908 DVD CABINET BOTTOM	1	PCS	
39-MCD908-16A100	MCD908 SIDE PLATE-L ABS	1	PCS	
39-MCD908-17A100	MCD908 SIDE PLATE-R ABS	1	PCS	
39-MCD908-18A100	MCD908 PCB-L PMMA	1	PCS	
39-MCD908-19A100	MCD908 PCB-R PMMA	1	PCS	
40000262	MCD908 SIDE PLATE-L	1	PCS	
40000263	MCD908 SIDE PLATE-R	1	PCS	
38000091	SCREW 2.6 X 5 PWMTT BLACK	8	PCS	PLASTIC CAB. BOTTOM
38000013	SCREW 3 X 5 PMTT SILVER	8	PCS	CPU PCBX4, DECODER CARDX4
38000231	SCREW 3 X 12 BT NICKEL-PLATE	2	PCS	MECHANISM BRACKET TO PANELX2
38000288	SCREW 3 X 11 BMTT SILVER	2	PCS	MECHANISM BRACKET TO METAL POLEX2
38000564	SCREW 3X10 BT WHITE	10	PCS	MECHANISM BRACKET TO MECHANISM BRACKETX4, L&R SIDE PLATEX6
38000654	SCREW 2.6 X 5 BMTT NICKEL-PLATE	2	PCS	TOP LENS
38000279	SCREW 3 X 6 BMTT NICKEL-PLATE	4	PCS	TOP LENS X2, CAB. TOP & CAB. BOTTOM X2
38000071	SCREW 3 X 6 FMTT Φ6 NICKEL-PLATE	2	PCS	CAB. TOP & BACK PLATE
38000489	SCREW 3 X 8 PA NICKEL-PLATE	8	PCS	L&R SIDE & WOOD BLOCK
38000102	SCREW 2.6 X 8 PA SILVER	9	PCS	DISPLAY PLATE X9

Part list

38000117	SCREW 3 X 12 PA SILVER	10	PCS	DVD UNIT TERMINALX10	
25000935	FLAT FLEX CABLE 24PX120X0.5XA	1	PCS		
25002132	30WIRE 150 2P	4	PCS		
25002131	28WIRE 270 230 2.0/9P 2.0/3P 2.0/6P	1	PCS		
25002133	28WIRE 260 2.0/4PX2	1	PCS		
25002134	28WIRE 150 2.0/5PX2	1	PCS		
25001324	28#WIRE 120 2.0/6PX2	1	PCS		
25002135	28WIRE 250 2.0/8PX2 2.0/5P	1	PCS		
25002136	28WIRE+28WIRE 50 2.0/4PX2	1	PCS		
25002138	20WIRE 70 2.5/3PX2	1	PCS		
25001321	28#WIRE 50 2.0/3PX2	1	PCS		
25002139	28WIRE 120 2.0/10PX2	1	PCS		
25002141	26WIRE 70 2.0/4PX2	1	PCS		
25000437	26# WIRE 70 2.0/5PX2	1	PCS		
09-MCD908-02A101	AMP UNIT PARTS ASS'Y MCD908/12	1	SET		
07-MCD908-03A101	AMP PCB ASS'Y MCD709	1	SET		
15000019	FIXED INDUCTOR 22u(7A)	2	PCS	L300, 301	
13000063	CHIP RESISTOR 10 1/4W J (1206)	2	PCS	R319, 320	
13000640	CHIP RESISTOR 10 1/16W J(0603)	2	PCS	R317, 318	
13000178	CARBON FILM RESISTOR 100 1/8W J-52	1	PCS	R321	
14000189	ELECTROLYTIC CAP. 10u 50V L-5 5X11	1	PCS	C300	
14000208	ELECTROLYTIC CAP. 100u 25V L-5 6.3X11	1	PCS	C338	
14000668	CHIP CERAMIC CAP. 102P 50V K (0603) X7R	10	PCS	C330, 332, 329, 327, 331, 324, 335, 336	
14000382	CHIP CERAMIC CAP. 104P 50V M (0603) Y5V	11	PCS	C355, 356, 360-364, 359-371, 373	
14000450	NONINDUCTIVE CAP. 104J 100V K	4	PCS	C368, 367, 374, 376	
13000219	CARBON FILM RESISTOR 120 1/8W J-52	1	PCS	R322	
14000743	CHIP CERAMIC CAP. 153P 50V M (0603) Y5V	1	PCS	C377, 379, 381	
25000012	PINS CONNECTOR 2.5/2P	1	PCS	CN303	
13000671	CHIP RESISTOR 22 1/16W J(0603)	1	PCS	R310	
13000096	CHIP RESISTOR 22 1W J (2512)	2	PCS	R311, 312	
14000741	CHIP CERAMIC CAP. 220P 50V K (0603) X7R	6	PCS	C345, 347, 354, 353, 350, 348	
14000256	ELECTROLYTIC CAP. 220u 16V L-5 6.3X11	1	PCS	C393	
14000756	CHIP CERAMIC CAP. 224P 50V M (0603) Y5V	1	PCS	C392	
13000653	CHIP RESISTOR 130K 1/16W J(0603)	1	PCS	R316	
14000678	NONINDUCTIVE CAPACITOR 334J 100V K-5	1	PCS	C382, 383	
13000697	CHIP RESISTOR 4.7K 1/16W J(0603)	1	PCS	R300	
16000104	RECTIFIER DIODE 4001-52	2	PCS	D301, 300	
14000663	ELE. CAPACITOR 470u 35V L 105° C 10X16	2	PCS	C387, 388	
14000676	CHIP CERAMIC CAP. 474P 50V M (0603) Y5V	4	PCS	C339, 341, 342, 344	
13000675	CHIP RESISTOR 22K 1/16W J(0603)	2	PCS	R314, 315	
14000336	ELECTROLYTIC CAP. 47u 35V L-5 5X11	2	PCS	C390, 389	

Part list

14000342	ELECTROLYTIC CAP. 47 μ 63V L-5 6.3X11	1	PCS	C384	
25000029	PINS CONNECTOR 2.5/4P	1	PCS	CN300	
16000068	ZENER DIODE 5.1V 1/2W-52	1	PCS	DZ300	
13000705	CHIP RESISTOR 5.6K 1/16WJ(0603)	5	PCS	R306, 308, 305, 309, 304	L06-008-011
13000667	CHIP RESISTOR 2.2K 1/16W J(0603)	1	PCS	R303	L06-008-011
25000051	PINS CONNECTOR 2.5/8P	1	PCS	CN301	L06-008-011
17000005	CHIP TRANSISTOR BC817-25	1	PCS	Q300	
33000018	FERRITE BEAD JRHW0349 BLUE	2	PCS	L303, 304	
19000120	CHIP IC TDA8920(PACKING)	1	PCS	IC300	
36000685	MICA INSULATION SHEET 14.5X11	2	PCS		
35-MCD908-03A1	AMP PCB MCD908-03	1	PCS		
37-MCD908-07A100	HEAT SINK MCD908 L=55	1	PCS		
36000685	MICA INSULATION SHEET 14.5X11	1	PCS		
39-MCD705-40A100	PLASTICI PIPE H=3.7	2	PCS		
38000231	SCREW 3 X 12 BT NICKEL-PLATE	2	PCS		
07-MCD908-04A101	POWER CONTROL PCB ASS'Y MCD908/12	1	SET		
11000187	Δ TRANSFORMER ECO-228A-12 230V/50	1	PCS	T401	
34000012	RELAY 10A 240VAC-30VDC HLS-14F1L-DC12V-C	1	PCS	REL400	
16000104	RECTIFIER DIODE 4001-52	4	PCS	D400-404	
14000384	CHIP CERAMIC CAP.104P 50V K (0805) X7R	1	PCS	C400	
13000117	CHIP RESISTOR 33K 1/16W J (0805)	1	PCS	R400	
13000793	CHIP RESISTOR 4.7K 1/4W J (1206)	1	PCS	R402	
13000851	METAL OXIDE FILM RESISTOR 39 1/4W J-52	1	PCS	R401	
17000025	TRANSISTOR 8050C-5	1	PCS	Q400	
14000256	ELECTROLYTIC CAP. 220 μ 16V L-5 6.3X11	1	PCS	C401	
25000012	PINS CONNECTOR 2.5/2P	1	PCS	CN401	
25001581	PIN SOCKET 3.95/3P	1	PCS	CN402	
25000014	PINS CONNECTOR 2.0/3P	1	PCS	CN400	
35-MCD908-04A1	ECO POWER PCB MCD908-04 ECO	1	PCS		
07-MCD908-01A101	POWER PCB ASS'Y MC908/12/37	1	SET		
14000199	ELECTROLYTIC CAP. 100 μ 16V L-5 5X11	1	PCS	C117	L06-008-011
14000669	CHIP CERAMIC CAP.103P 50V K (0603) X7R	1	PCS	C106	
14000452	NONINDUCTIVE CAP. 104J 100V K-5	7	PCS	C139, 140, 134, 135, 153, 154, 155	L06-008-011
13000070	CHIP RESISTOR 10K 1/16W J (0805)	2	PCS	R150, 151	
13000646	CHIP RESISTOR 10K 1/16W J(0603)	8	PCS	R159, 129, 130, 132, 134, 125, 160, 133	
13000068	CHIP RESISTOR 1K 1/4W J (1206)	1	PCS	R141	
13000664	CHIP RESISTOR 1M 1/16W J(0603)	1	PCS	R135	
13000314	CARBON FILM RESISTOR 2.2 1/4W J-52	2	PCS	R162, 163	
13000667	CHIP RESISTOR 2.2K 1/16W J(0603)	1	PCS	R138	
13000876	CHIP RESISTOR 2.7K 1/4W J(1206)	1	PCS	R175	
13000290	CARBON FILM RESISTOR 220 1/8W J-52	1	PCS	R137	

Part list

13000105	CHIP RESISTOR 220K 1/16W J (0603)	1	PCS	R136	
14000647	ELECTROLYTIC CAP. 220 μ F 25V L-5 105° C 8X9	1	PCS	C157	L06-008-011
14000681	ELECTROLYTIC CAPACITOR 220 μ 50V L-5 10X12.5	2	PCS	C121, 122	
13000683	CHIP RESISTOR 3.3K 1/16W J(0603)	2	PCS	R173, 174	
25000051	PINS CONNECTOR 2.5/8P	1	PCS	CN109	
25000020	PIN SOCKET 3.95/3P	1	PCS	CN110	
25000075	PIN CONNECTOR 30P BENDING L=8.8mm	1	PCS	CN104	
25000014	PINS CONNECTOR 2.0/3P	1	PCS	CN102	
25000034	PINS CONNECTOR 2.0/5	1	PCS	CN108	L06-008-011
13000697	CHIP RESISTOR 4.7K 1/16W J(0603)	1	PCS	R140	
13000793	CHIP RESISTOR 4.7K 1/4W J (1206)	1	PCS	R139	
14000306	ELECTROLYTIC CAP. 4.7 μ 50V L-5 5X11	2	PCS	C105, 103	
16000104	RECTIFIER DIODE 4001-52	4	PCS	D108, 109, 102, 107	L06-008-011
16000016	DIODE 4148	1	PCS	D110	
13000147	CEMENT RESISTOR 47 5W J	1	PCS	R161	L06-008-011
14000361	ELECTROLYTIC CAP 4700 μ 35V L105° C 18X35.5	2	PCS	C151, 152	
14000675	CHIP CERAMIC CAP. 473P 50V M (0603) Y5V	1	PCS	C156	
13000406	CARBON FILM RESISTOR 47K 1/8W J-52	1	PCS	R113	
13000731	CHIP RESISTOR 47K 1/4W J(1206)	1	PCS	R122	
13000125	CHIP RESISTOR 47K 1/16W J (0603)	2	PCS	R106, 110	
13000712	CHIP RESISTOR 680 1/16W J(0603)	2	PCS	R172, 171	
19000112	IC 7812	1	PCS	IC101	
25000973	PIN SOCKET 2.0/13P	1	PCS	CN108	
25000046	PINS CONNECTOR 2.5/7P	1	PCS	CN107	
17000009	CHIP TRANSISTOR 9014 (SOT-23)	2	PCS	Q111, 110	
17000013	TRANSISTOR 2SB772A	1	PCS	Q118	
17000005	CHIP TRANSISTOR BC817-25	1	PCS	Q119	
17000049	CHIP RESISTOR BC847B(SOT23)	1	PCS	Q117	
17000001	CHIP TRANSISTOR BC857B(SOT23)	2	PCS	Q116, 115	
18000013	MOSFET BUK7509-55A	2	PCS	Q113, 114	
16000085	ZENER DIODE BZX-79-B24V-52	2	PCS	DZ102, 103	
26000009	Δ FUSE F6.3A L250V(50F)	2	PCS	F102, 103	
26000051	Δ FUSE HOLDER (PLASTIC)	2	PCS	F102, 103	
24000115	SINGLE RCA SOCKET AV-8.4-0.8B BLACK	1	PCS	P100	
18000010	THYRISTOR RS1010G(10A)	1	PCS	DB101	
35-MCD908-01A1	POWER PCB MCD908-01	1	PCS		
07-MCD908-00A101	PRE-AMP PCB ASS'Y PH-MCD908/12	1	SET		
13000156	CARBON FILM RESISTOR 0.47 1/2W J	3	PCS	R50, 2, 22	
13000530	CHIP RESISTOR 100 1/4W J(1206)	1	PCS	R37	
14000021	CERMIC CAP. 104P 50V K-5	1	PCS	C3	
13000193	CARBON FILM RESISTOR 10K 1/8W J-52	1	PCS	R6	

Part list

13000071	CHIP RESISTOR 10K 1/4W J (1206)	1	PCS	R75,	
13000878	CARBON FILM RESISTOR 150K 1/2W J-52	2	PCS	R61, 60	
13000905	CHIP RESISTOR 100K 2.2K 1/4W J (1206)	2	PCS	R70, 71	
13000070	CHIP RESISTOR 10K 1/16W J (0805)	1	PCS	R53	L06-008-011
13000902	CARBON FILM RESISTOR 3.3K 1/2W J-52	3	PCS	R57, 56, 23	
13000429	CARBON FILM RESISTOR 560 1/2W J	2	PCS	R62, 63,	
13000067	CHIP RESISTOR 1K 1/16W J (0805)	1	PCS	R7	
13000067	CHIP RESISTOR 1K 1/16W J (0805)	1	PCS	R31	L06-008-011
13000731	CHIP RESISTOR 47K 1/4W J(1206)	2	PCS	R69, 67	L06-008-011
13000116	CHIP RESISTOR 3.3K 1/4W J (1206)	2	PCS	R66, 68	
13000113	CHIP RESISTOR 330 1/16W J (0805)	2	PCS	R29, 30	
13000903	CARBON FILM RESISTOR 330K 1/2W J-52	4	PCS	R65, 64, 59, 58	
14000291	ELECTROLYTIC CAP. 330 μ 16V L-5 8X11.5	1	PCS	C1	
13000418	CARBON FILM RESISTOR 4.7 1/2W J-52	1	PCS	R8	
14000306	ELECTROLYTIC CAP. 4.7 μ 50V L-5 5X11	2	PCS	C19, 18	
19000112	IC 7812	1	PCS	U1	
13000122	CHIP RESISTOR 470 1/16W J 0805	1	PCS	R1	
13000731	CHIP RESISTOR 47K 1/4W J(1206)	2	PCS	R4, 5	
13000904	CARBON FILM RESISTOR 8.2K 1/2W J-52	2	PCS	R54, 55	
17000035	TRANSISTOR 9014D-5 ($\beta > 500$)	2	PCS	Q3, 4	
17000070	TRANSISTOR 772	1	PCS	Q6	
25000009	PINS CONNECTOR 2.0/2P	3	PCS	CN15, 14, 13	
25000014	PINS CONNECTOR 2.0/3P	1	PCS	CN12	
25000034	PINS CONNECTOR 2.0/5	1	PCS	CN2	
25000049	PINS CONNECTOR 2.0/8P	1	PCS	CN3	
25000025	PINS CONNECTOR 2.0/4P	1	PCS	CN1	
25000038	PINS CONNECTOR 2.5/5P	1	PCS	CN8	
13000290	CARBON FILM RESISTOR 220 1/8W J-52	1	PCS	R72	
13000877	CHIP RESISTOR 100K 1/4W J (1206)	1	PCS	R73	
14000887	CAPACITOR 100U 350V	2	PCS	C6, C9	L06-008-011
14000918	MYLAR CAPACITOR 104P 280V K	2	PCS	C12, 13	L06-008-011
14000919	METALLIZED FILM CAP. 1 μ 250V J CBB22	2	PCS	C16, 17	L06-008-011
14000892	ELE. CAPACITOR 1U 450V L-5	2	PCS	C15, 14	
14000272	ELECTROLYTIC CAP. 2200 μ 25V L 13X21	1	PCS	C2	
14000256	ELECTROLYTIC CAP. 220 μ 16V L-5 6.3X11	3	PCS	C8, 33, 34	
14000893	CERAMIC CAPACITOR 223P 1000V L	1	PCS	C5	
13000124	CHIP RESISTOR 4.7K 1/16W J (0805)	1	PCS	R74	
16000104	RECTIFIER DIODE 4001-52	2	PCS	D3, 2,	
16000018	DIODE 4148-52	3	PCS	D1, 6, 5	
13000883	CARBON FILM RESISTOR 47K 1/2W J-52	6	PCS	R51, 52, 24, 25, 27, 28	
14000321	ELECTROLYTIC CAP. 47 μ 16V L-5 5X11	2	PCS	C20, 21	

Part list

16000068	ZENER DIODE 5.1V 1/2W-52	1	PCS	ZD1	
14000002	CERMIC CAP. 5p 50V±0.25p npo	2	PCS	C11, 10	
17000005	CHIP TRANSISTOR BC817-25	1	PCS	Q5	
16000235	RECTIFIER DIODE 4007-52	4	PCS	D7-10	
19000075	IC PT2309-S(L) SOP	1	PCS	U3	
18000034	MOSFET 12AX7	2	PCS	Q1, 2	
24000340	SOCKET GZC9-B(PCB)	2	PCS	Q1, 2	
24000353	HEADPHONE JACK Φ6.35 CK-6.35-6	1	PCS	JACK1	
35-MCD908-00A1	CASSETTE PCB MCD908 MCD908-00	1	PCS		
37000444	HEAT SINK 21X16X33	1	PCS		
38000223	SCREW 3 X 6 BT NICKEL-PLATE	2	PCS		
07-MCD908-08A101	ROT ENCODER PCB ASS'Y MCD908	1	SET		
35-MCD908-08A1	ENCODER PCB MCD908 MCD908-08	1	PCS		
30000001	ROT ENCODER ED-1612-00-F15 40-80G	1	PCS		
07-MCD908-09A101	OUTPUT PCB ASS'Y PH-MCD908	1	SET		
25000029	PINS CONNECTOR 2.5/4P	1	PCS	CN201	
24000288	4PINS SPEAKER SOCKET PST-410A/E	1	PCS	J201	S06-008-095
35-MCD908-09A1	OUTPUT PCB MCD908 MCD908-09	1	PCS		
07-MCD908-05A101	AMP UNIT LAMP PCB ASS'Y MCD908-12	2	SET		
13000135	CHIP RESISTOR 680 1/16W J (0805)	6	PCS	R501-503	
16000249	LED DIODE Φ3 ORANGE	6	PCS	LED501-503	
35-MCD908-05A1	LENS PCB MCD908 MCD908-05	2	PCS	MCD908-501, 502	
07-MCD908-12A101	HEADPHONE PCB ASS'Y MCD908	1	SET		
24000036	HEADPHONE JACK J3506B 3.5mm(SILVER)	1	PCS		
35-MCD908-12A1	HEADPHONE PCB MCD908 MCD908-12	1	PCS		
07-MCD908-17A101	PUSH KEY PCB ASS'Y MCD908	1	SET		
23000036	LIGHT TOUCH SW. 6X6X5 250g	1	PCS		
35-MCD908-17A1	KEY PCB MCD908 MCD908-17	1	PCS		
07-MCD908-13A101	LAMP PCB ASS'Y MCD908-13	6	SET		
13000833	CHIP RESISTOR 680 1/4W J (1206)	1	PCS	R1301	
16000035	LED DIODE Φ3 3B4SCB01 (BLUE)	1	PCS	LED1301	
35-MCD908-13A1	LENS PCB MCD908 MCD908-13	1	PCS		
08-MCD908-02A101	AMP UNIT CASING PARTS ASS'Y MCD908/12	1	SET		
37-MCD908-03A101	MCD908 AMP CAB. METAL BOTTOM	1	PCS		
37-MCD908-04A101	MCD908 AMP CABINET TOP(ALU.)	1	PCS		
37-MCD908-05A100	MCD908 AMP LAMP BRACKET(ALU.)	1	PCS		
37-MCD908-06A100	MCD908 AMP LAMP PALTE	1	PCS		
39-MCD908-20A101	MCD908 AMP CABINET FRONT ABS	1	PCS		
37-MCD908-08A100	MCD908 BRACKET(ALU.) DECK CIRCLE	2	PCS		
39-MCD908-03A101	MCD908 AMP CABINET FRONT LENS	1	PCS		
39-MCD908-21A101	MCD908 AMP SOURCE KNOB	1	PCS		

Part list

39-MCD908-22A100	MCD908 AMP SOURCE BRACKET ABS	1	PCS	
39-MCD908-13A101	MCD908 DVD TOP LAMP ABS	1	PCS	
39-MCD908-23A101	MCD908 AMP CABINET BOTTOM ABS	1	PCS	
39-MCD908-16A100	MCD908 SIDE PLATE-L ABS	1	PCS	
39-MCD908-17A100	MCD908 SIDE PLATE-R ABS	1	PCS	
39-MCD908-18A100	MCD908 PCB-L PMMA	1	PCS	
39-MCD908-19A100	MCD908 PCB-R PMMA	1	PCS	
40000262	MCD908 SIDE PLATE-L	1	PCS	
40000263	MCD908 SIDE PLATE-R	1	PCS	
39-MCD908-24A101	MCD908 VOL KNOB ABS	1	PCS	
32000244	MINI FAN RDM4010S DC12V/0.7A	1	PCS	
11000265	△TRANSFORMER 423D-12 230V/50	1	PCS	
24000039	△AC SOCKET 1A/250V (AC-001)	1	PCS	
33000012	FERRITE CORE JTH29X19X15	1	PCS	FIXING FERRITE CORE
36000190	BLACK SPONGE Φ32X2 40°	1	PCS	
36000279	MCD708PVC SHEET 59x57x0.3 AMP	1	PCS	ECO POWER SUPPLY PLATE X1
38000091	SCREW 2.6 X 5 PWMTT BLACK	8	PCS	PLASTIC CAB. BOTTOM
38000041	SCREW 3 X 10 FM NICKEL-PLATE Φ6	2	PCS	AC SOCKET
38000320	OUTSIDE HEXAGON GALVANIZED M3	2	PCS	AC SOCKET SCREW
38000273	SCREW 3 X 4 BMTT NICKEL-PLATE	2	PCS	FERRITE CORE X2
38000013	SCREW 3 X 5 PMTT SILVER	9	PCS	ECO POWER SUPPLY PLATE X2, AMP PCB X4,
38000117	SCREW 3 X 12 PA SILVER	3	PCS	AMP UNIT TERMINAL X3
38000654	SCREW 2.6 X 5 BMTT NICKEL-PLATE	4	PCS	TOP LENS X2, ALM. BRACKET& STEEL SHEET X2
38000279	SCREW 3 X 6 BMTT NICKEL-PLATE	4	PCS	TOP LENS X2, CAB. TOP & CAB. BOTTOM X2
38000071	SCREW 3 X 6 FMTT Φ6 NICKEL-PLATE	2	PCS	CAB. TOP & BACK PLATE
38000489	SCREW 3 X 8 PA NICKEL-PLATE	8	PCS	L&R SIDE PLATE & WOOD BLOCK
38000243	SCREW 2.6 X 8 PT NICKEL-PLATE	8	PCS	ALM. BRACKET TO PANEL X4, GLISTEN STEEL X4
38000270	SCREW 2.6 X 6 BMTT NICKEL-PLATE	4	PCS	CAB. METAL BOTTOM TO ALM. BRACKET X4
38000275	SCREW 3 X 5 BMTT NICKEL-PLATE	4	PCS	CAB. METAL BOTTOM TO ALM. BRACKET X4
25002132	30WIRE 150 2P	4	PCS	
25002137	28WIRE 70 2.0/3PX2	1	PCS	
25002142	28WIRE 50 2.0/2PX2	1	PCS	
25002143	28WIRE 180 2.0/4PX1	1	PCS	
25002144	20WIRE+28WIRE 50 2.5/8PX2	1	PCS	
25002145	20WIRE 30 50 2.5/4PX2	1	PCS	
25002148	28WIRE+28WIRE 280 2.0/5PX2	1	PCS	
25002147	28WIRE 400 2.0/8PX2	1	PCS	
25001893	30WIRE 250 2.0/2PX1	4	PCS	
25002146	26WIRE 300 2.0/3PX2	1	PCS	
25002150	18 DOUBLE INSULATION WIRE 400	1	PCS	
09-MCD908-03A101	SPEAKER BOX ASS'Y MCD908/12	2	SET	

Part list

24000182	SP. OUTPUT CLIP DJ-028D 92X80	1	PCS	
25000957	SPK CONNEOTION WIRE 22 2P 250 RED/BLACK	3	PCS	LINK SUBWOOFER SPEAKER X2, LINK SPEAKER X1
28000365	SPEAKER 5 1/4" 4Ω	1	PCS	
28000366	SPEAKER 28	1	PCS	
28000081	RIBBON TWEETER SPEAKER(GOLD)	1	PCS	
36000306	MCD700 GRILLE FIXER	4	PCS	
39000654	SCUTCHEON PHILIPS 29. 2X6	1	PCS	
37-MCD700-12A101	GRILLE FIX POS MCD700	4	PCS	
38000118	SCREW 3 X 16 PA Φ5 BLACK	4	PCS	SUBWOOFER SPEAKER
38000208	SCREW 4 X 16 BA BLACK	4	PCS	SPEAKER WIRE NIP
38000194	SCREW 3 X 12 BA BLACK	4	PCS	FREQUENCY DIVIDER
38000415	SCREW 3X6 PA NICKEL-PLATE	4	PCS	SPEAKER
39-MCD700-32A101	MCD700 DUMMY RIBBON COVER E56070	1	PCS	
39-MCD908-27A101	MCD908 PLASTIC GRILLE BLACK	1	PCS	
40000282	WOODEN BOX MCD908 204X330X238	1	PCS	
39-MCD700-32A101	MCD700 DUMMY RIBBON COVER E56070	1	PCS	
39-MCD908-25A101	MCD908 DECORATIVE LOOP	1	PCS	
39-MCD908-26A101	MCD908 PLASTIC SPEAKER	1	PCS	
39000346	PORT TUBE DJ-213 MCD703 SUB-WOOFER	1	PCS	
41002194	PAPER Φ57. 5XΦ52. 5X110 MCD703 SUB-WOOFER	1	PCS	
41002195	PAPER Φ52. 5XΦ49. 5X60 MCD703 SUB-WOOFER	1	PCS	
36000216	RUBBER FOOT MCD700 Φ12X8X7BLACK	4	PCS	
41003789	TISSUE BLOW MOLDING 65X46cm	1	PCS	
36000288	NYLON CABLE TIES 3X150	1	PCS	FREQUENCY DIVIDER
27000139	SPEAKER CORDS 3M	1	PCS	
41003734	SPEAKER LABEL MCD908/12/05	1	PCS	
07-MCD908-25A101	FREQUENCY DIVIDER ASS'Y PH MCD908	1	SET	
13000907	CEMENT RESISTOR 10 10W J	1	PCS	R1
15000141	FIXED INDUCTOR F22140(0. 3mH/0. 5mm)	1	PCS	L1
15000140	FIXED INDUCTOR F42450(0. 3mH/0. 6mm)	1	PCS	L2
14000916	ELECTROLYTIC CAPACITOR 4. 7u 100V M SNP	1	PCS	C1
14000917	ELECTROLYTIC CAPACITOR 1. 8u 100V M SNP	1	PCS	C2
35-MCD908-25A1	FREQUENCY DIVIDER MCD908-25 67X42. 1	1	PCS	
09-PRC507-01A101	REMOTE ASS'Y PRC507-01 MCD908/12/05	1	SET	
14000876	CHIP CERAMIC CAP. 30P 50V J (0603) NPO	2	PCS	C2, 3
13000122	CHIP RESISTOR 470 1/16W J 0805	1	PCS	R1
13000065	CHIP RESISTOR 100 1/16W J (0805)	3	PCS	R2, 8, 10
13000062	CHIP RESISTOR 10 1/16W J (0805)	1	PCS	R3
13000067	CHIP RESISTOR 1K 1/16W J (0805)	5	PCS	R4-7, 11
16000226	LED DIODE 1206 BLUE	3	PCS	LED01-03
14000190	ELECTROLYTIC CAP. 100u 10V L 5X11	1	PCS	C1

Part list

19000351	IC TM58PC20 CHIP	1	PCS	U1	
16000046	INFRARED-EMITTING DIODE Φ 5	1	PCS	D1	
17000005	CHIP TRANSISTOR BC817-25	1	PCS	Q1	
17000004	CHIP TRANSISTOR 8050 (SOT-23)	3	PCS	Q2-Q4	
20000011	PLASTIC COATING FILTER 455KHZ	1	PCS	XT1	
35-PRC507-01A1	REMOTE PCB PRC507 163.3X37.7	1	PCS		
39-PRC507-01A100	PRC507 REMOTE CONTROL CABINET TOP	1	PCS		
39-PRC507-02A100	PRC507 CABINET BOTTOM BLACK	1	PCS		
39-PRC507-03A100	PRC507 REMOTE SENSOR LENS	1	PCS		
39-PRC507-04A100	PRC507 REMOTE BATTERY COVER	1	PCS		
39-PRC507-05A100	PRC507 CABINET BOTTOM MIDDLE GRAY	1	PCS		
37-PRC507-01A100	REMOTE FR. PANEL PRC507 METAL DOME PRC507	1	PCS		
36000896	SPRING SHEET PRC507	1	PCS		
36000897	CONDUCTIVE RUBBER PRC507	1	PCS		
37-PRC507-02A100	PRC507 REMOTE SPRING WIRE 3 in 1	1	SET		
36000898	CORIUM 124X84X1.2	1	PCS		
38000675	SCREW 2 X 6 BT BLACK	2	PCS	CAB. BACK	
38000674	SCREW 2 X 6 FT BLACK	4	PCS	PCB	
41003776	REMOTE BATTERY BOX LABEL PRC507-01	1	PCS		
09-MCD908-04A101	ACCESSORY PARTS ASS'Y MCD908/12	1	SET		
25000232	SINGLE JUMPER WIRE (26#) L=5.5m BLACK	1	PCS		
25001949	WIRE 1.5m	1	PCS		S06-008-083
25002140	WIRE 380 2.5/30	1	PCS		
26000016	Δ AC LINE CORD 1.8m VDE	1	PCS		
41003582	I. M PH MCD908/12 - A	1	PCS		
41003581	I. M PH MCD908/12 - B	1	PCS		
41003578	QUICK START GUIDE PH MCD908/12 DUT. /LTA.	1	PCS		
41003579	QUICK START GUIDE PH MCD908/12 SPA. /GER.	1	PCS		
41003580	QUICK START GUIDE PH MCD908/12 ENG. /PAR.	1	PCS		
41002186	WARRANTY CARD PH 996500033498	1	PCS		
09-MCD908-05A101	PACKING PARTS ASS'Y MCD908/12	1	SET		
41003735	GIF BOX PH MCD908/12	1	PCS		