

## 1.NEW: L STAR amp model released.



## 2.NEW: Tuner & Looper habits remembering.

MG-30 will save the last setup of the Tuner or the Looper while you quit. Looper: STEREO / MONO, NR/AR, DRUM STYLE, TEMPO, etc. Tuner: CHROMATIC/GUITAR, A4, etc.


## 3.NEW: Press Knob 4 in the edit mode to revert to the last saved settings.

While you tweak the signal block, press Knob 4 to retrieve the last saved settings.

## 4.NEW: MIDI CC controls WAH engage/disengage.

ID	NAME	ORIGINAL MIDI CC	NEW MIDI CC	RANGE
1	Wah	1	0x0=0 	0-100

## 5.NEW: WAH engage/disengage via CTRL footswitch.

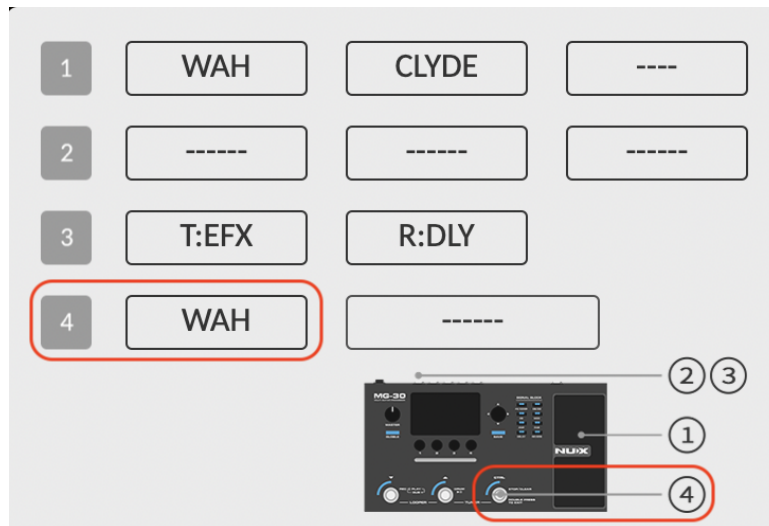

## 6.NEW: PATCH ROLLING via holding the UP or the DOWN footswitches.

Hold the UP or the DOWN footswitches to trigger PATCH ROLLING. You can go UP/DOWN to the desired patch slot, then press CTRL to enter.

## 7.Fixed: BRIT 2000, F PRINCETON switching noise solved.

## 8.Changed: Maximum & Minimum values of the EXP range.