



TOP and BOTTOM




FACIA for front of cab

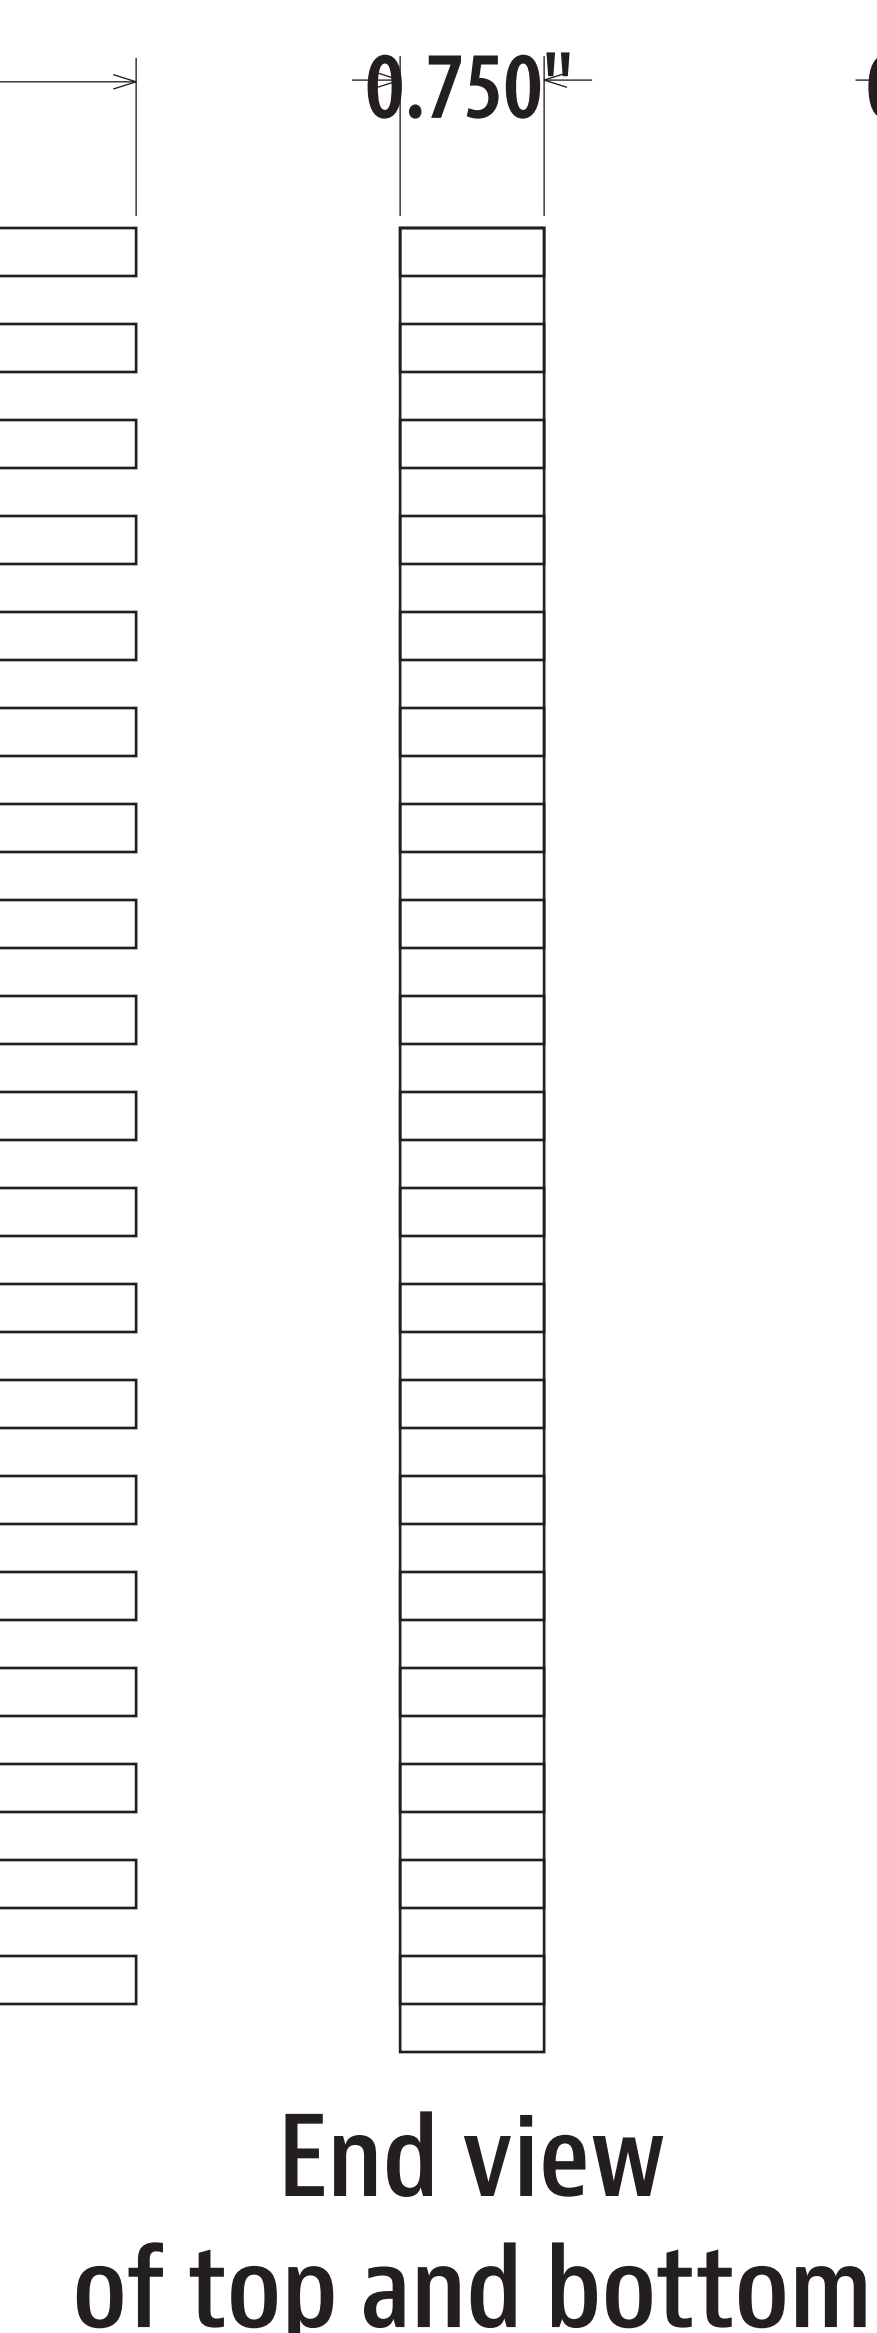


End view
of top and bottom

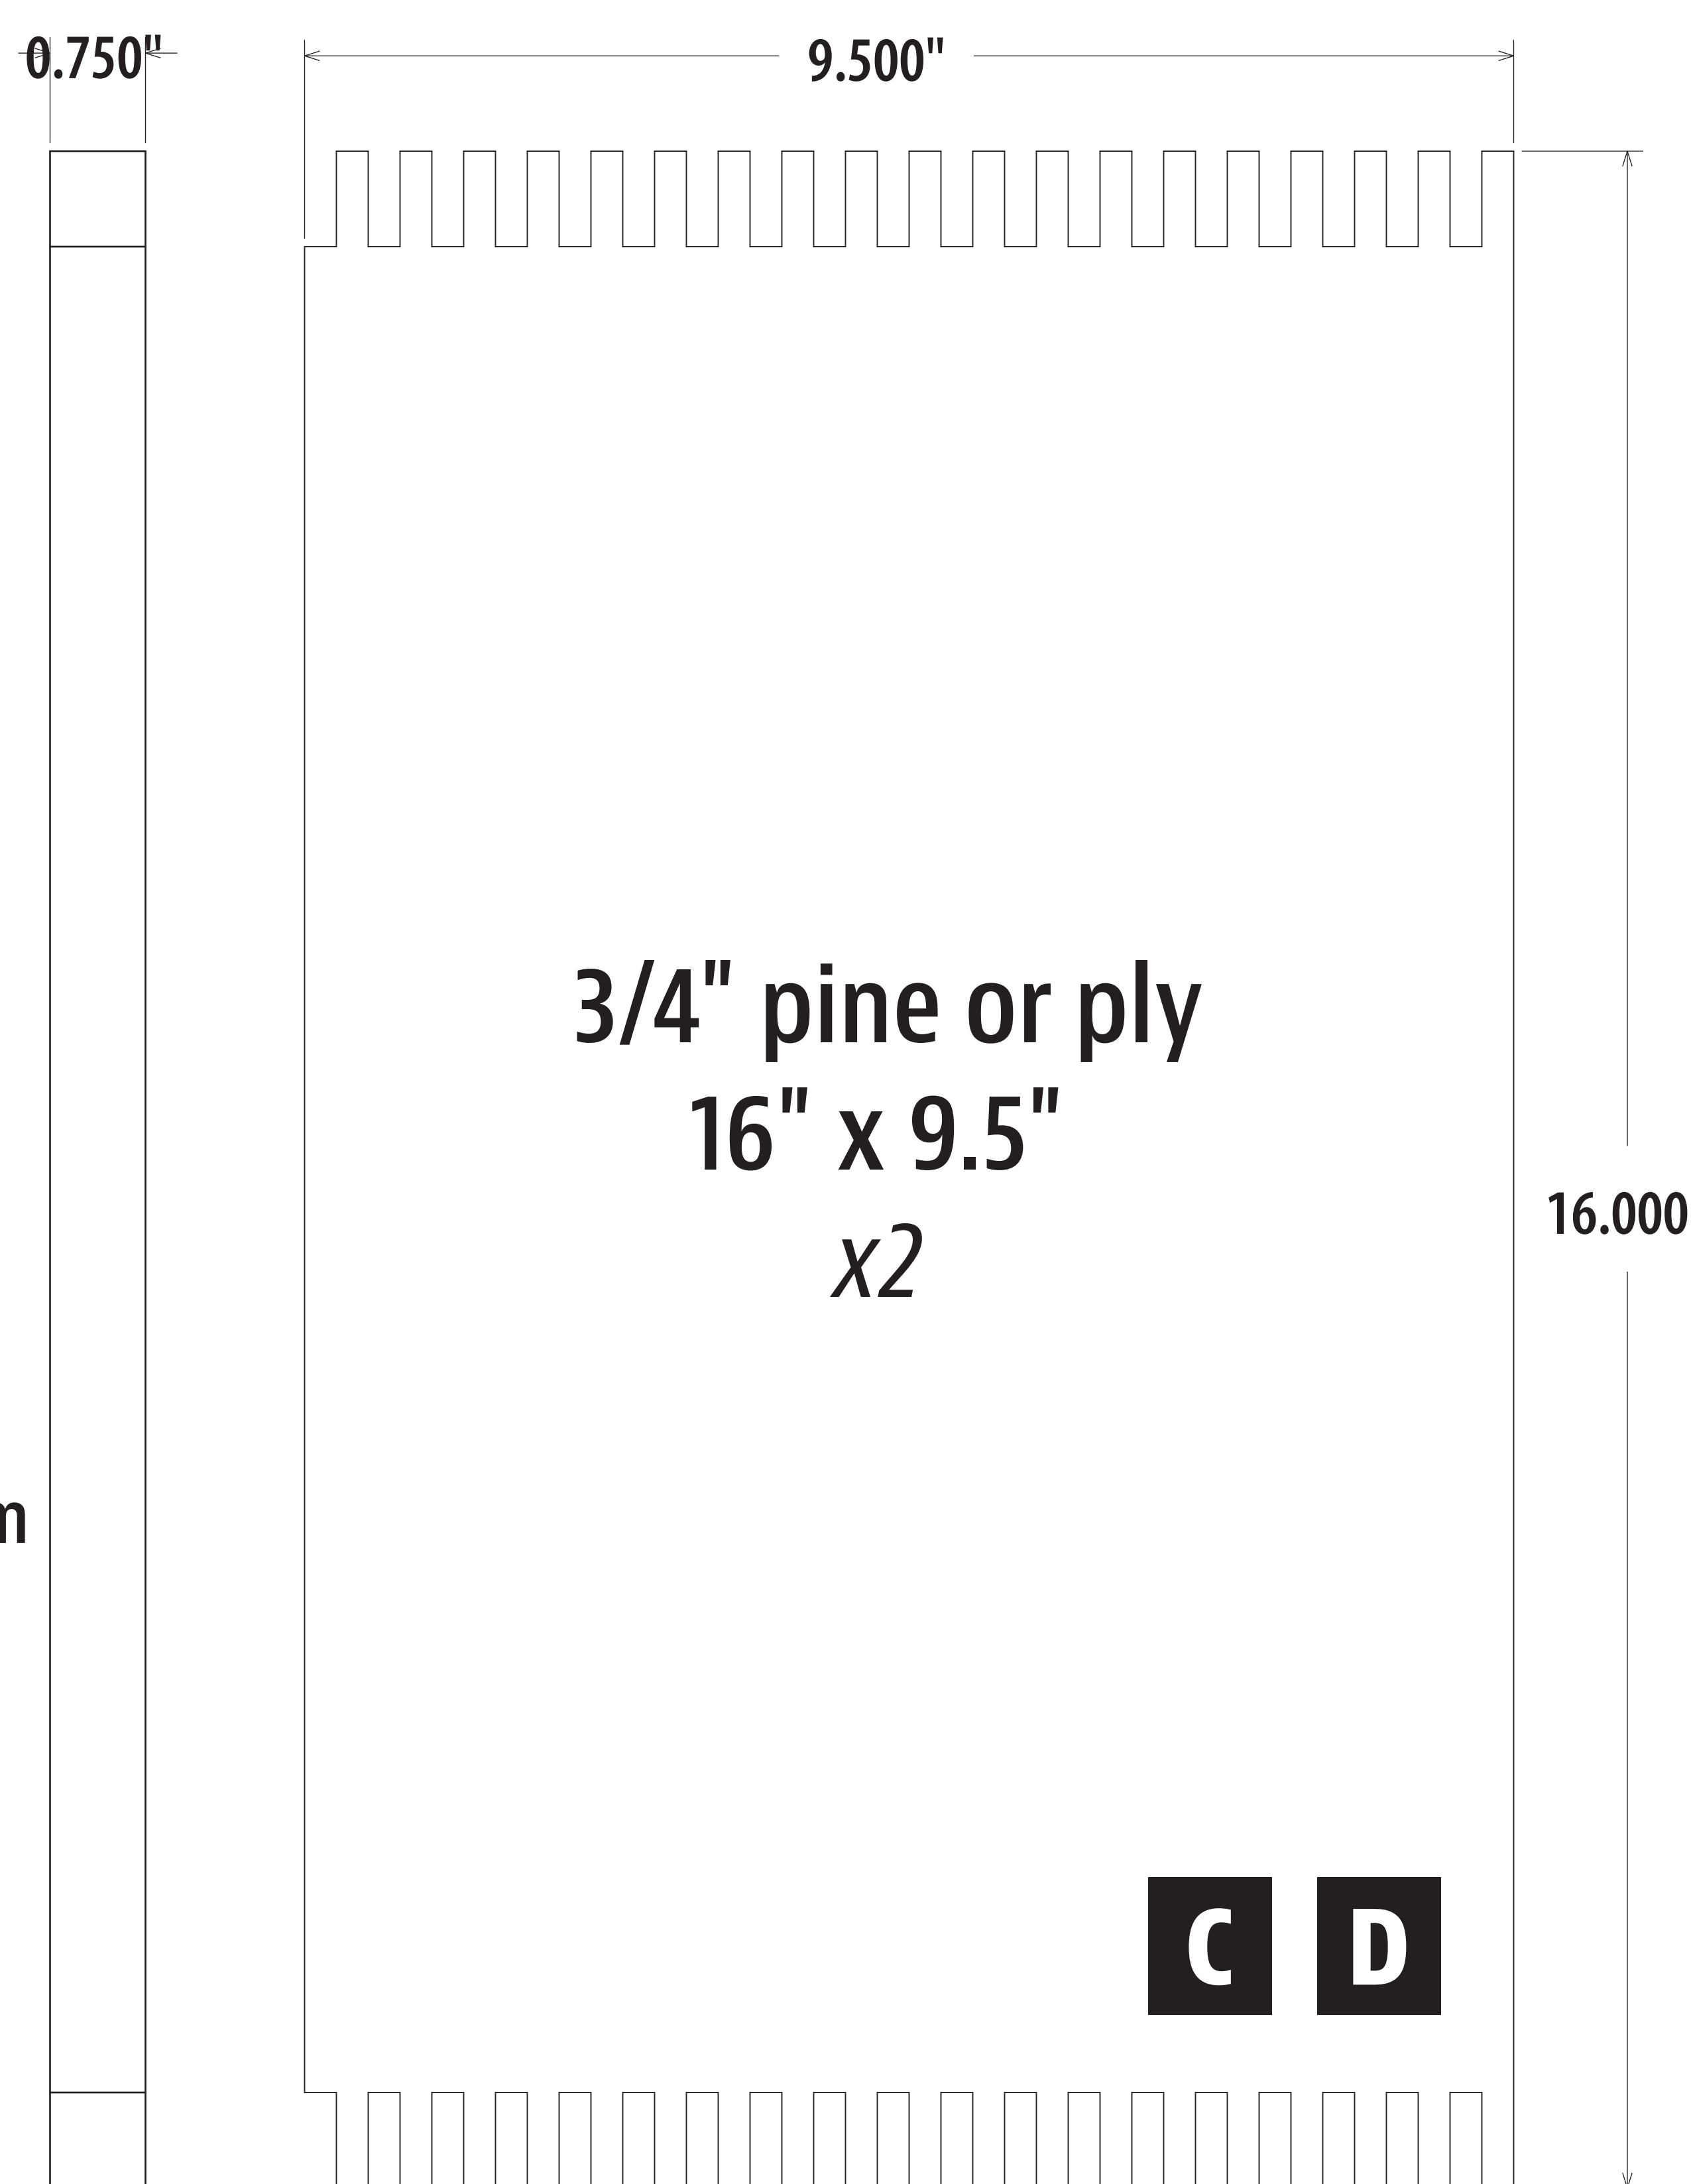



SIDE PANELS

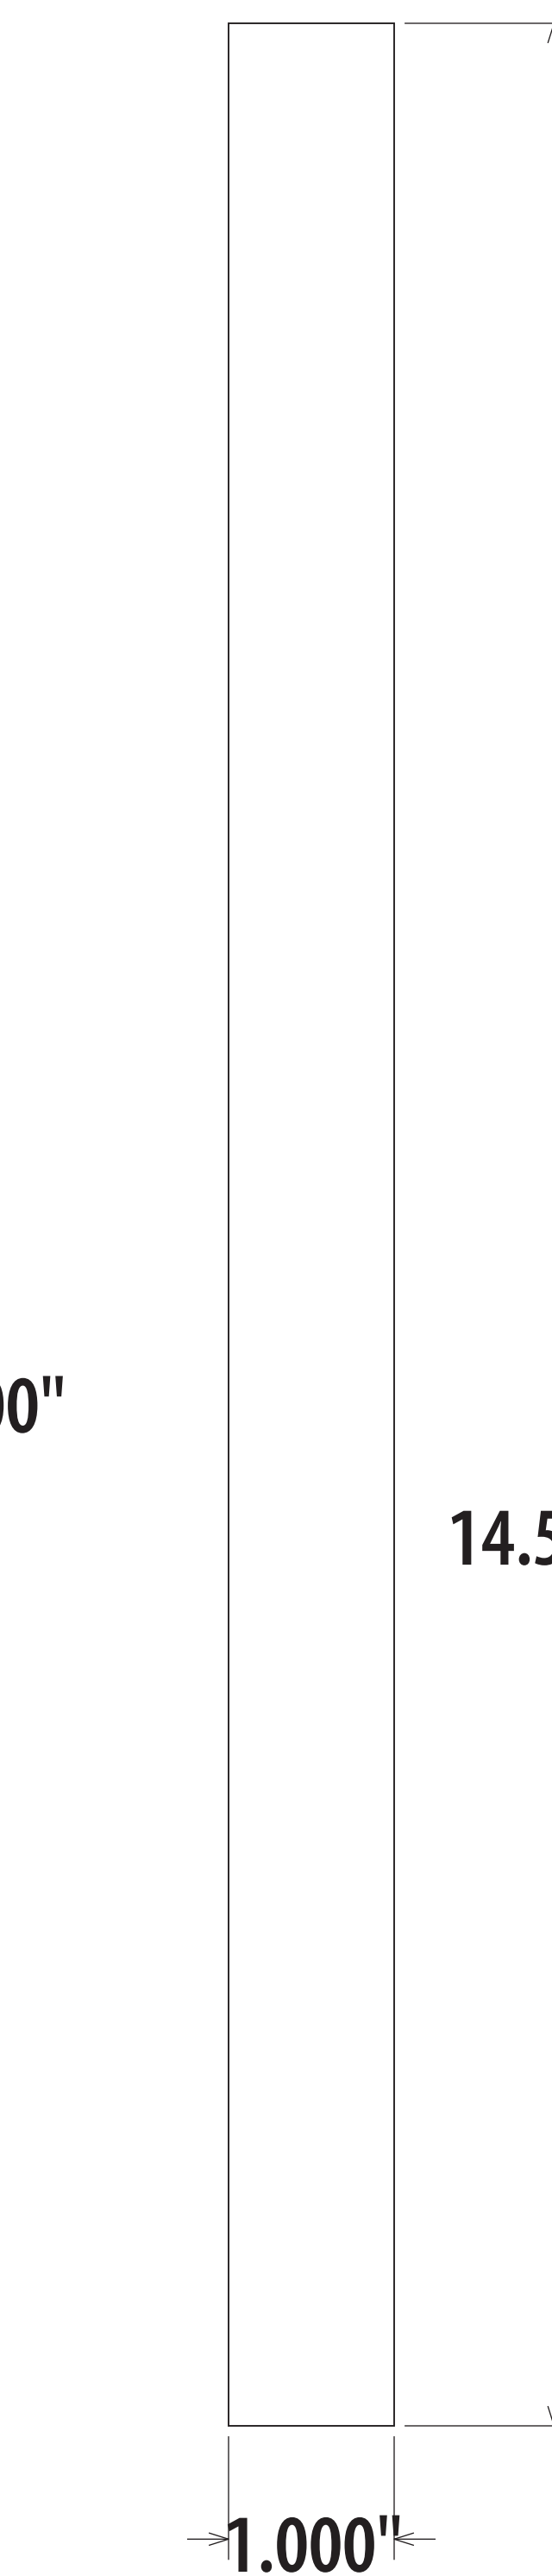

Side view
of side panels

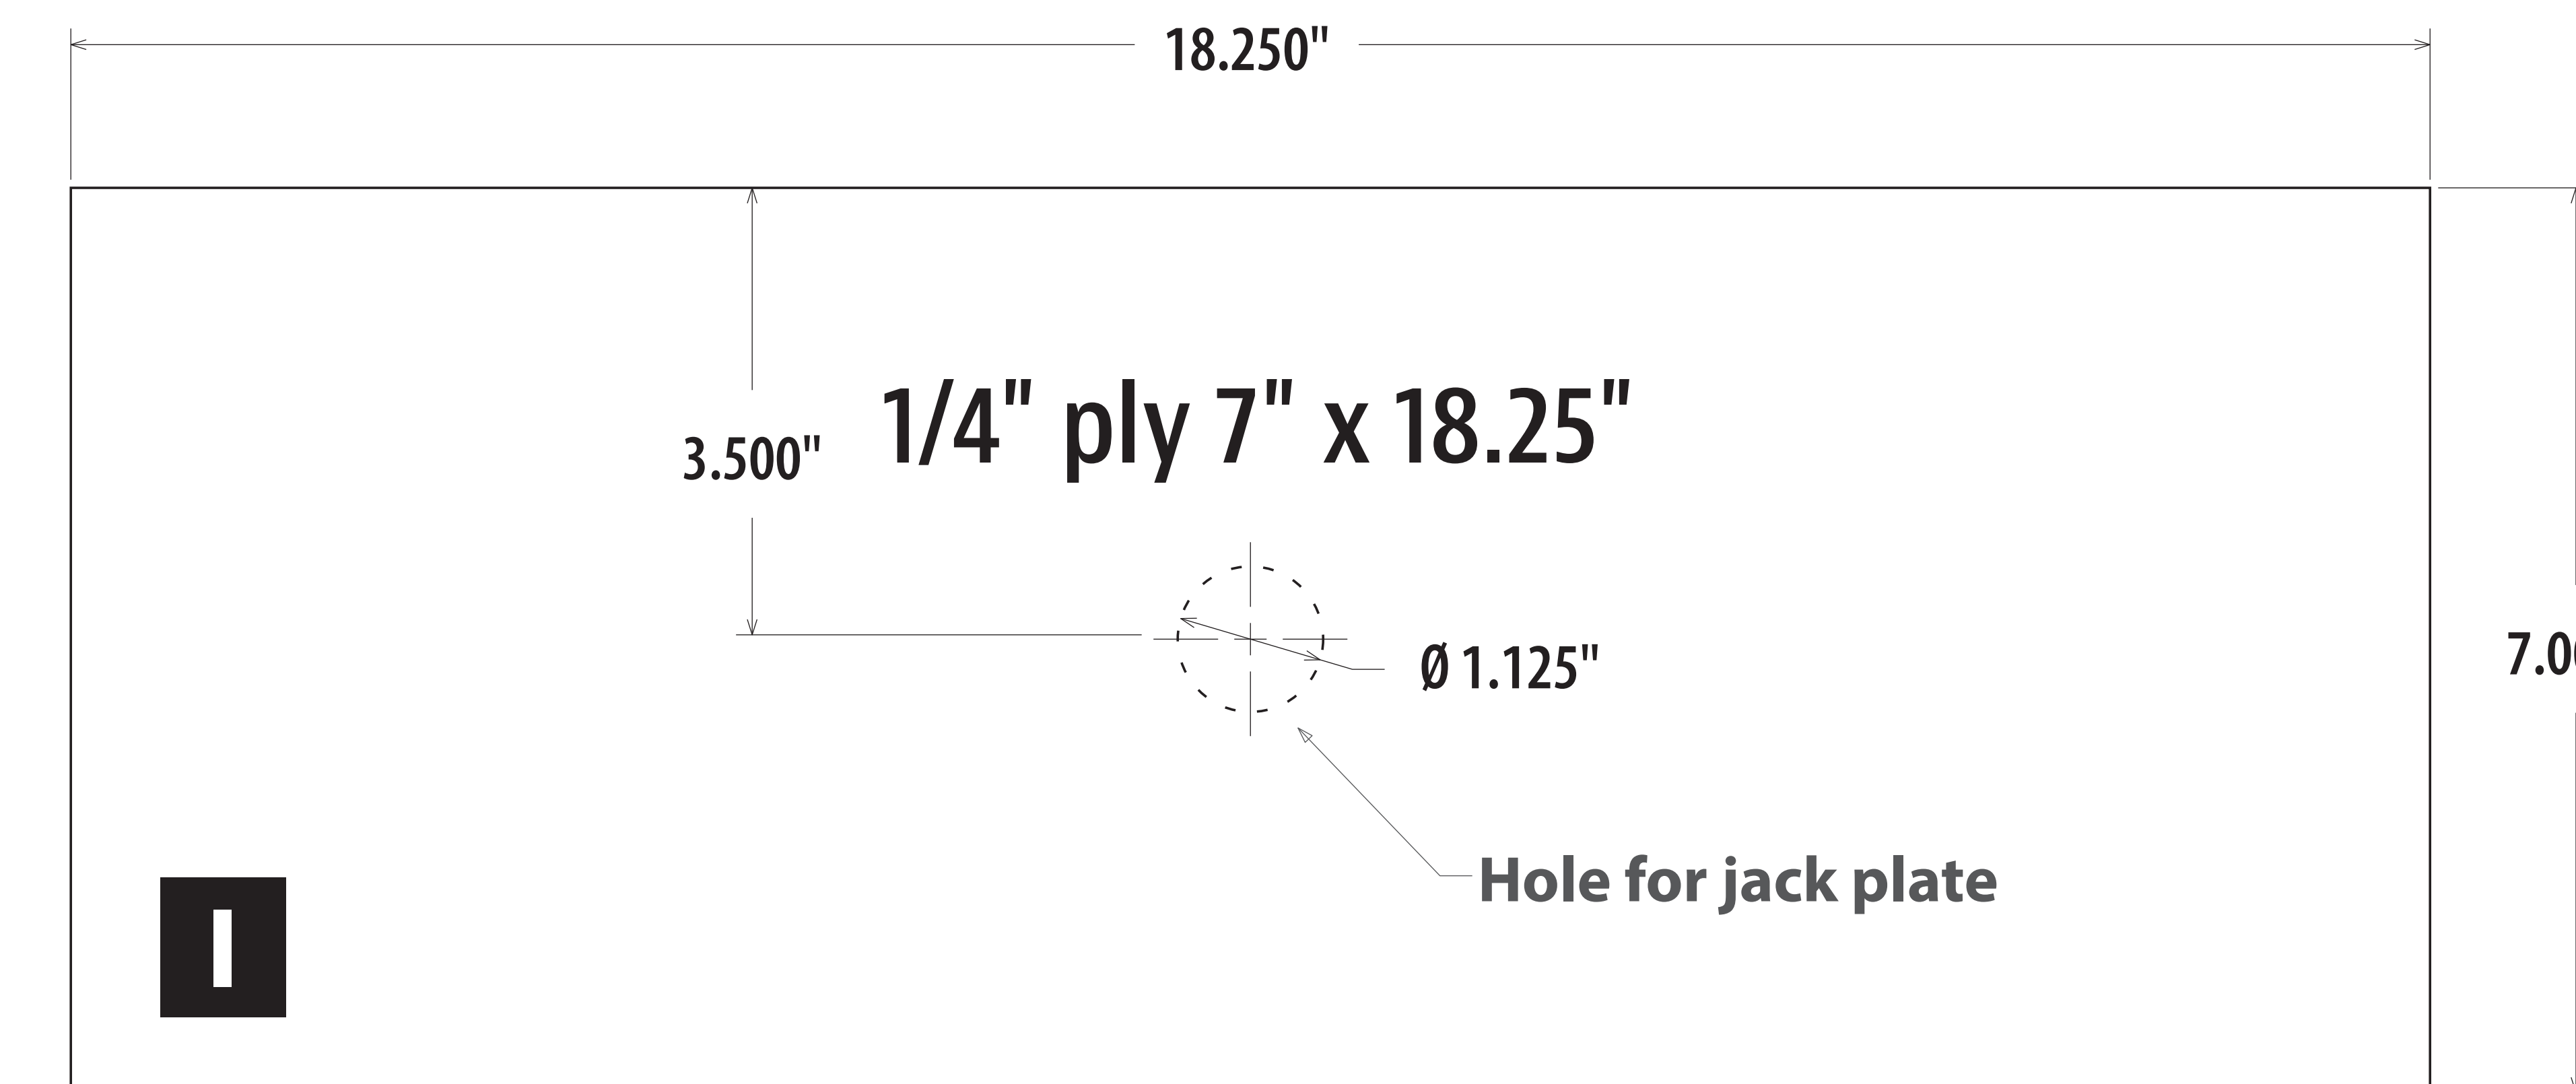


BACK PANELS

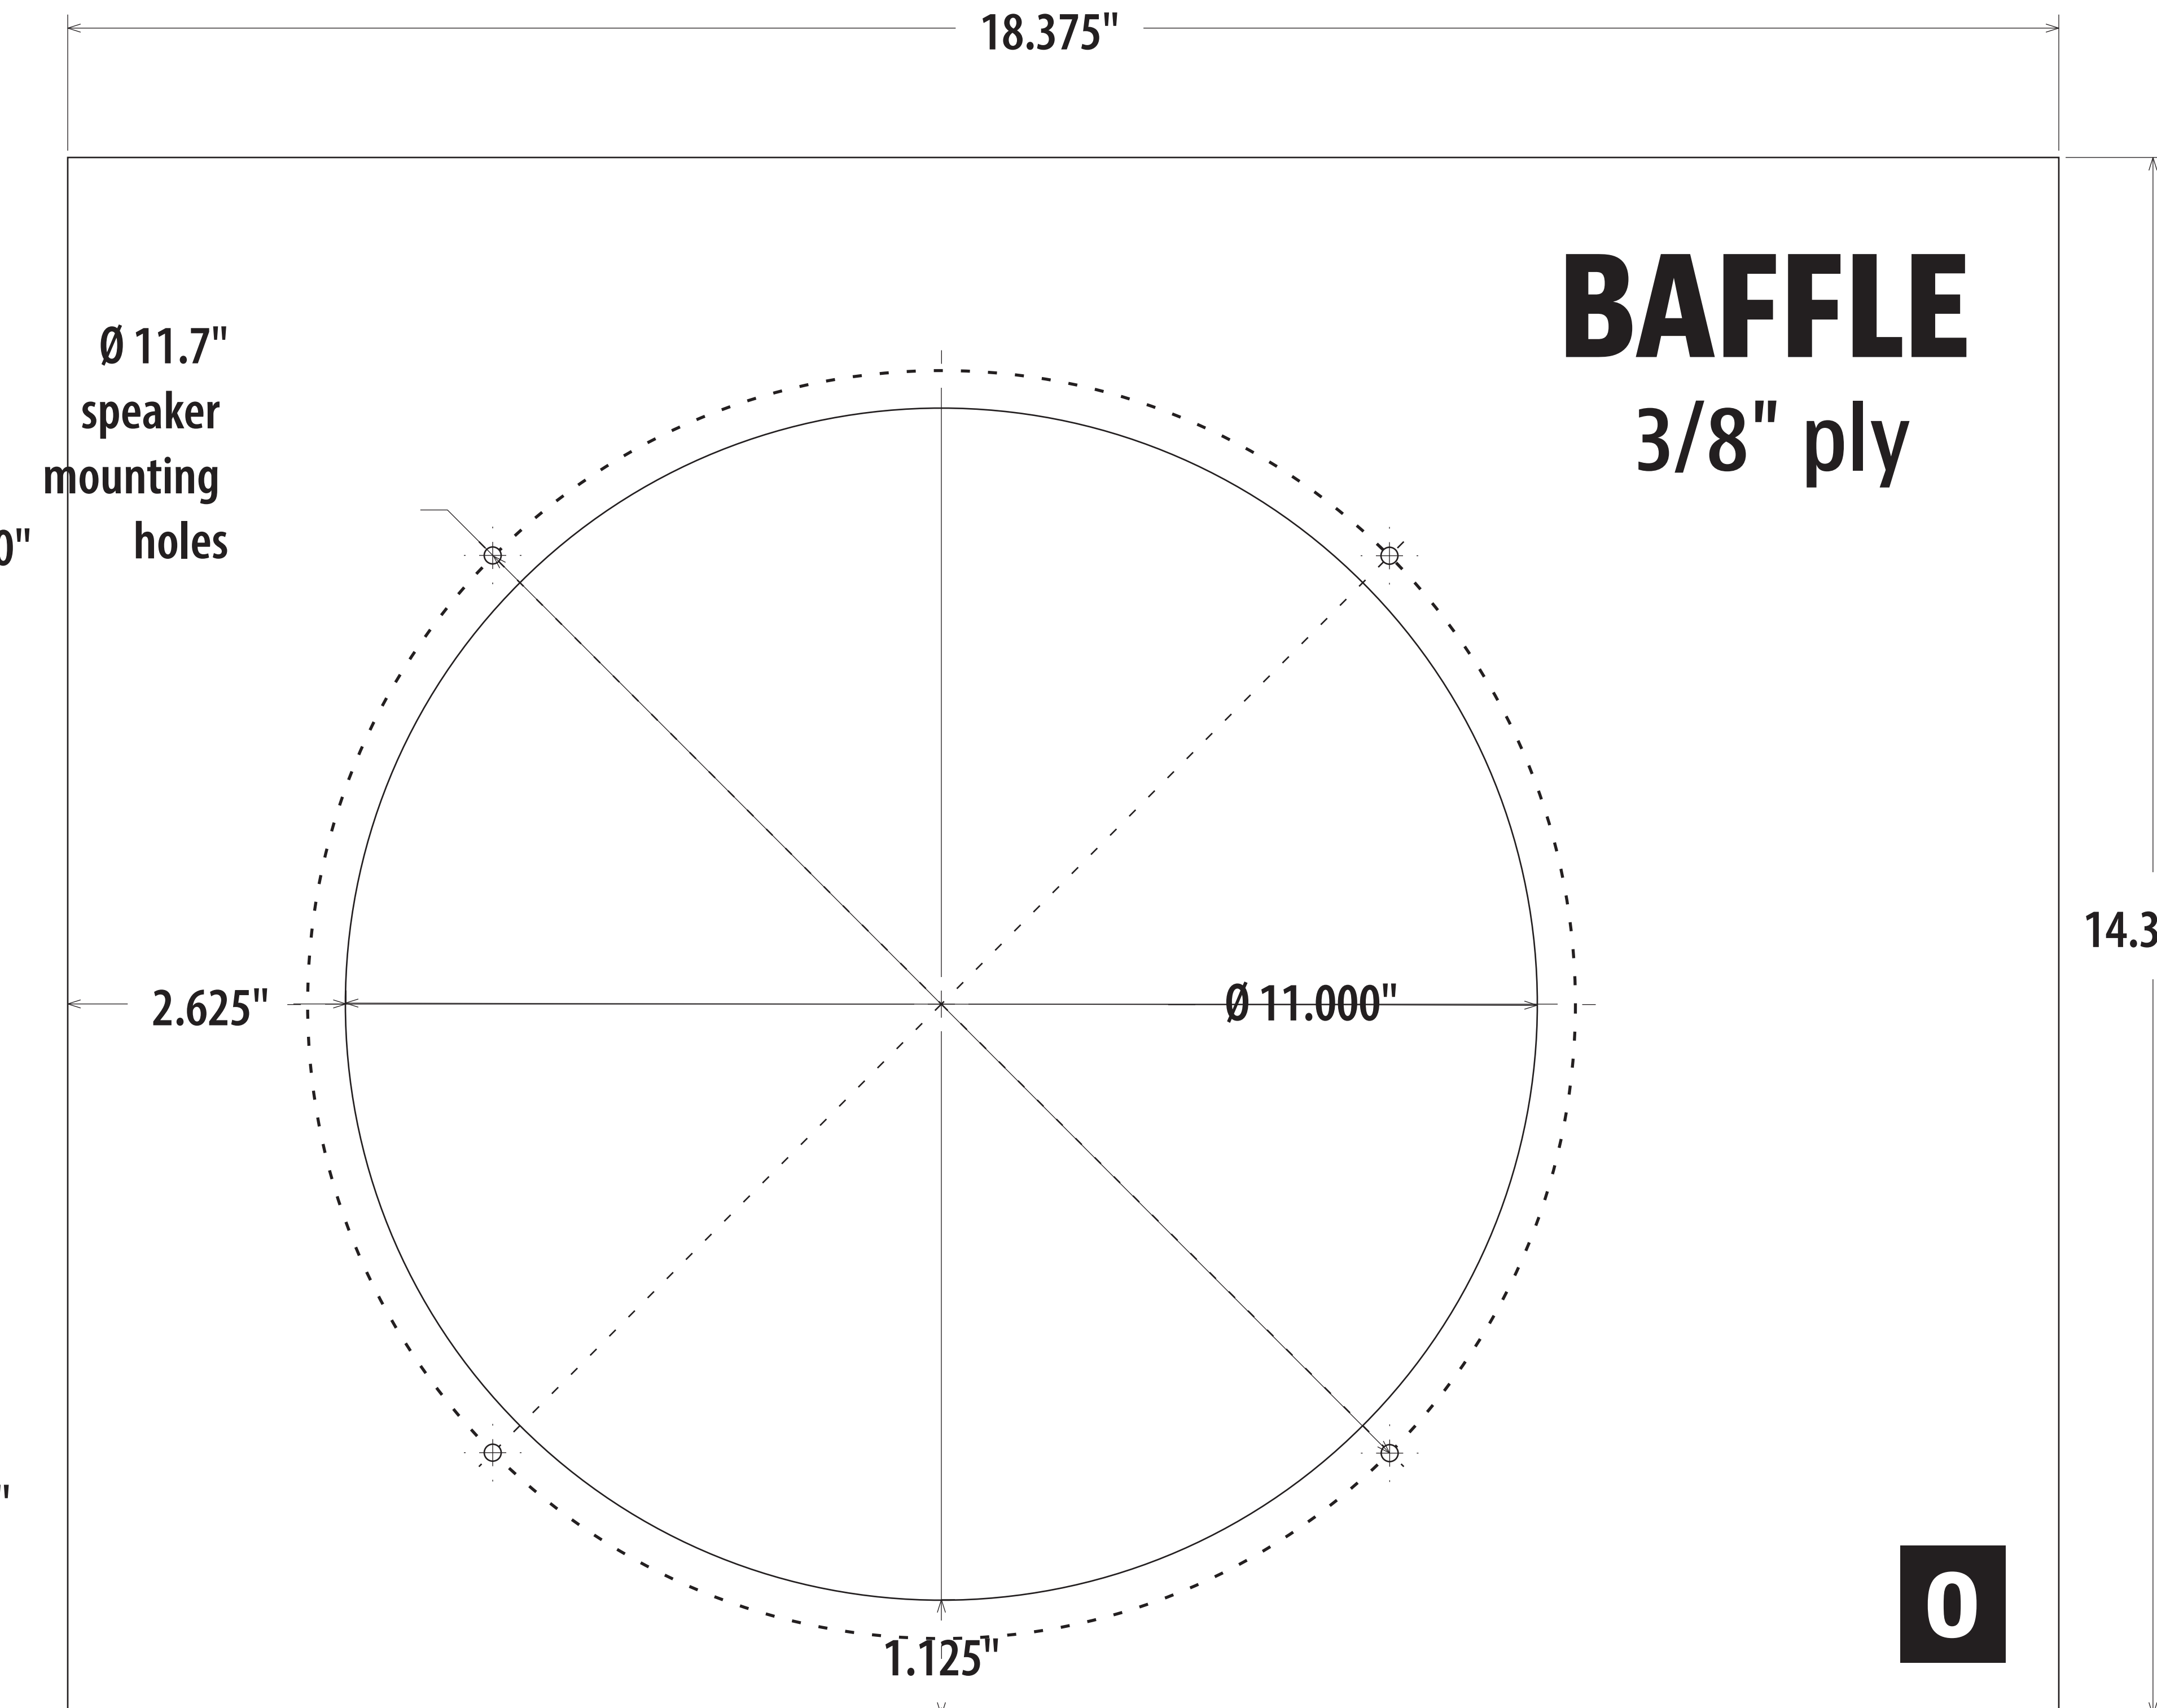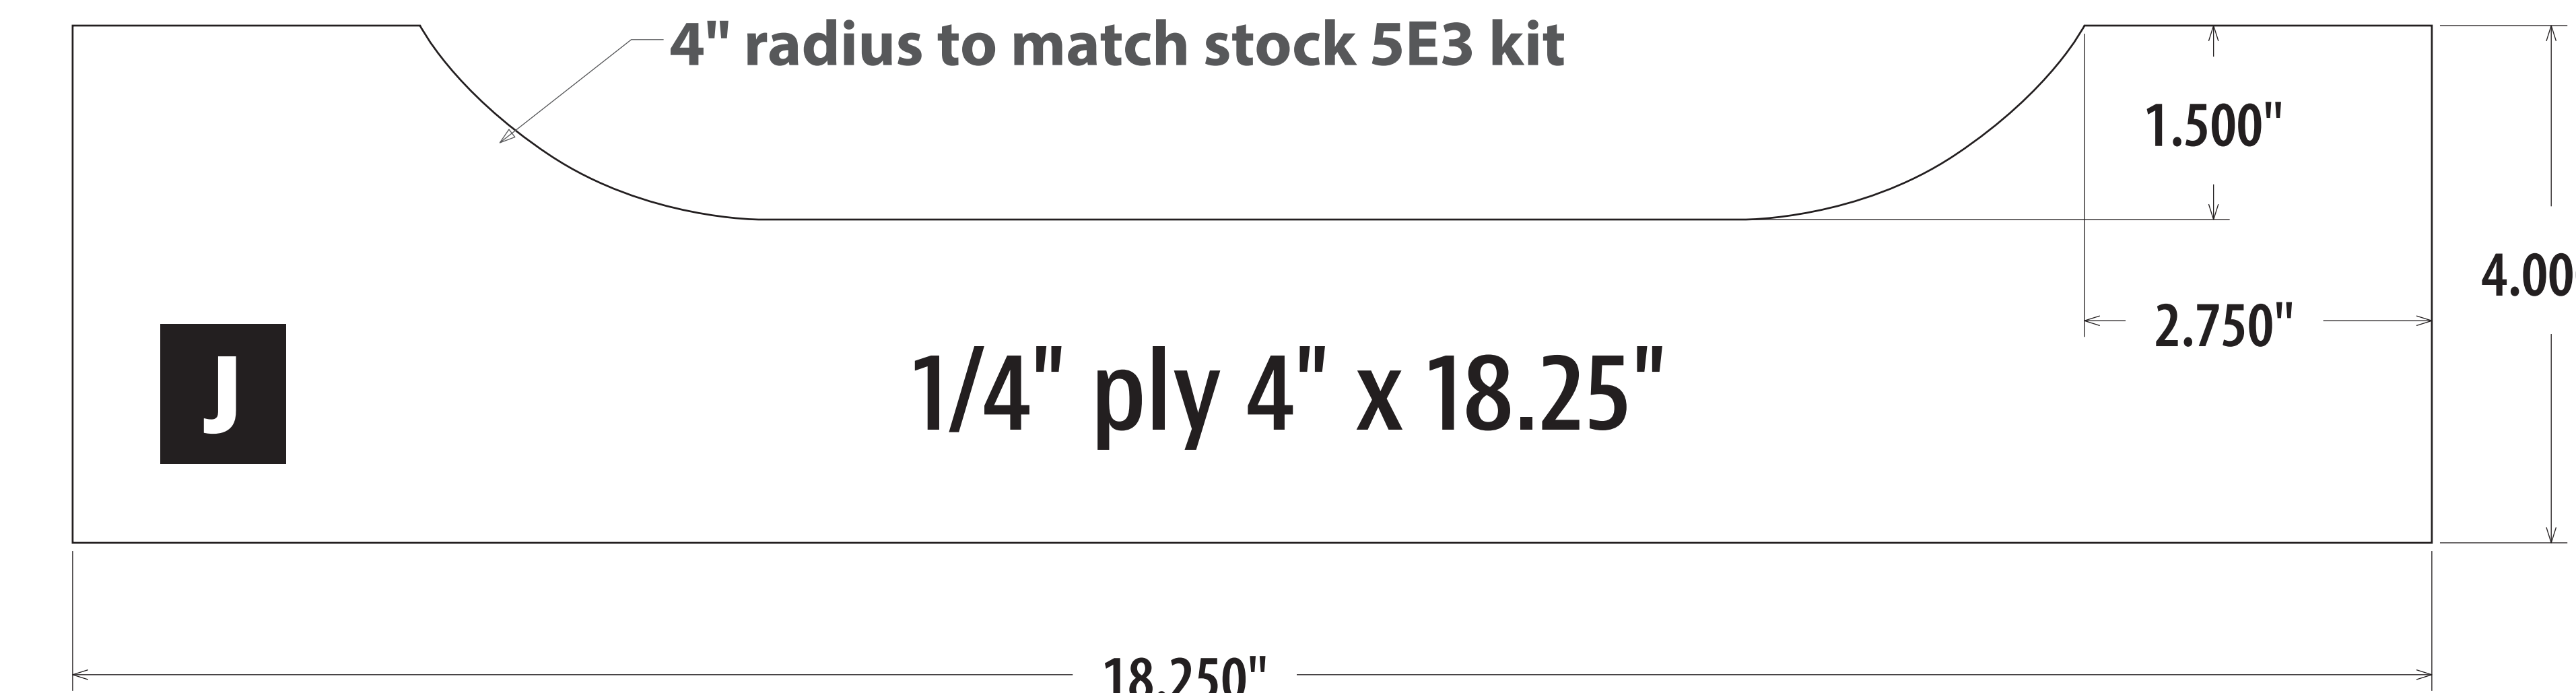

BAFFLE

3/8" ply




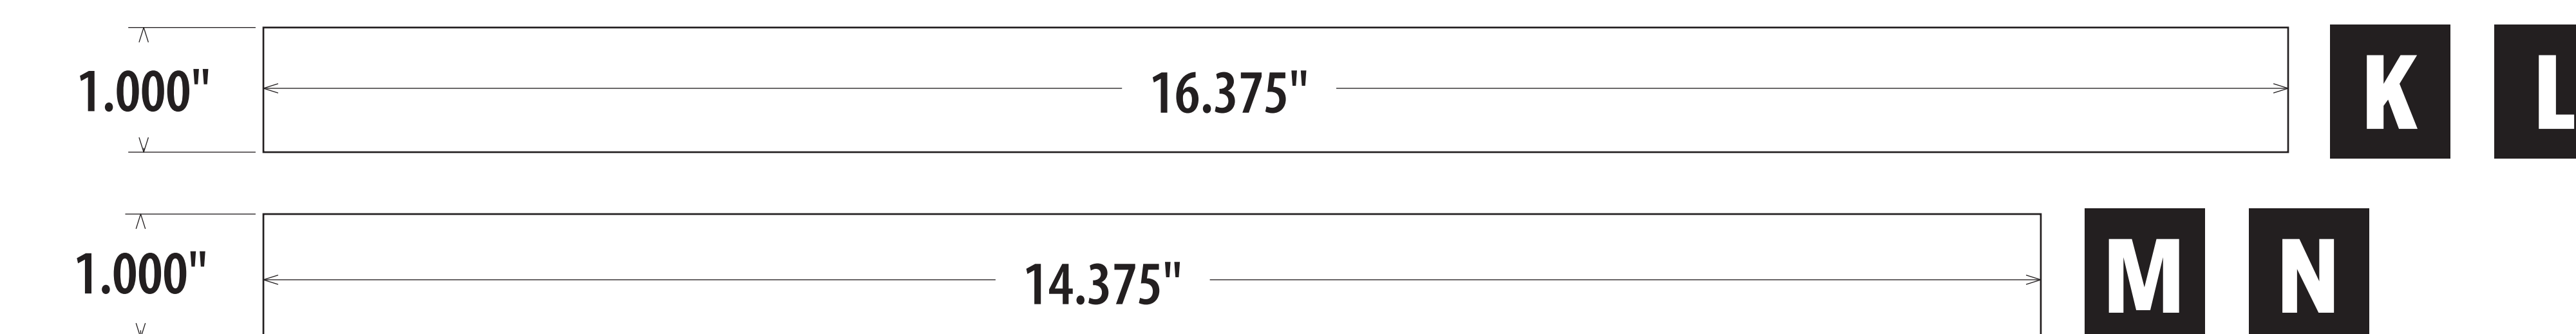


BAFFLE FILLER STRIPS 1/4" ply 2x each

All top, bottom, and sides: 3/4" pine, finger joined
Baffle and cab facia: 3/8" ply
Baffle spacers: 1/4" ply
Back panels: 1/4" ply

1x12" TWEED EXTENSION CAB WOOD CUT PATTERN


'57 TWEED 15W

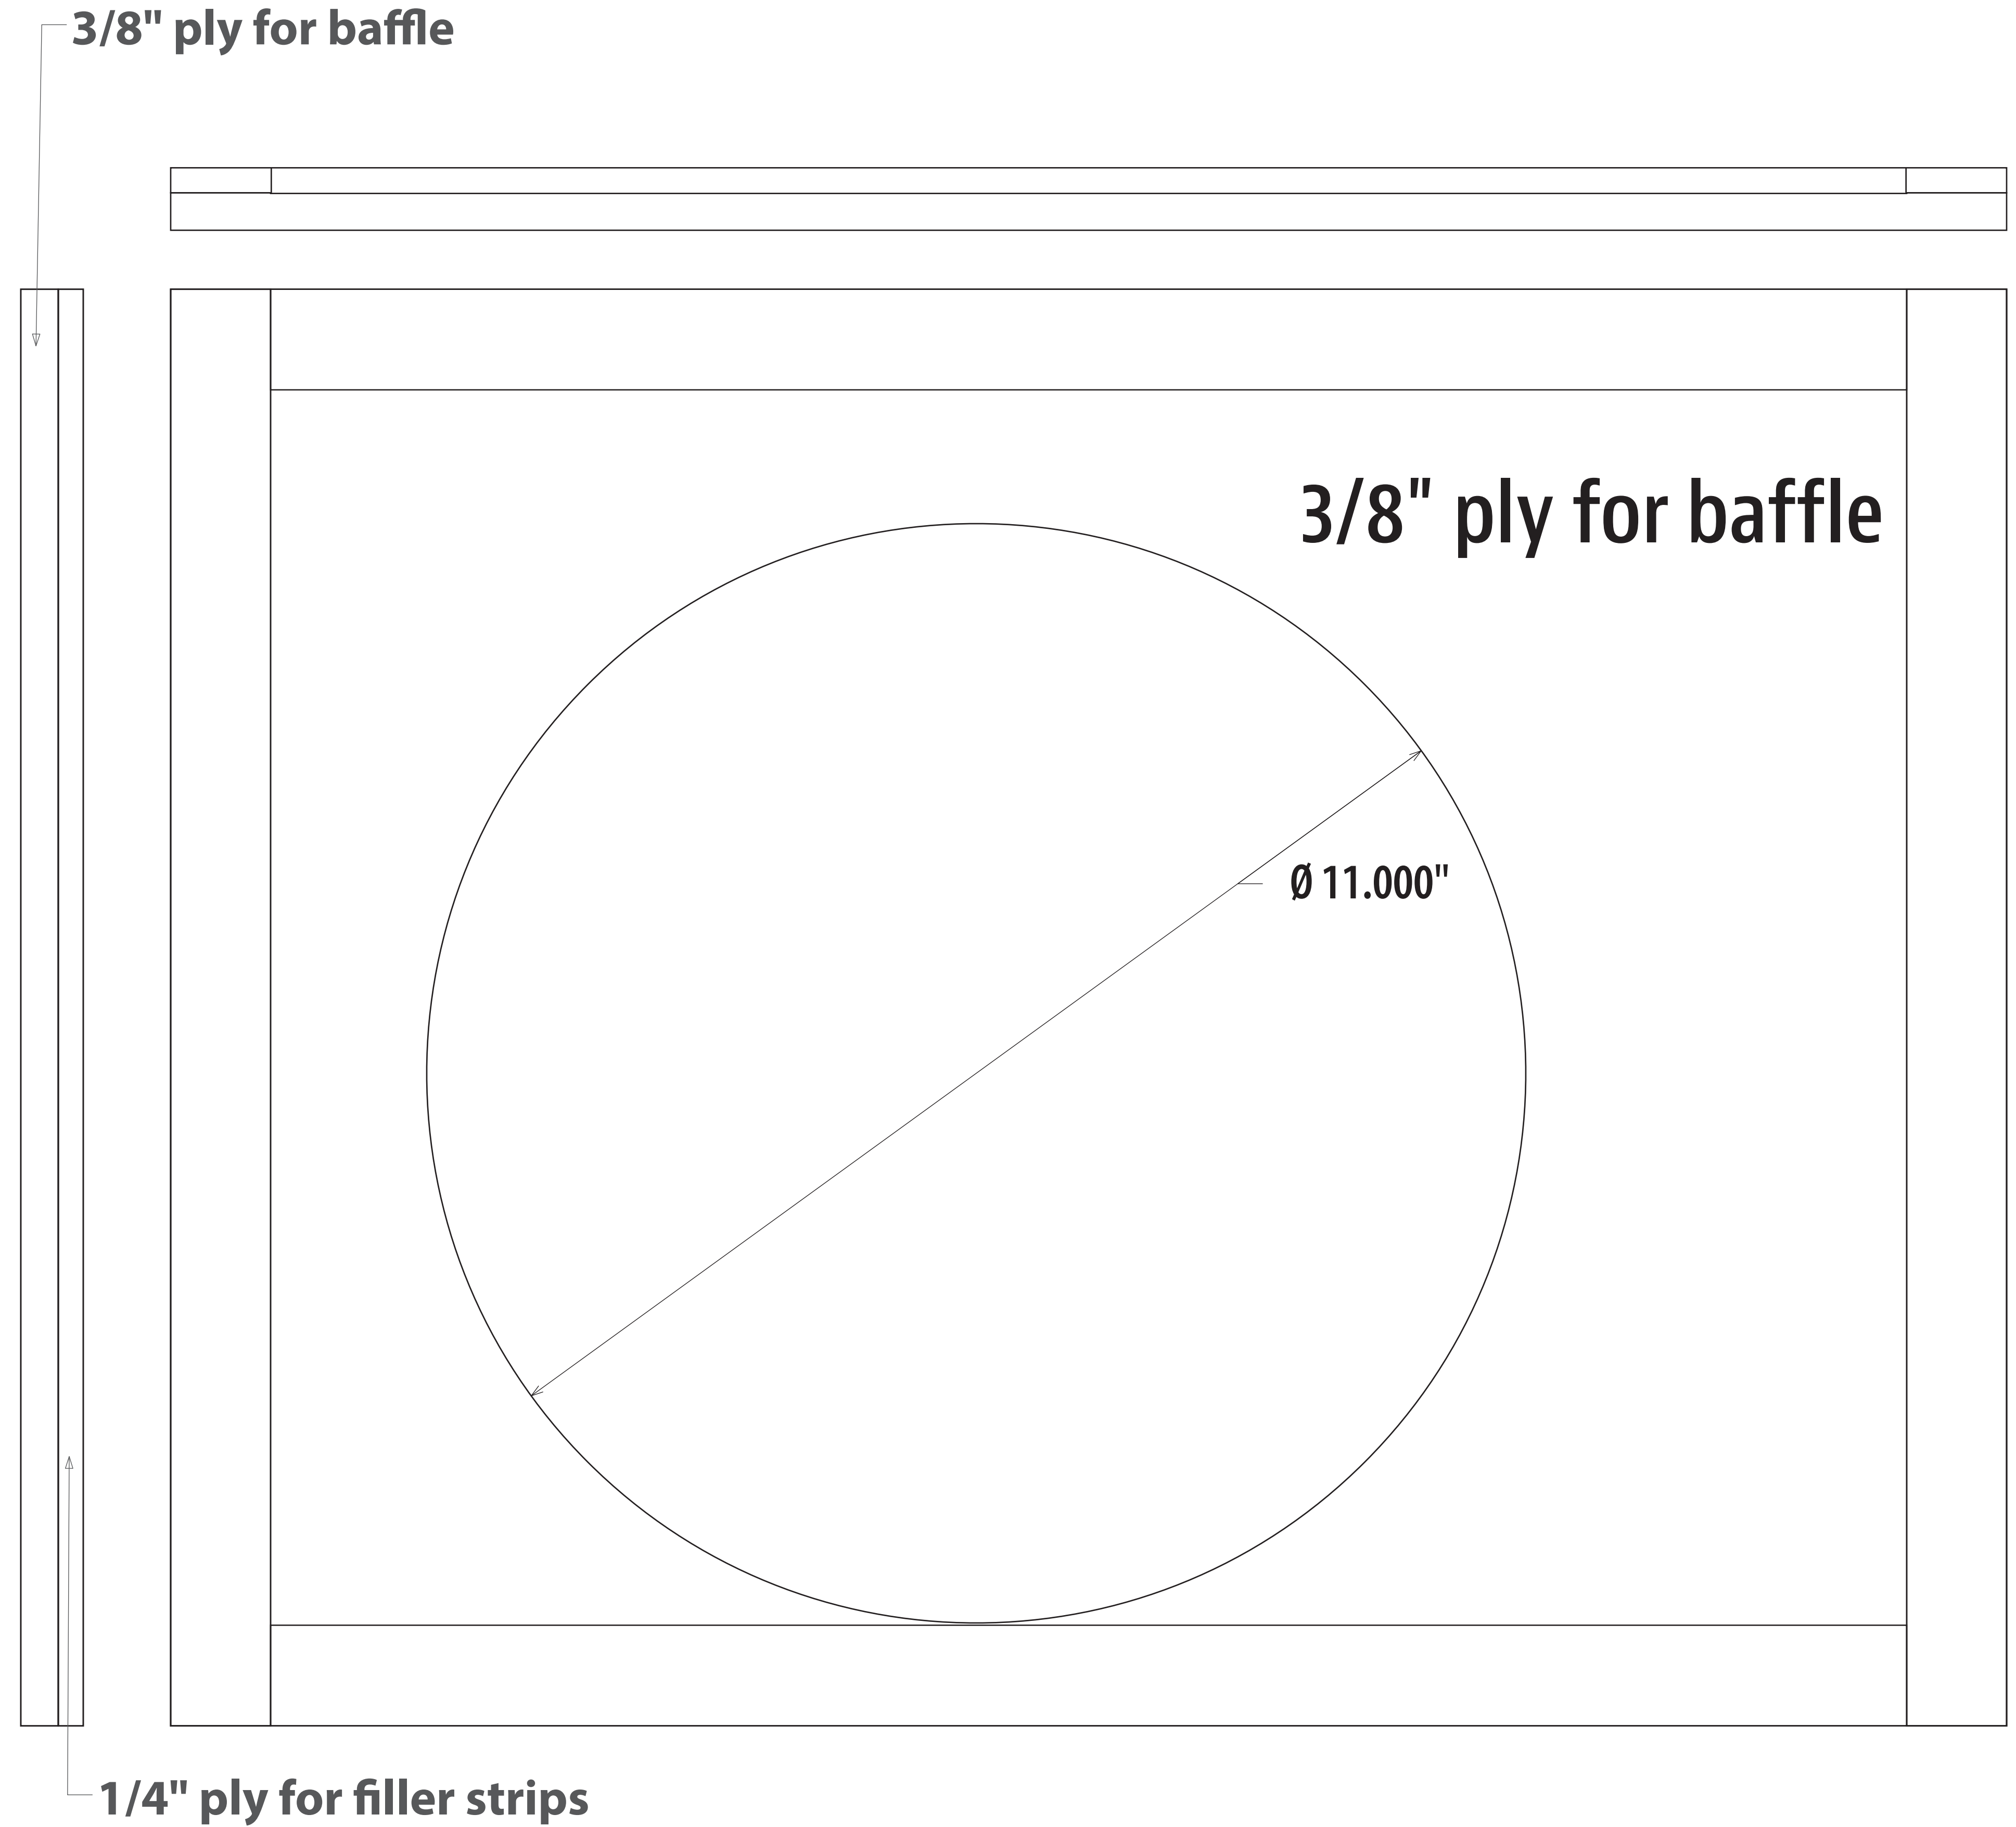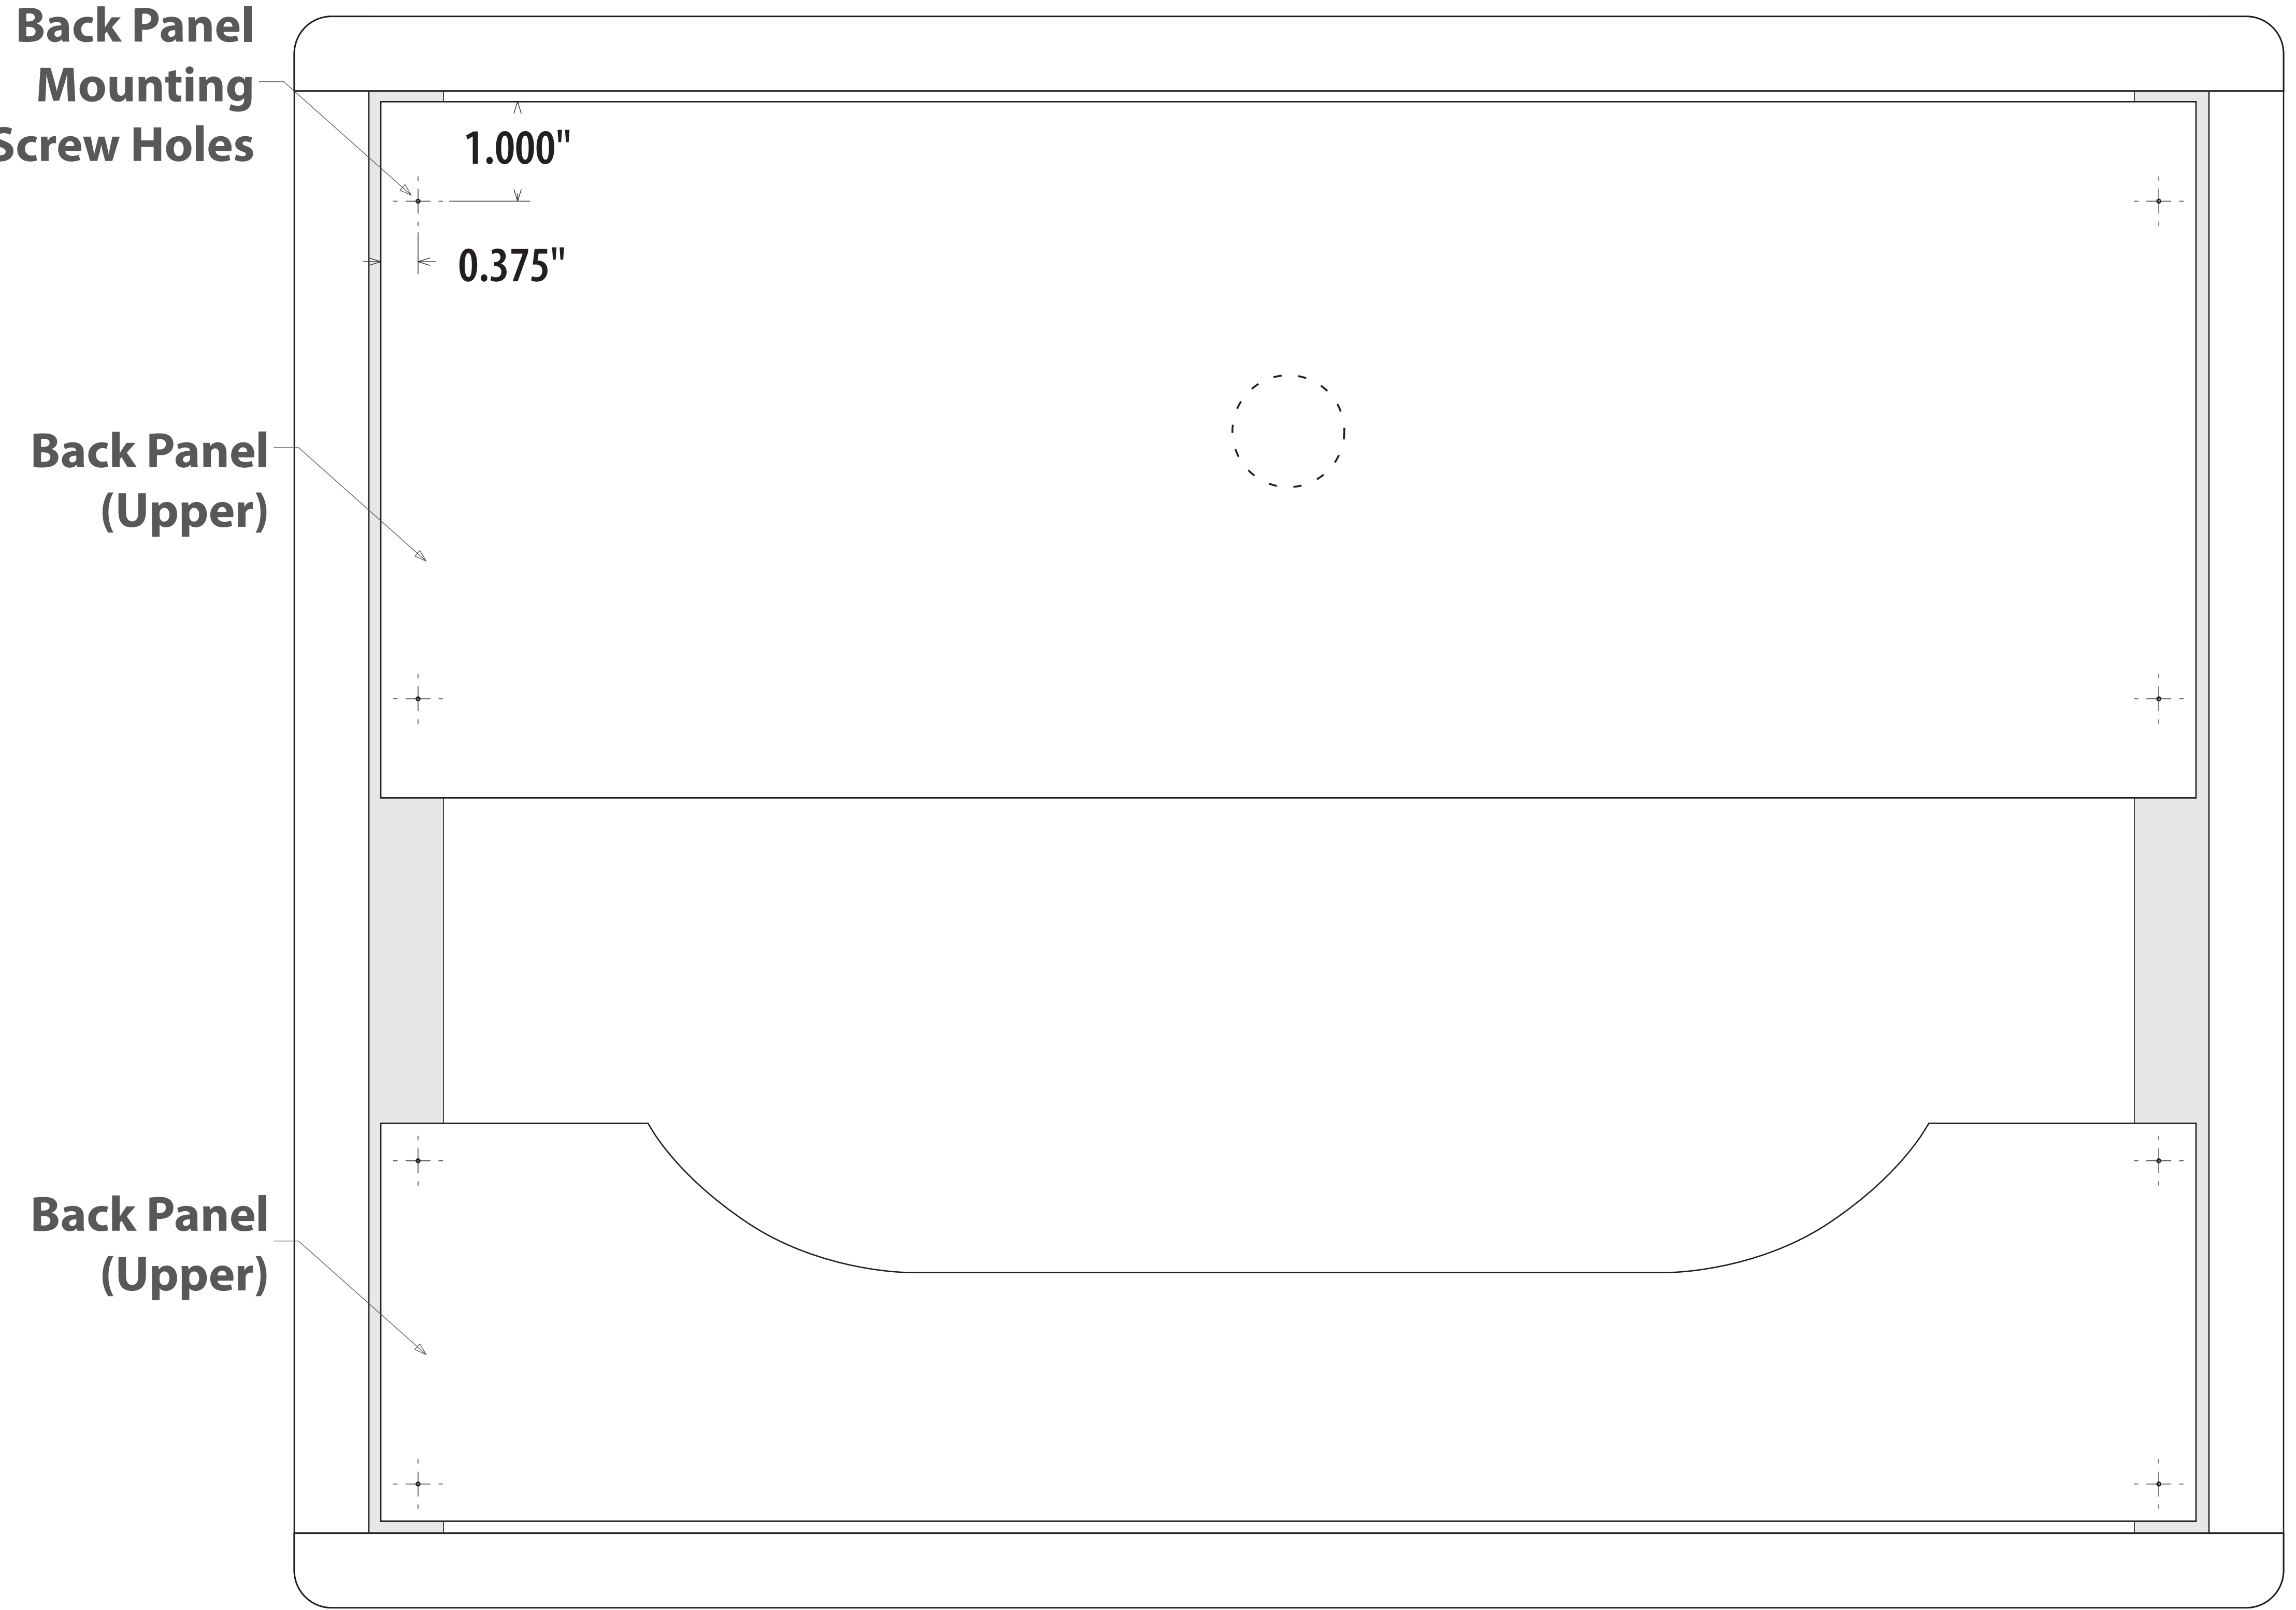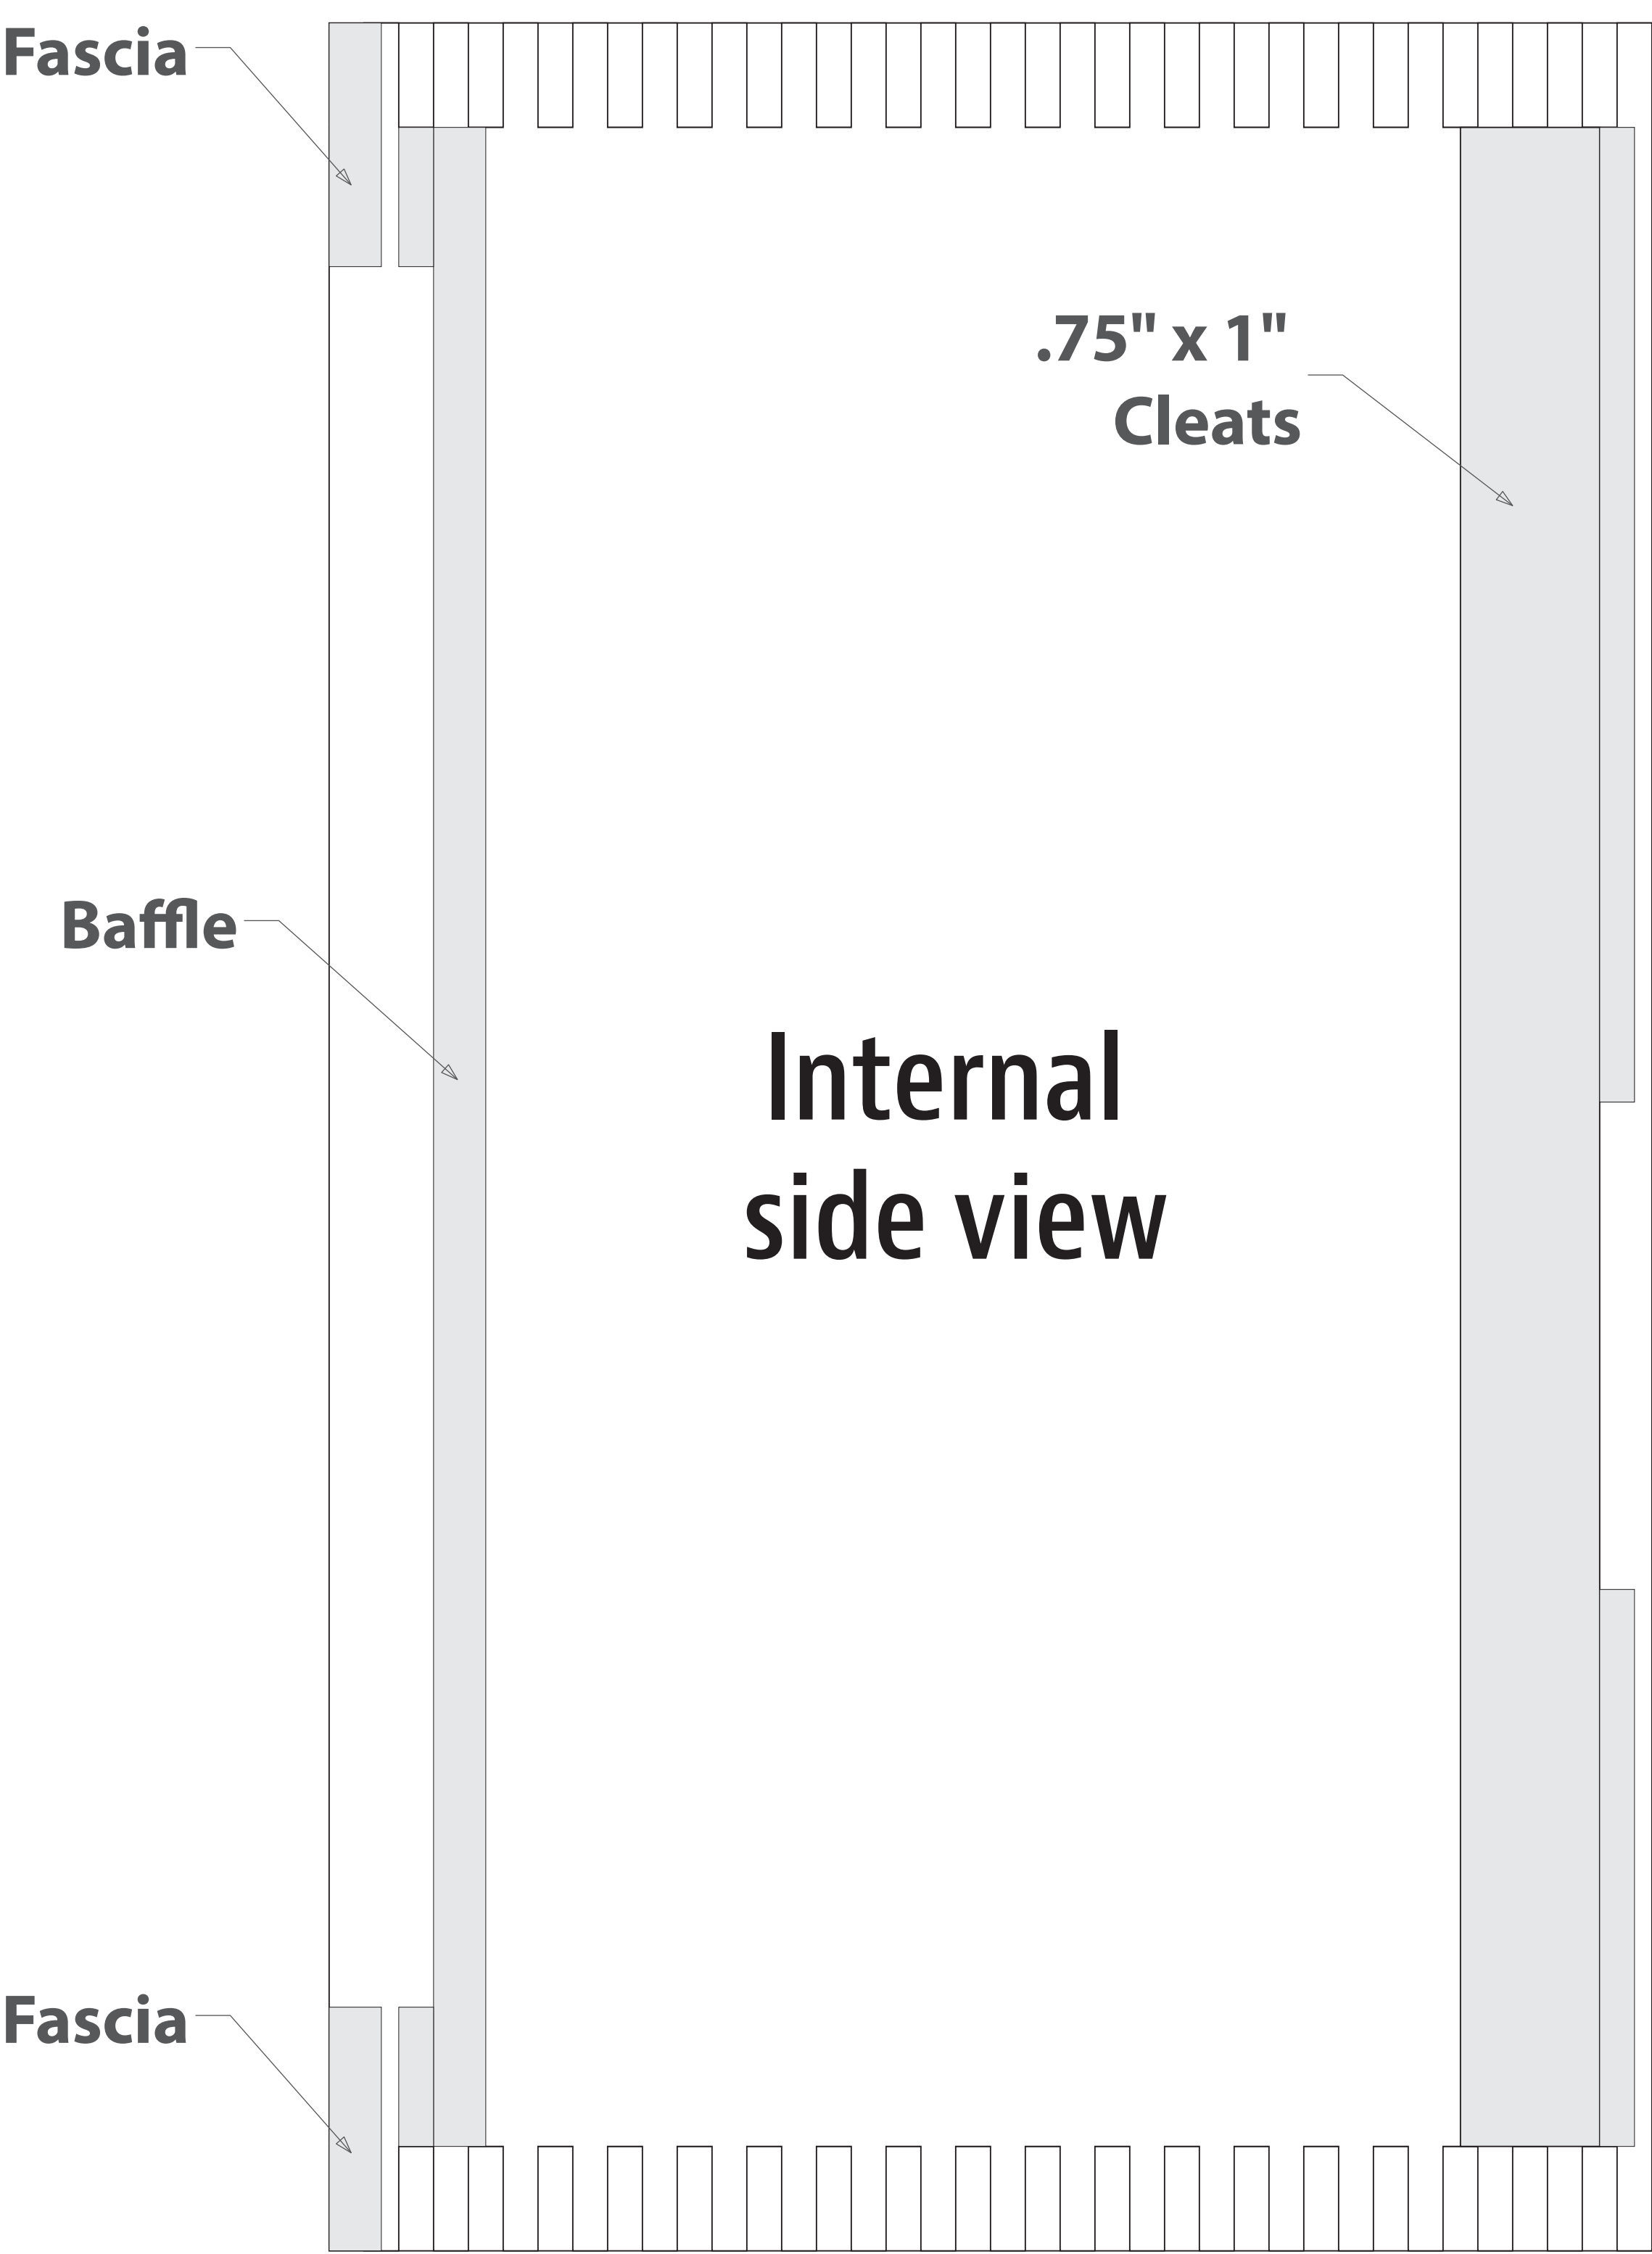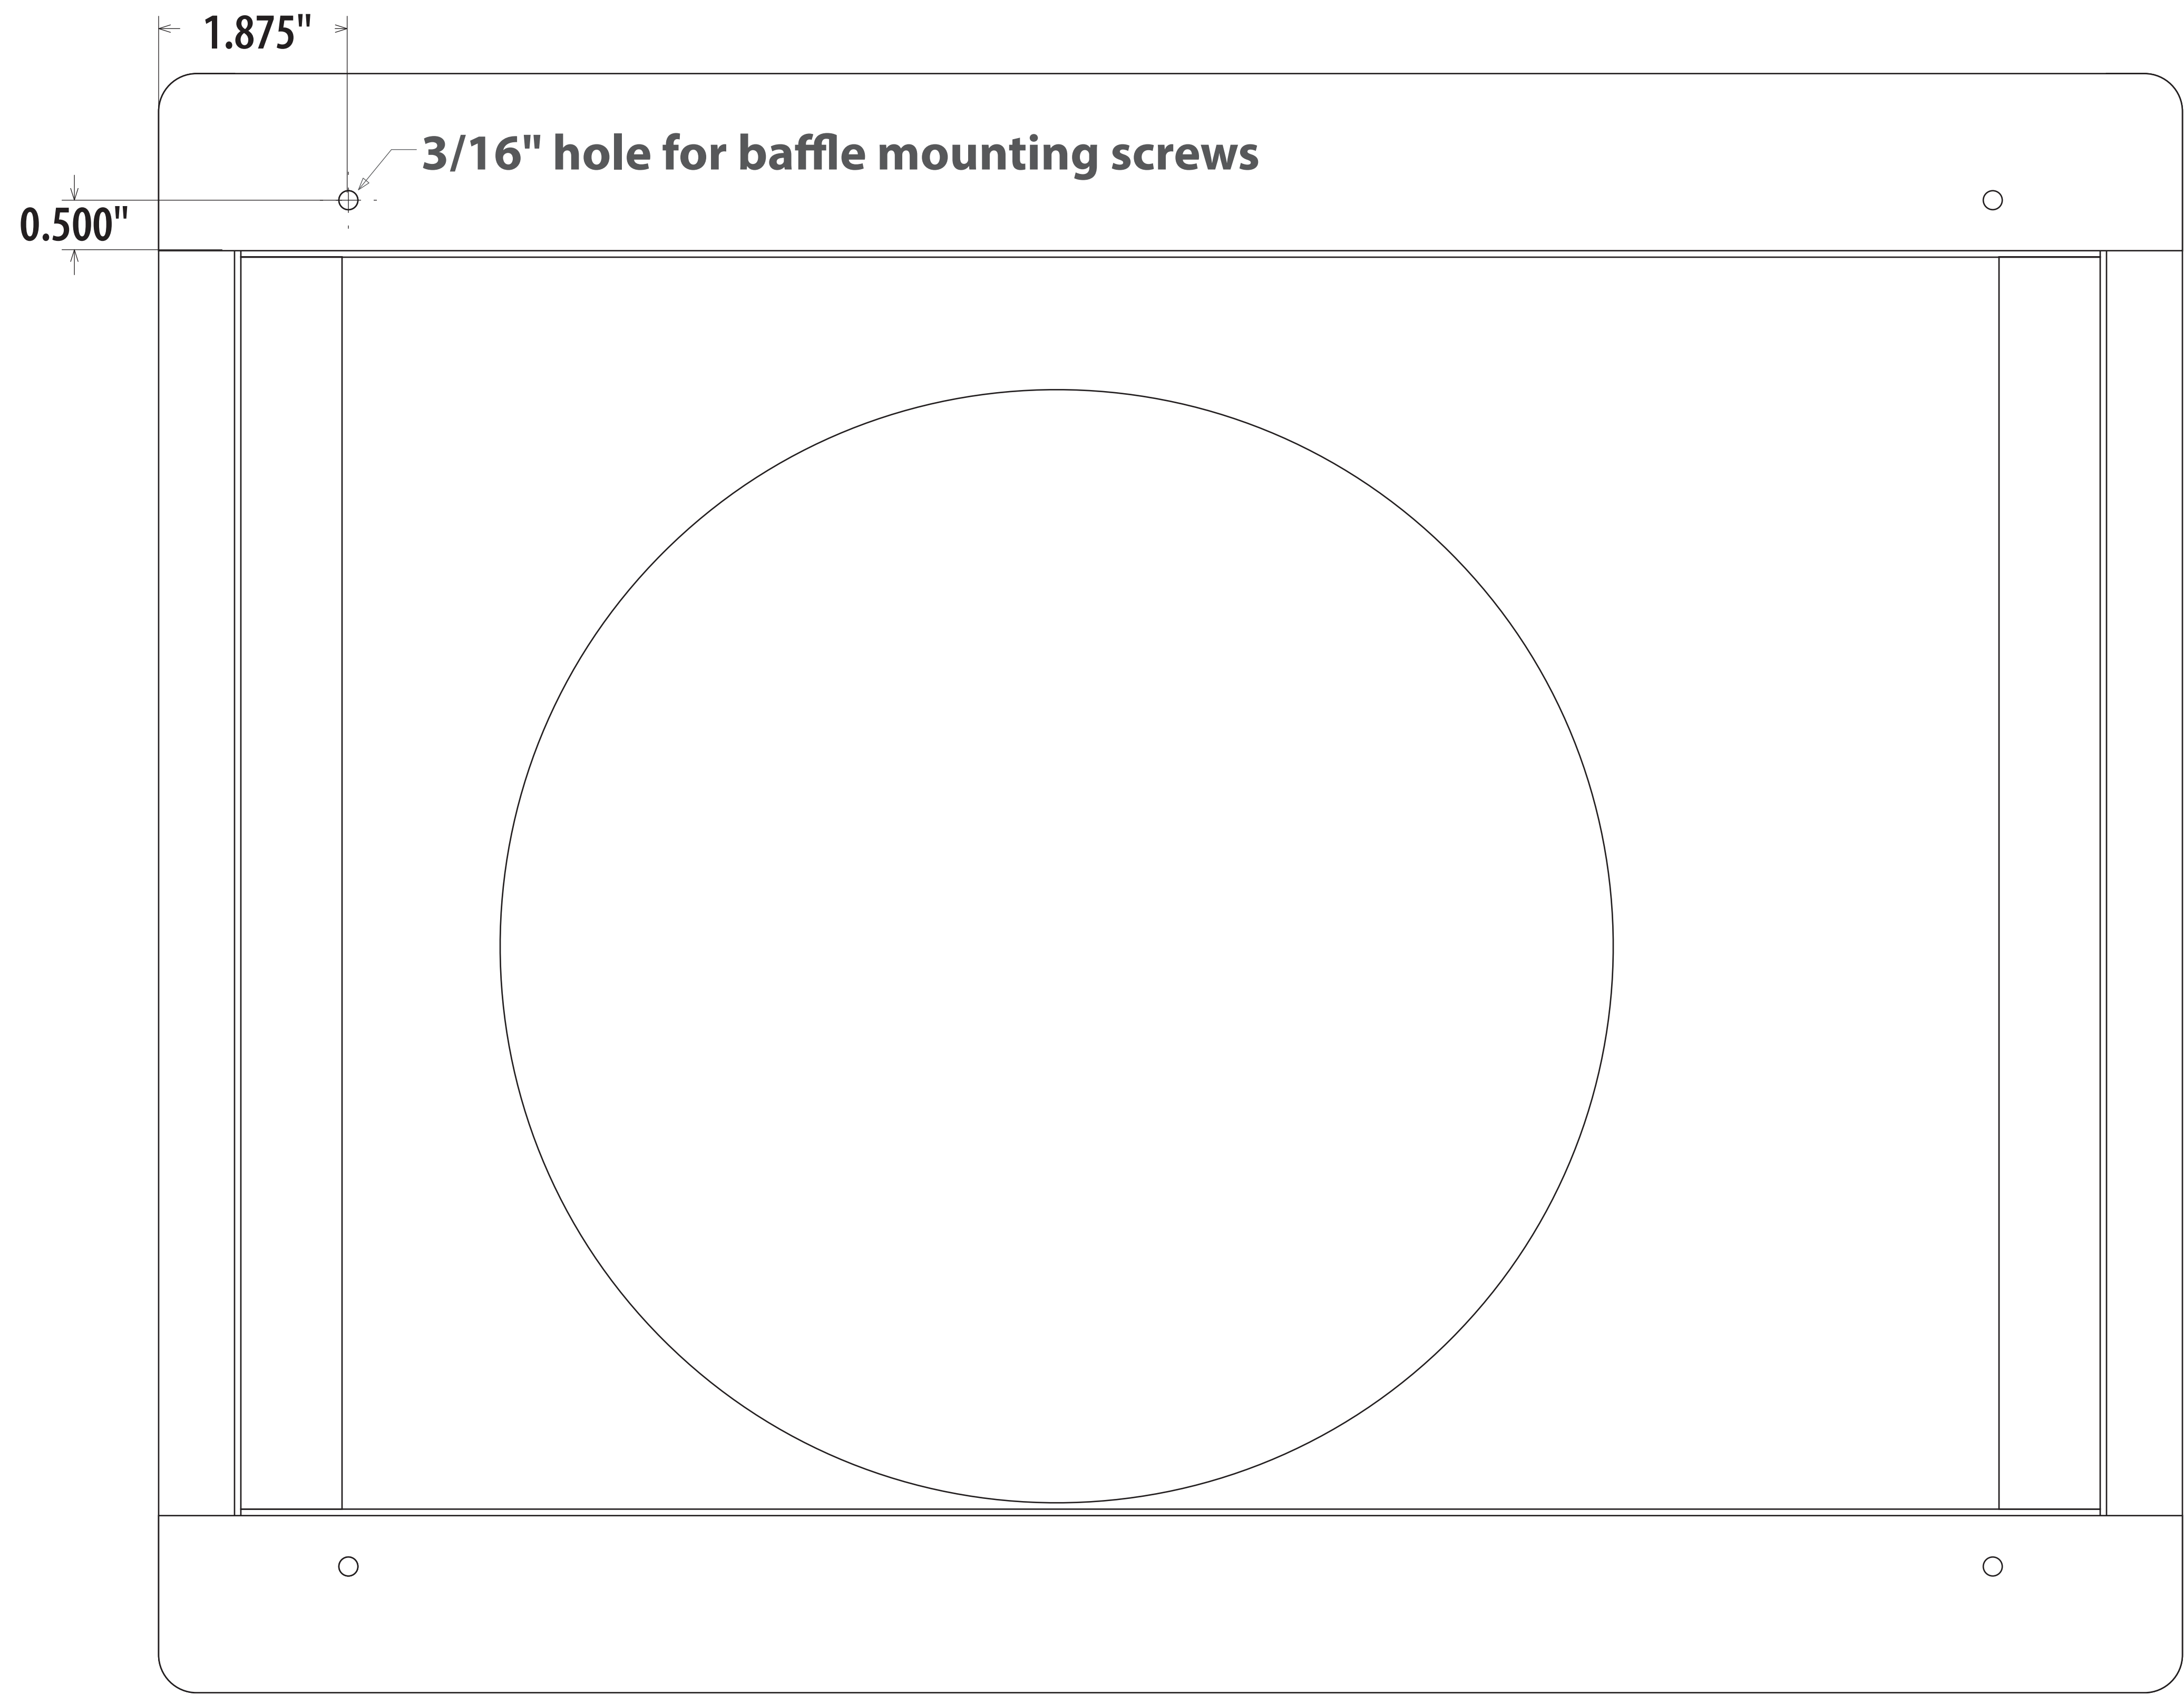

1x12" TWEED EXTENSION CAB ASSEMBLY DRAWINGS


'57 TWEED 15W

TOP of cab

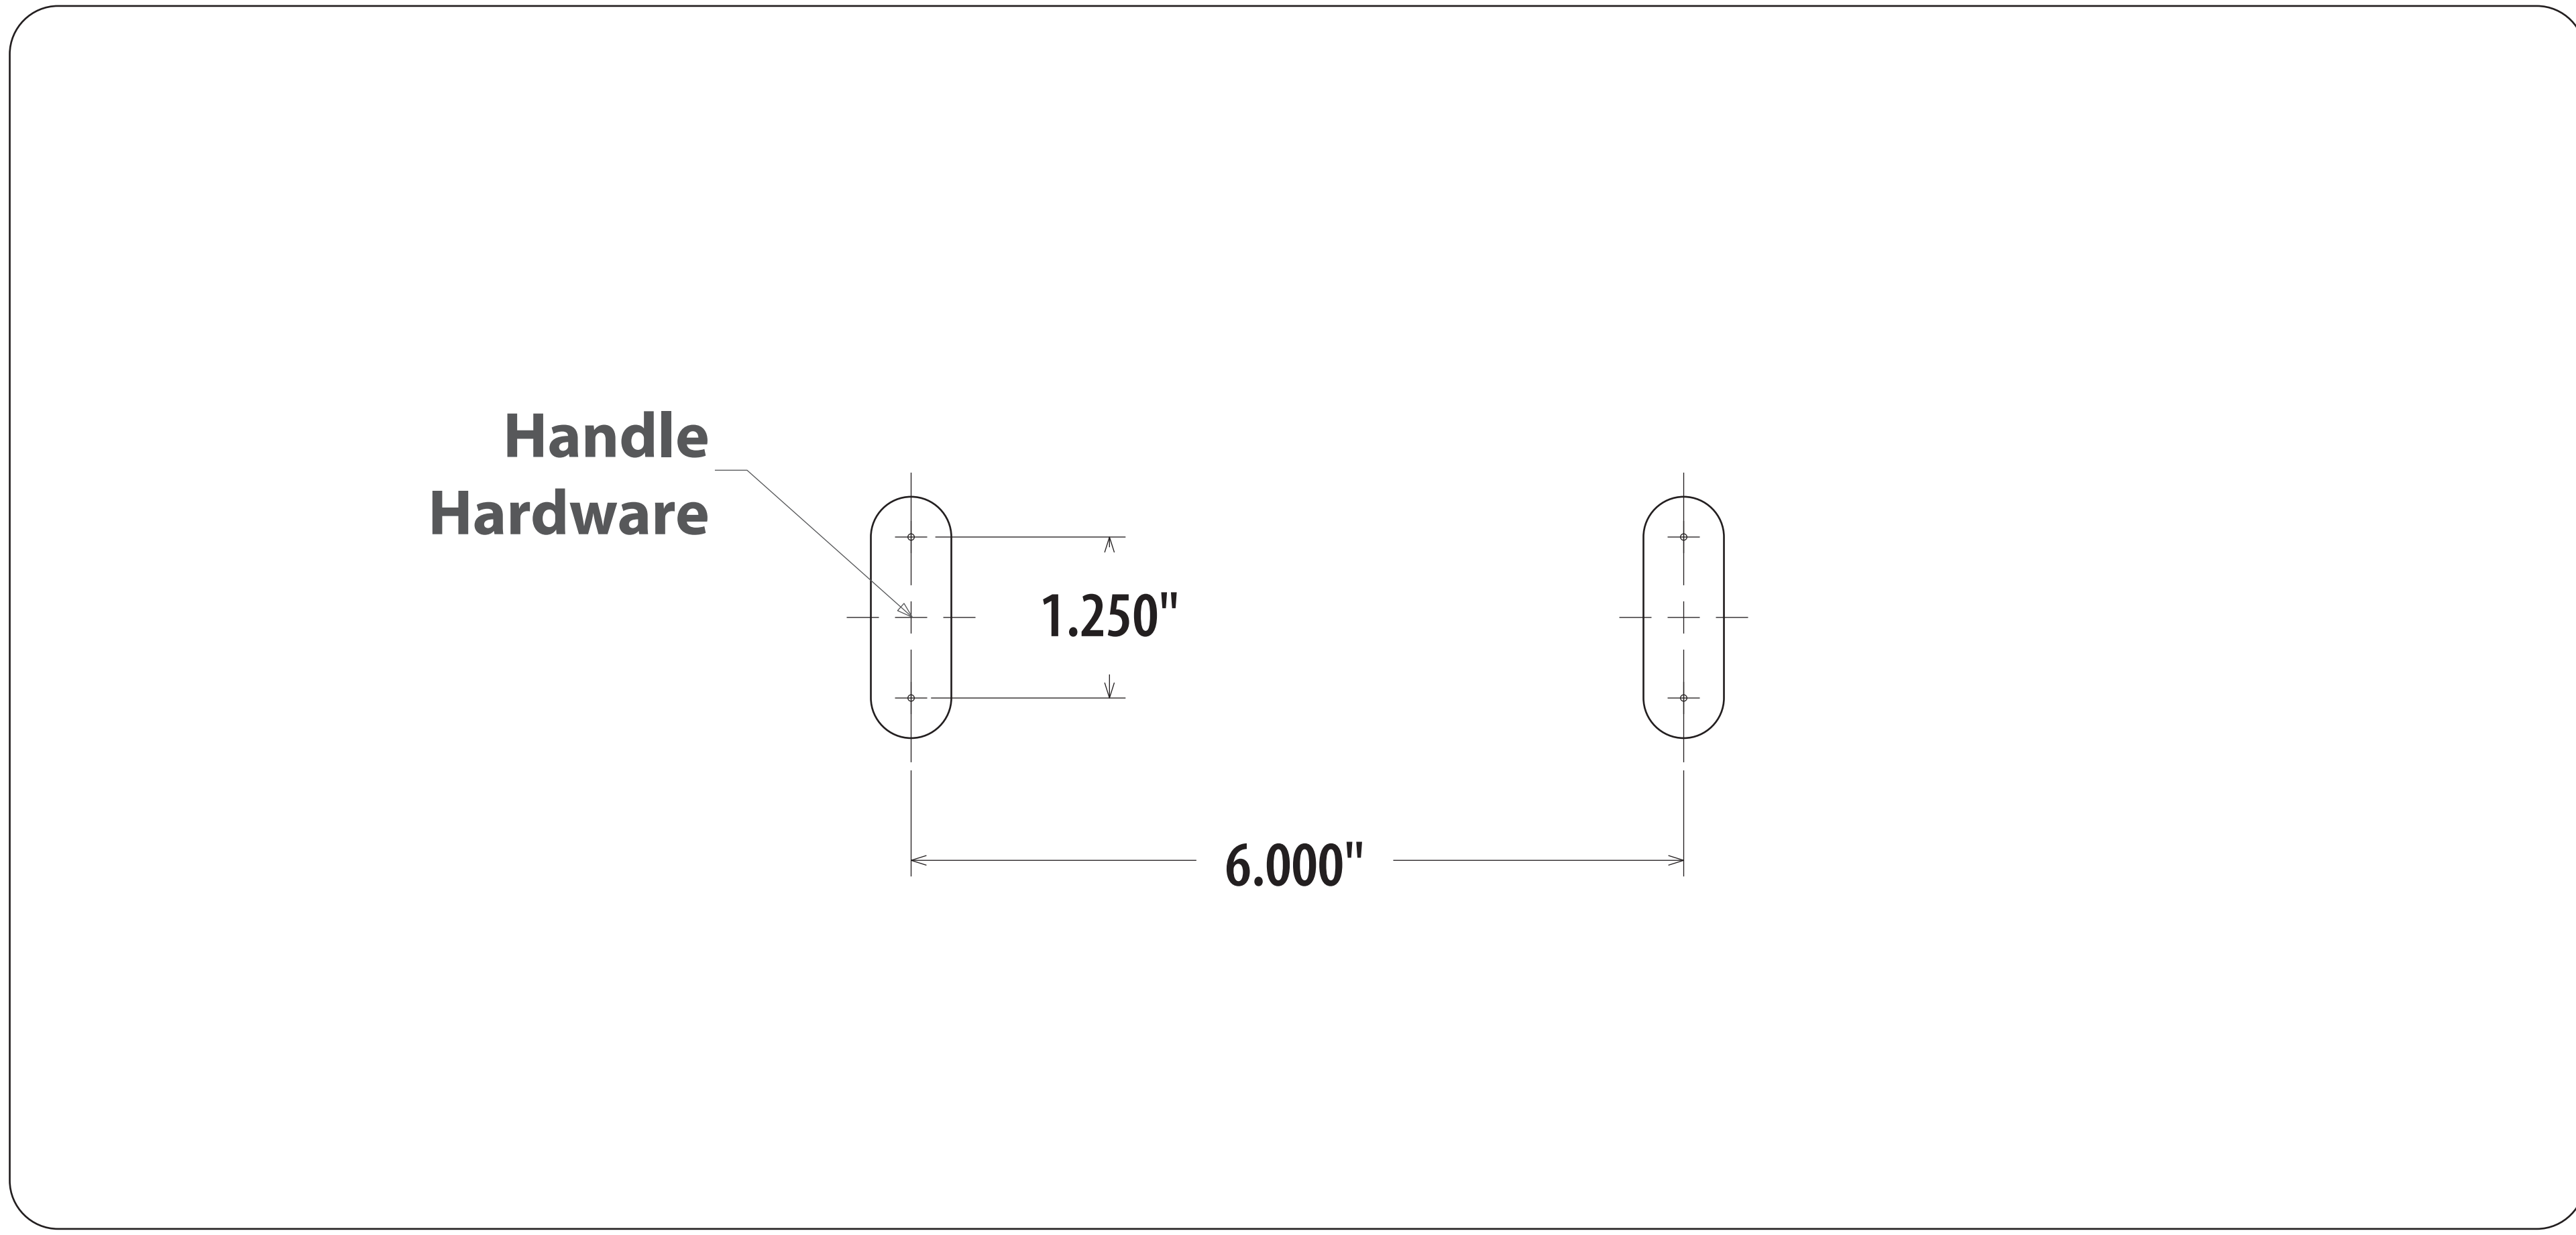

Handle placement

BOTTOM of cab

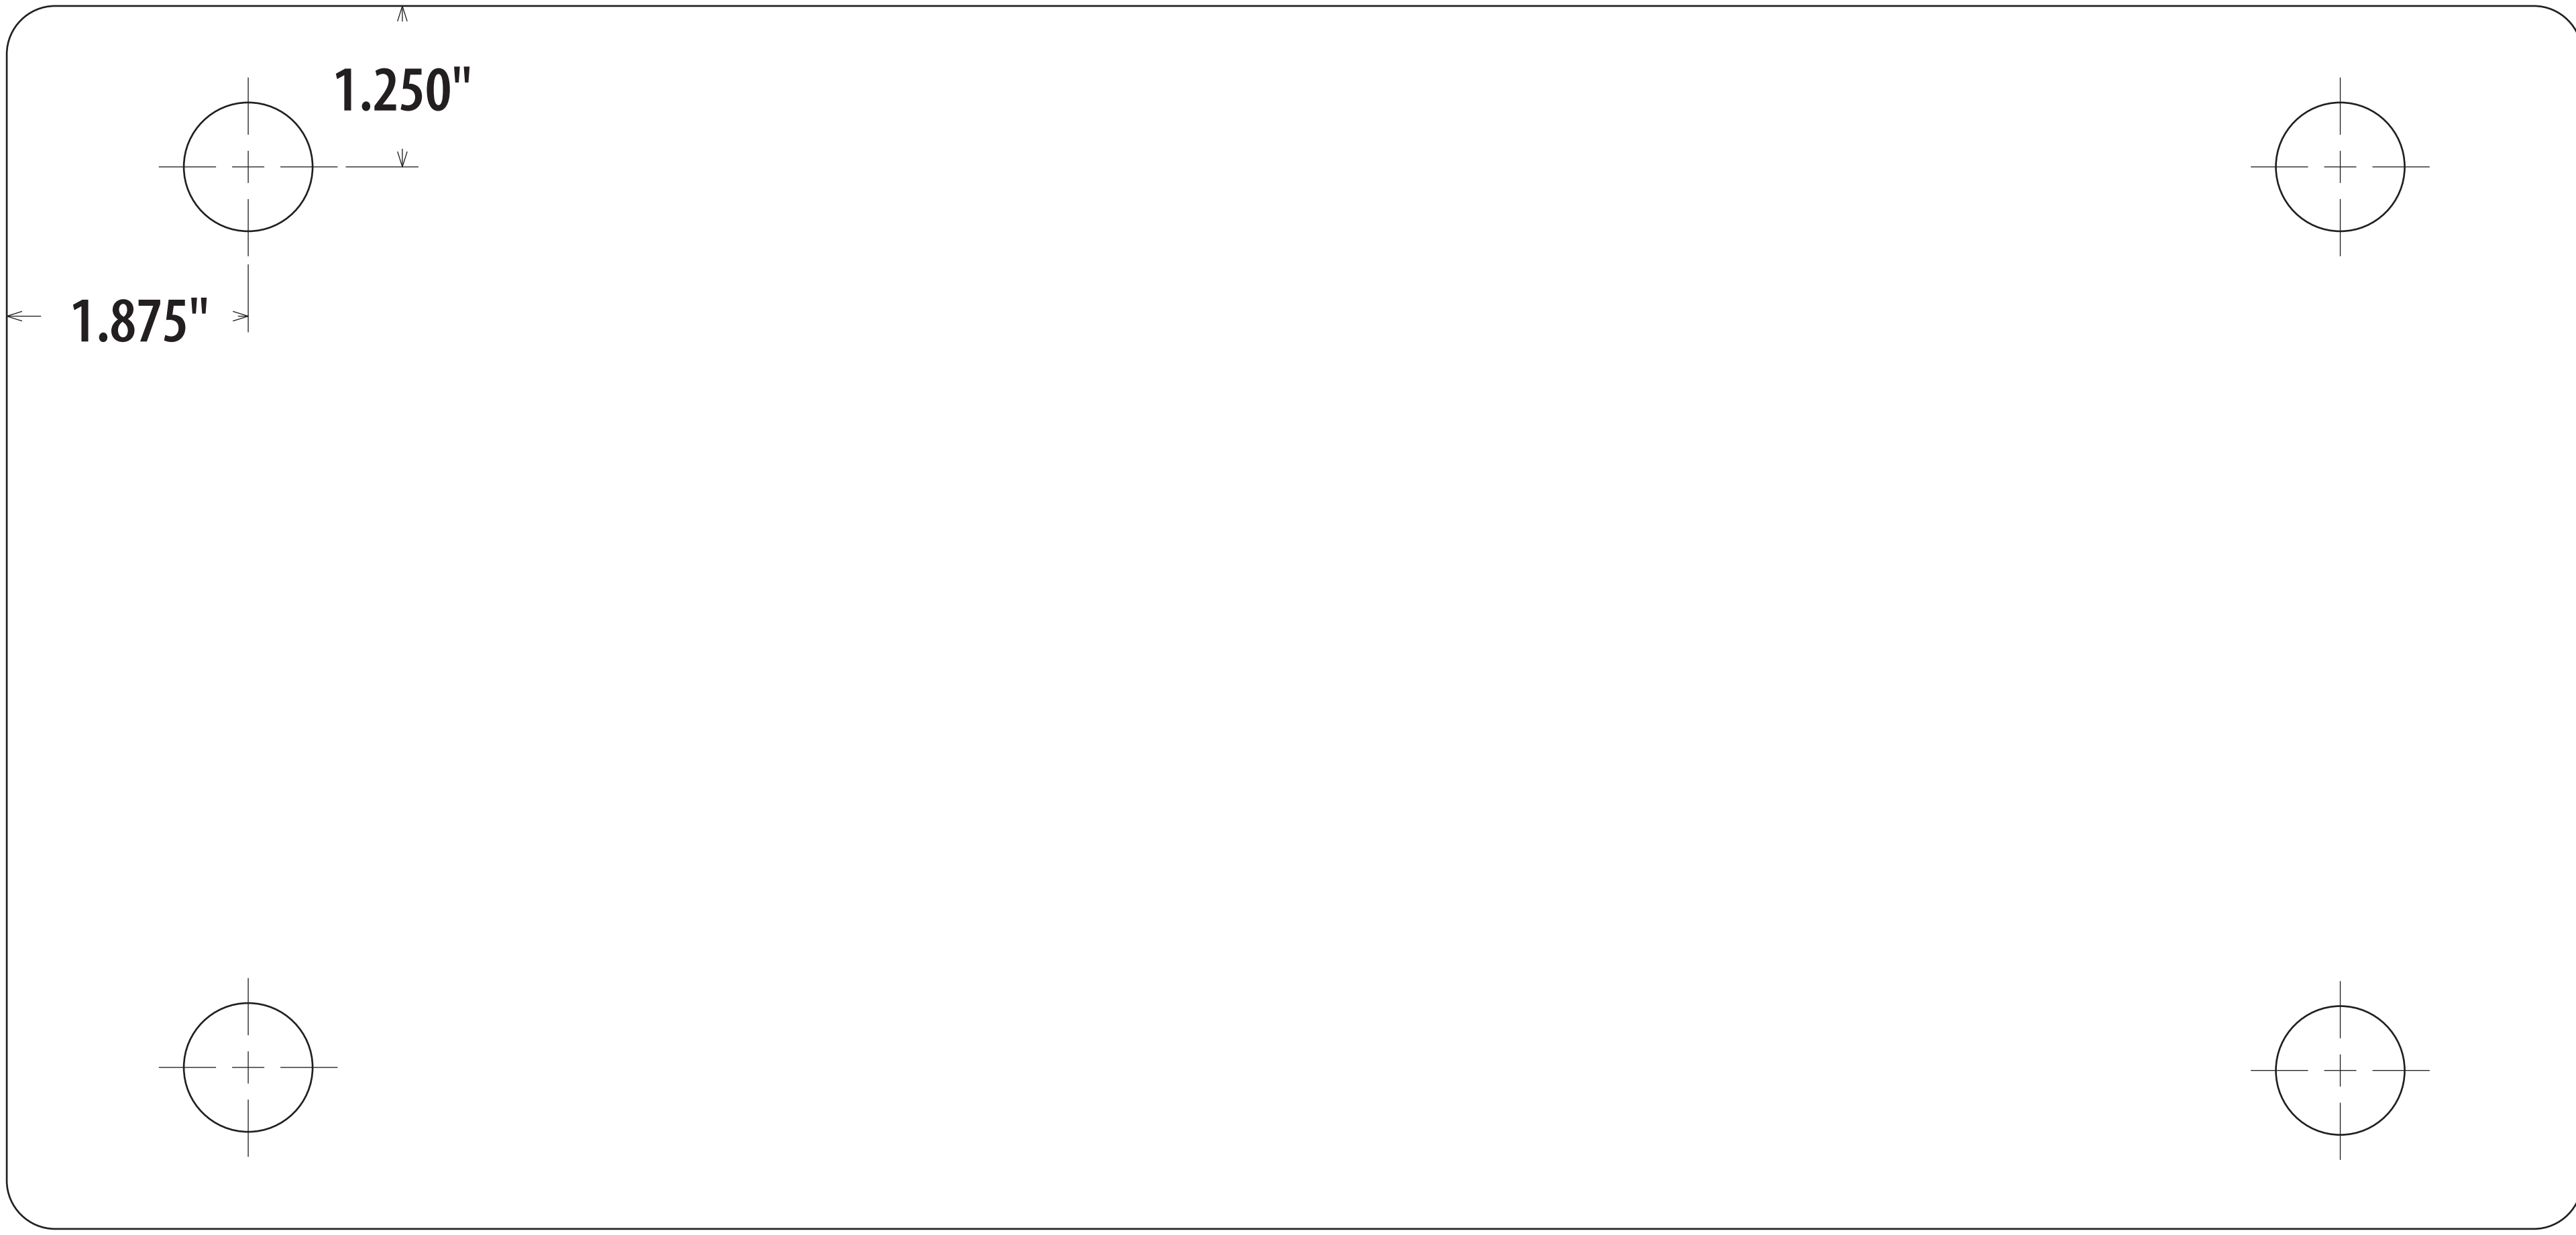

Amp Glides/Feet placement

1x12" TWEED EXTENSION CAB ASSEMBLY DRAWINGS
'57 TWEED 15W